

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.**

**1. SAFETY INSTRUCTIONS**

- ✓ Only use the drum truck on firm, level, unobstructed surfaces which are capable of supporting the truck and drum.
- ✗ Do not overload the drum truck - maximum capacity is **250kg**.
- ✗ Do not allow others to ride on the drum truck.
- ✗ Do not use on tarmacadam. The drum truck must only be used on a concrete surface.
- ✓ Replace or repair damaged parts. *Use only recommended parts. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Use a qualified person to lubricate and maintain the truck. **DO NOT** use brake fluid to top up hydraulic unit. Use Sealey hydraulic oil only.
- ☐ **WARNING!** Failure to comply with these instructions may result in loss of load, damage to drum truck or other property and/or personal injury.

**2. INTRODUCTION & SPECIFICATION**

Less manual effort required as hydraulic lifting frame clamps drum, then raises it off the ground for simple manoeuvring and relocation. Cradle is fitted with two smooth rolling, heavy-duty wheels and one castor with brake. Suitable for 205 litre drums.

**Specification**

Drum Size . . . . .	205 litres	Lifting Height. . . . .	345mm
Weight . . . . .	42kg	Width . . . . .	780mm

**3. OPERATING INSTRUCTIONS**

**Note:** Numbers in brackets refer to item numbers in Fig.1.

**3.1. Lifting a Drum:**  
 Turn the release valve (5) fully clockwise. Move the truck to bring the lifting frame (1) in contact with the drum. Repeatedly depress the handle (4) to raise the lifting frame so that the drum is between the clamp tooth (2) and the retaining bracket (8) on the lower part of the lifting frame. Ensure that the retaining plate rests **below** the top rim of the drum as in Fig 2. Pull the clamp tooth operating lever (3) towards you. Ensure that the clamp tooth (2) securely holds the drum. Continue depressing the truck handle (4) until the drum is off the ground.

**WARNING:** Ensure that the drum position is as low as possible prior to moving the truck.

**3.2. Transportation:**  
 Pull/push the truck handle (4) to move the raised drum. Turn the handle to change direction of movement.

**WARNING:** To avoid damage to the truck or the drum **DO NOT** turn the release valve rapidly.



**3.3. Releasing a Drum:**  
**SLOWLY** turn the release valve (5) anticlockwise and lower the drum until it stands firmly on the ground. Push the clamp tooth operating lever (3) away from you to release the clamp tooth (2).

**4. MAINTENANCE**

- 4.1 Regularly check the truck chassis and front wheels for rigidity. Ensure that the rear castor is firmly secured to the chassis.
- 4.2 Regularly check the clamp tooth for wear. Replace when necessary.
- 4.3 Regularly check the truck's connecting components such as retaining pins, nuts and washers for lubrication and/or wear.
- 4.4 If the performance of the unit degrades, it may be necessary to top up the oil (see lubrication point Fig 3.2.) If performance is not improved, it may be necessary to bleed the system (see bleed point at Fig 3.1.)

**6. DECLARATION OF CONFORMITY**

**Declaration of Conformity** We, the sole importer into the UK, declare that the product listed below is in conformity with the following standards and directives.

<p><b>Hydraulic Drum Truck</b>  <b>Model DH01</b>          98/37/EC Machinery Directive          93/68/EEC Marking Directive</p>		<p>The construction file for this product is held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.</p> <p>Signed by Mark Sweetman  21 September 2005 For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Products.</p>
--	---	---

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

