



INSTRUCTIONS FOR:
HYDRAULIC DRUM TRUCK
MODEL No: **DH01.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions and maintained properly, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to Instruction Manual



Wear Safety Footwear

1. SAFETY

- ✓ Only use the drum truck on firm, level, unobstructed surfaces which are capable of supporting the truck and drum.
- ✗ Do not overload the drum truck - maximum capacity is **250kg**.
- ✗ Do not allow others to ride on the drum truck.
- ✗ Do not use on tarmac/adam. The drum truck must only be used on a concrete surface.
- ✓ Replace or repair damaged parts. Use only genuine parts. Non-genuine parts may be dangerous and will invalidate the warranty.
- ✓ Use a qualified person to lubricate and maintain the truck. **DO NOT** use brake fluid to top up hydraulic unit. Use Sealey hydraulic oil only.
- ☐ **WARNING!** Failure to comply with these instructions may result in loss of load, damage to drum truck or other property and/or personal injury.

2. INTRODUCTION

Less manual effort required as hydraulic ram clamps drum, then raises it off the ground for simple manoeuvring and relocation. Cradle is fitted with two smooth rolling, heavy-duty wheels and one castor with brake. Suitable for 205ltr drums.

3. SPECIFICATION

Drum Size	205 litres	Lifting Height	335mm
Weight	42kg	Width	780mm

4. OPERATION

Note: Numbers in brackets refer to item numbers in **fig.1**

4.1. Lifting a Drum:

Turn the release valve (5) fully clockwise. Move the truck to bring the lifting frame (1) in contact with the drum. Repeatedly depress the handle (4) to raise the lifting frame so that the drum is between the clamp tooth (2) and the retaining bracket (8) on the lower part of the lifting frame. Ensure that the retaining plate rests below the top rim of the drum as in **fig.2**. Pull the clamp tooth operating lever (3) towards you. Ensure that the clamp tooth (2) securely holds the drum. Continue depressing the truck handle (4) until the drum is off the ground.

- ☐ **WARNING:** Ensure that the drum position is as low as possible prior to moving the truck.

4.2. Transportation:




Pull/push the truck handle (4) to move the raised drum. Turn the handle to change direction of movement.

- ☐ **WARNING:** To avoid damage to the truck or the drum **DO NOT** turn the release valve rapidly.

4.3. Releasing a Drum:

SLOWLY turn the release valve (5) anticlockwise and lower the drum until it stands firmly on the ground.

Push the clamp tooth operating lever (3) away from you to release the clamp tooth (2).

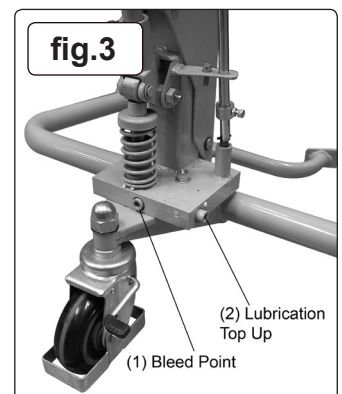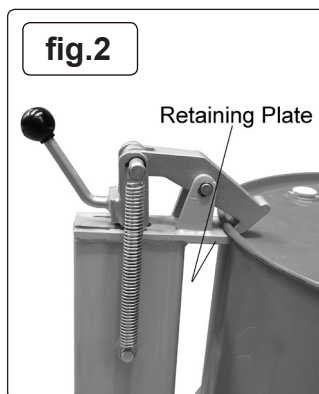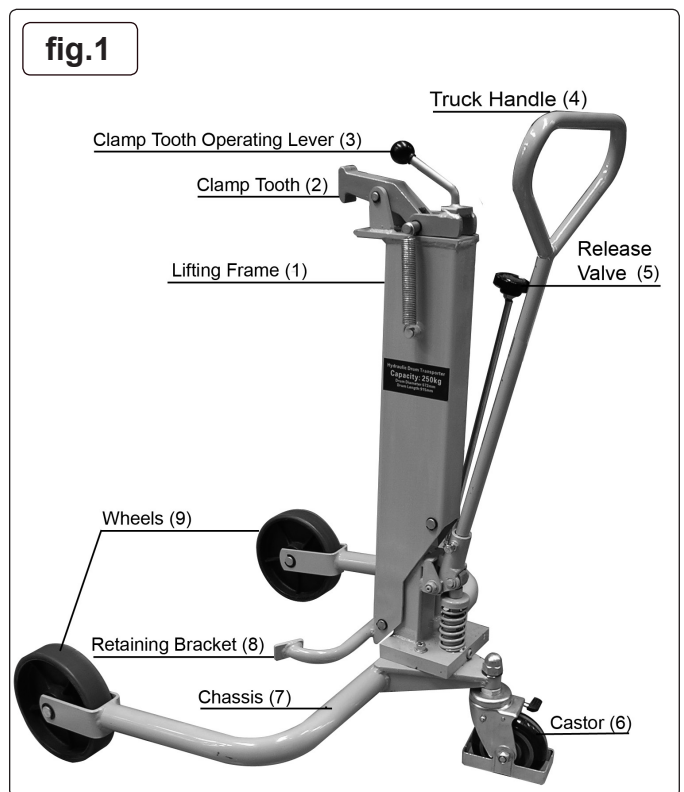

5. MAINTENANCE

- 5.1. Regularly check the truck chassis and front wheels for rigidity. Ensure that the rear castor is firmly secured to the chassis.
- 5.2. Regularly check the clamp tooth for wear. Replace when necessary.
- 5.3. Regularly check the truck's connecting components such as retaining pins, nuts and washers for lubrication and/or wear.
- 5.4. If the performance of the unit degrades, it may be necessary to top up the oil (see lubrication point fig.3.2) If performance is not improved, it may be necessary to bleed the system (see bleed point at fig.3.1).

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500.

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.

NOTE: It is our policy to improve products continually and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk