

baridi

Stove Heater 1800W Electric Fireplace with LED Flame Effects, Log/Wood Decoration, 2 Heat Settings, Indoor, Freestanding Black



Model No: DH121

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to
instruction
manual



DO NOT cover



Warning:
hot
surface

Specification

Model No:	DH121
Colour of Product:	Black
Electrical Class:	II
Fuel Type:	Electric
Fuse Rating:	13A
Heated Area:	20m ²
Installation:	Free Standing
Nett Weight:	3kg
Number of Heat Settings:	2
Plug Type:	3-Pin BS
Power Cable Length:	1.6m
Product Dimensions (W x D x H):	390 x 235 x 445mm
Rated current:	7.8A
Rated Power:	900/1800W
IP Rating:	IPX0
Supply:	230V~50Hz


Safety Instructions

- **ELECTRICAL SAFETY**
- **WARNING!** It is the user's responsibility to check the following:
 - Check all electrical equipment and appliances to ensure that they are safe before using.
 - Inspect power supply leads, plugs and all electrical connections for wear and damage.
 - Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- **DO NOT** use worn or damaged cables, plugs or connectors.
- Ensure that any faulty item is repaired or replaced immediately by a Baridi qualified technician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- Baridi recommend that an **RCD** (Residual Current Device) is used with all electrical products.
- **IMPORTANT:** Ensure that the voltage rating on the appliance suits the mains power supply.
- **DO NOT** pull or carry the appliance by the power cable.
- **DO NOT** pull the plug from the socket by the cable.
- The heater must not be located under an electrical socket; the socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance and cleaning.
- **GENERAL SAFETY**
- **IMPORTANT:** Read all instructions and warnings carefully before starting installation. Failure to follow these instructions may result in a possible electric shock or fire hazard and will void the warranty.
- **WARNING!** In order to avoid overheating, **DO NOT** cover the heater.
- Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.
- Children shall NOT play with the appliance.
- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.

FEATURES



1	Realistic Flame Effect
2	Powerful Blower
3	Temperature Control 900W-1800W
4	Low Heat Settings (900W) (4)
5	Full Heat Setting (1800W) (4+5)
6	Flame Effect Power On/Off

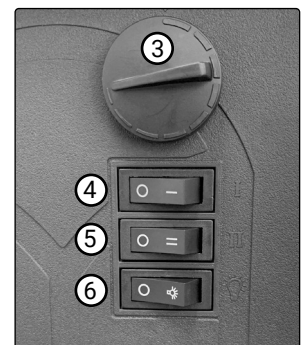

- The removal of the plug has to be such that an operator can check from any of the points to which he has access that the plug remains removed.
- **CAUTION!** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- **DO NOT** use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- To avoid burns, do not let bare skin touch any hot surfaces.
- **DO NOT** attempt to repair, disassemble or modify the appliance. This unit contains no user-serviceable parts.
- Always unplug or disconnect the appliance from the mains power supply when not in use, or when moving or cleaning it.
- Keep the heater clean. **DO NOT** allow any object to enter the ventilation or exhaust opening as this may cause electric shock, fire, or damage to the heater.
- **DO NOT** use the appliance for anything other than its intended use. It is designed for domestic indoor use only.
- There may be a trace of odour during the first few minutes of initial use, or after a period of storage. This is normal and will quickly disappear.
- Avoid the use of an extension cord, as the cord may overheat and cause a risk of fire.
- **DO NOT** use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **DO NOT** use this heater if it has been dropped.
- **DO NOT** place this fire directly onto a carpeted surface to avoid discolouration due to the heat.
- **DO NOT** run the cord under carpeting. **DO NOT** cover the cord with throw rugs, runners or the like.
- Ensure the cord is kept away from traffic areas, and kept in a position which would not present a trip hazard.
- To disconnect this appliance, press the On/Off button to turn off, then remove the plug from the outlet.
- This appliance has hot and arcing or sparking parts inside. **DO NOT** use it in areas where petrol, paint, or any flammable liquids are used or stored.
- **WARNING! DO NOT** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING!** Even after the appliance is off, the glass and/or screen will remain hot for an extended period of time.
- **WARNING!** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.
- This appliance should not be used as a drying rack for clothing, nor should Christmas decorations be hung on or near it.
- Clean the fire regularly to prevent the build-up of hairs, dust or lint around the fire, as this may cause the outlet to become blocked.
- **DO NOT** use aerosols or steam cleaners on or around the fire.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Misuse of this electric fireplace heater may occur if it is used in damp environments, placed too close to flammable materials, covered during operation, or used with damaged cables or blocked air vents. Such misuse can lead to overheating, fire hazards, electric shock, or damage to the appliance, potentially causing serious injury or property damage.
- Any safety screen or guard removed for servicing must be replaced prior to operating the appliance.
- Under no circumstances should this appliance be modified.
- Keep the packaging material out of reach of children and dispose of the material in a safe manner. As with all plastic bags, these are not toys and should be kept away from children and infants.
- Servicing should be done only while the appliance is disconnected from the power supply circuit. Always unplug appliance when not in use.
- **DO NOT** use outdoors.
- **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the appliance.
- **DO NOT** block air intake.
- It is normal for your electric appliance to produce noise.
- Ensure clearances to combustibles are maintained when building a mantel or shelves above the appliance. Elevated temperatures on the wall or in the air above the appliance can cause melting, discolouration, or damage to decorations, a **TV**, or other electronic components.

SAFETY CUT-OFF

- This appliance is fitted with a safety cut-off that may activate if it overheats or if airflow is restricted, for example due to blocked air vents, and for safety reasons the fire will not automatically reset once this has occurred. After the cause has been addressed, such as clearing any obstructions and allowing the appliance to cool fully, it must be manually reset by disconnecting it from the mains power supply and leaving it unplugged for at least 15 minutes to allow any residual electrical charge to dissipate and the internal system to clear, after which it can be reconnected to the mains and switched back on to complete the reset.

Assembly

- Before using the heater, the feet (supplied separately in the carton) must be fitted. These should be attached to the base of the heater using the screws provided and a Phillips-head screwdriver (not supplied). Make sure the feet are correctly positioned and that their holes align properly with the pilot holes in the base of the heater.
- To begin assembly, place the heater upside down on a soft surface such as a cloth, rug, or carpet to avoid scratching or damaging it. Then position one foot so that its holes line up with the corresponding holes in the base of the heater. Secure it in place using the supplied screws and tighten them with the screwdriver. Repeat the same process for the other feet. Fig.1
- Once all the feet are securely attached, carefully turn the heater back into the upright position. Check that it is stable and sits evenly before plugging it in or switching it on.

Operation

- Insert plug into the mains socket.
- Select the heat setting using switches 4 and 5. For maximum heat output, turn both switches to the on position.
- Turn the temperature control to the desired setting to select the required temperature. For reference, see 3 in the features illustration on the front page.

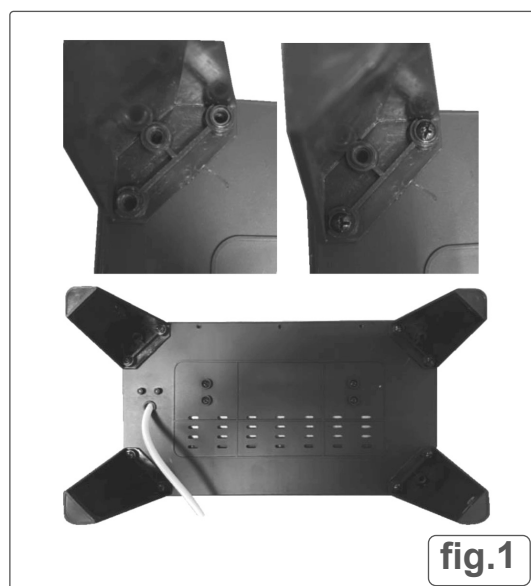


fig.1

Maintenance

- **WARNING!** To avoid the risk of electric shock, **DO NOT** open the back panel unless the power has been switched off and the appliance has been unplugged from the mains supply.
- **WARNING!** It is hazardous for anyone, other than a qualified service technician, to carry out any service or repair operation, which involves removal of any components.
- **WARNING!** Any electrical wiring repairs should only be carried out by a qualified technician and must comply with local building regulations and codes.
- The blower motor and flame motor are pre-lubricated for a durable service life and require no further lubrication or maintenance.
- **WARNING!** Before cleaning the appliance, the power supply should be disconnected and the unit should be allowed to cool.
- Dust can be removed by lightly wiping the surface with clean, lint free cloth.
- **DO NOT** spray liquids directly onto any surface of the unit.
- Use a vacuum or duster to keep heater and vent area clean from dust and dirt.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on	No power supply or plug not connected properly.	Check mains connection, ensure plug is inserted correctly and power is on.
No heat output	Incorrect heat setting selected.	Select correct heat setting.
Appliance switches off automatically	Overheating or anti-tip protection triggered.	Allow appliance to cool, check airflow, ensure unit is on a flat stable surface.
Fan is running but no heat	Heater not activated or set to flame effect only.	Select heat setting (900W or 1800W) instead of flame-only mode.
Flame effect not working	Flame function not selected.	Turn on flame effect setting.
Unusual noise	Dust build-up or loose components.	Turn off and unplug appliance, clean vents, and check for loose parts.
Burning smell on first use	Dust burning off internal components.	This is normal initially; allow appliance to run for a short time in a ventilated area.

End of Life

- At the end of its service life, this electric fireplace heater should not be disposed of with general household waste. As an electrical appliance, it must be recycled in accordance with local Waste Electrical and Electronic Equipment (WEEE) regulations to prevent environmental harm and ensure safe handling of components. Improper disposal may lead to environmental pollution or potential hazards due to electrical parts. Always take the unit to an authorised recycling facility or collection point.



Environment Protection, Waste Electrical and Waste Electronic Equipment Regulations (WEEE)

Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Product Information Sheet. Local Space Heaters, Electric.

SUPPLIER_NAME_OR_TRADEMARK Dellonda EU Ltd.
DELEGATED_ACT 2024/1103/EU
MODEL_IDENTIFIER DH121

Baridi Electric Stove Heater Fireplace with LED Log Flame Effect 1800W – Black

ADDRESS Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
PHONE_NUMBER 01284 757 500
EMAIL_ADDRESS TechnicalCompliance@dellonda.co.uk

Heat output

Type of heat input, for electric storage local space heaters only

Nominal heat output kW	1.800	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative) kW	1.000	manual heat charge control with room and/or outdoor temperature feedback	NA
Maximum continuous heat output kW	1.800	electronic heat charge control with room and/or outdoor temperature feedback	NA
		fan assisted heat output	NA

Power consumption

Other control options

Nominal heat output W	1800	Single stage heat output, no room temperature control	No
In standby mode W	NA	Two or more manual stages, no room temperature control	No
In idle mode W	0	With mechanical thermostat room temperature control	Yes
In network standby W	NA	With electronic room temperature control	No
Standby mode with display of information of status	0	With electronic room temperature control plus day timer	No
Seasonal space heating energy efficiency in active mode %	0	With electronic room temperature control plus week timer	No

Other control options

Room temperature control, with presence detection	No
Room temperature control, with open window detection	No
with distance control option	No
with adaptive start control	No
with working time limitation	No
with black bulb sensor	No
with self-learning functionality	No
with control accuracy	No

Suppliers website <https://www.sealey.co.uk/>