




---

## 30cm 17 Bottle Dual Zone Wine Cooler, Built-In

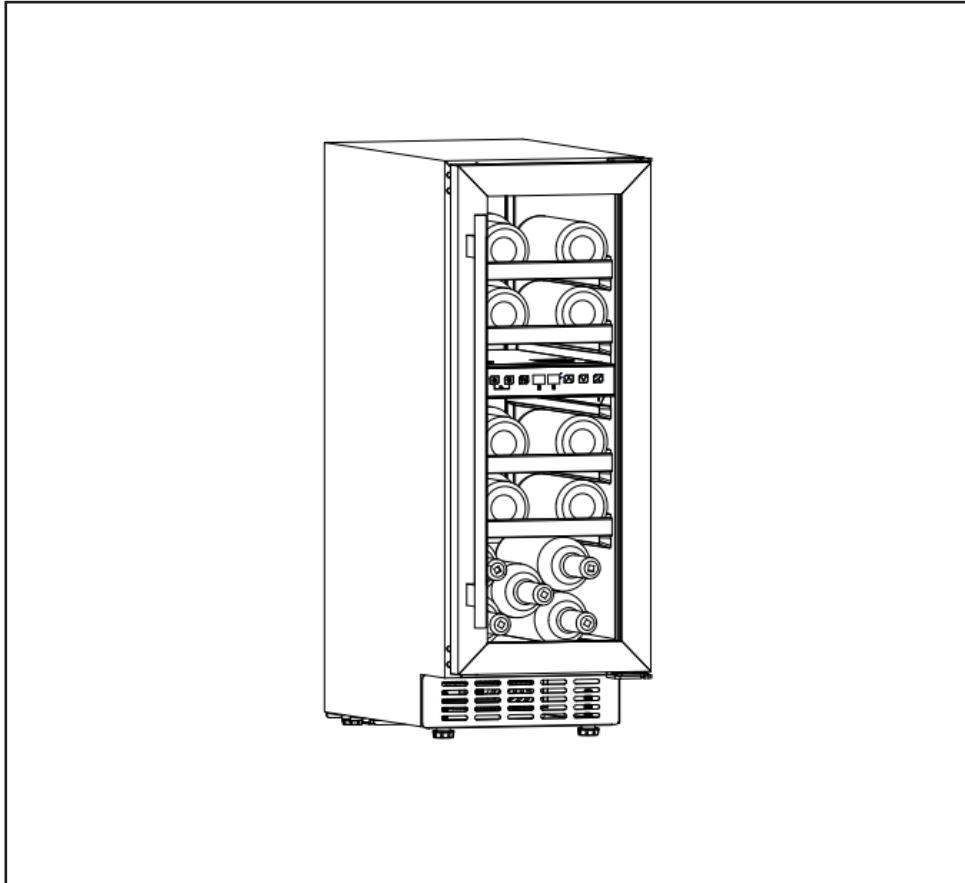

### Model No. DH204.V2

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

## Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to  
instructions



Indoor use  
only



Warning:  
flammable  
material

## SAFETY

- This piece of equipment is solely designed for use by a responsible adult/professional user who has received adequate training on its operation & safety risks.

### • ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:
- Check all electrical equipment and appliances to ensure that they are safe before using.
- Inspect power supply leads, plugs and all electrical connections for wear and damage.
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- **DO NOT** use worn or damaged cables, plugs or connectors.
- Ensure that any faulty item is repaired or replaced immediately by a Dellonda qualified technician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- Dellonda recommend that an **RCD** (Residual Current Device) is used with all electrical products.
- **Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
- **DO NOT** pull or carry the appliance by the power cable. **DO NOT** pull the plug from the socket by the cable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

### • GENERAL SAFETY



- Children shall **NOT** play with the appliance.
- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- This piece of equipment is solely designed for use by a responsible adult/professional user who has received adequate training on its operation and safety risks.
- This appliance is intended to be used exclusively for the storage of wine.
- This refrigeration appliance is intended to be used at ambient temperature ranging from 10°C to 32°C.

### • REFRIGERATION SAFETY

- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- This appliance is intended to be used in household and similar applications such as – staff kitchen areas in shops, offices and other working environments; – farm houses and by clients in hotels, motels and other residential type environments; – bed and breakfast type environments; – catering and similar non-retail applications.
- **WARNING!** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- To avoid contamination of food, please respect the following instructions:
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- **WARNING! DO NOT** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

## INSTALLATION


- **WARNING!** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- The unit is designed to be either free-standing or installed under the counter. See Fig.1 for dimensions required. This will maximise the efficiency, performance and the life of the fridge and also ensure that there is sufficient space for the hinge to operate effectively.
- Locate the unit away from direct sunlight or sources of heat i.e. radiator, stove etc. Extreme or cold ambient temperatures may also prevent the unit working effectively.
- **DO NOT** locate the unit in a damp or moist location.
- Ensure that the floor surface is strong and stable enough to support the unit when it is fully loaded.
- Level the unit when in location by using the adjustable levelling feet in each corner.
- Once in position allow the unit to rest for an hour before turning it on.
- Allow the unit 2-3 hours to reach set temperature after switching on before placing any items in the compartment.
- Allow for disconnection of the appliance from the mains supply after installation, unless appliance has an incorporated switch.
- **WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING! DO NOT** locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- The appliance shall not be exposed to rain.
- **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING! DO NOT** damage the refrigerant circuit.
- **WARNING! DO NOT** use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

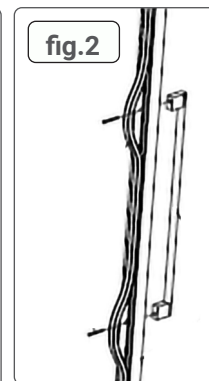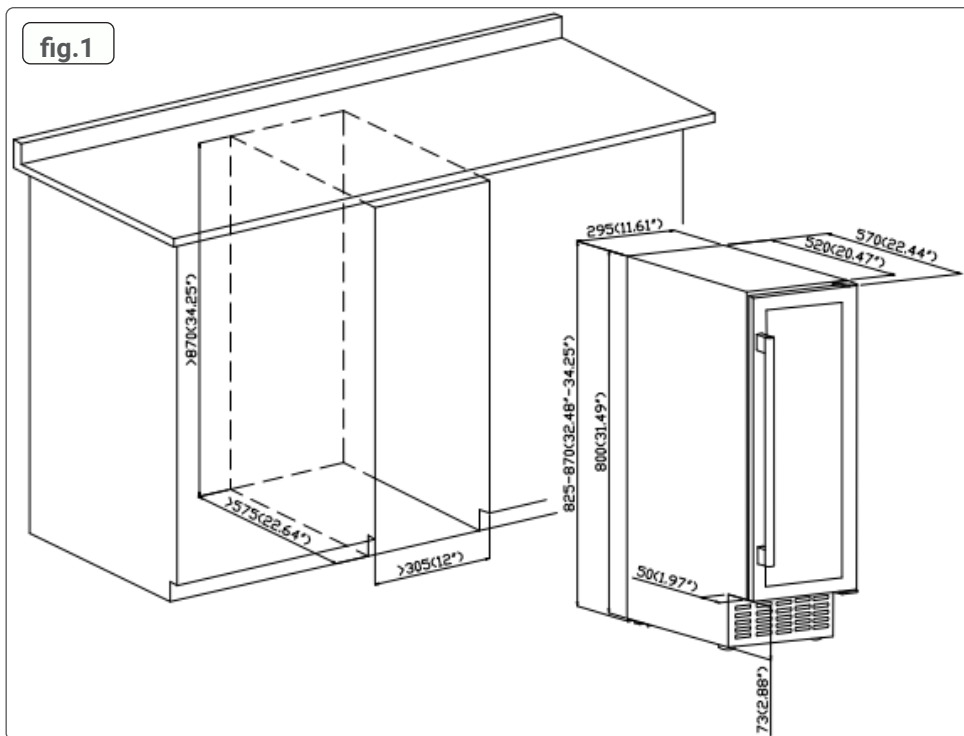

#### • INSTALLING DOOR HANDLE

- **NOTE:** The handle is delivered in a separate package with screws included in the carton.
- **HANDLE** (fig.2)
- Reveal two small holes on the door frame from inner side by pulling out a bit the door seal (fig.2).
- Align the handle to the holes in the door frame and insert and fix the screws from the inside of the unit. Replace the door seal.

## OPERATION

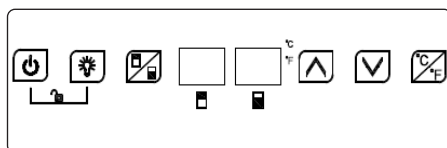

#### • ON / OFF

- Press for 3 seconds for normal working.
- Press for further 3 seconds to power down and enter standby mode.

#### • LIGHT

- To turn on / turn off internal **LEDs**, press this control. **NOTE:** in Standby mode this key is invalid.

#### • UP ADJUSTMENT

- Press once to show current setting. Hold to adjust setting (+1°C per step). Release to set value.

#### • DOWN ADJUSTMENT

- Press once to show current setting. Hold to adjust setting (-1°C per step). Release to set value.

#### • CHILD LOCK

- To lock controls, press both buttons at the same time for 3 seconds. To unlock controls press both keys at the same time for 3 seconds.

 
#### • °F / °C UNITS

- To switch display from Centigrade to Fahrenheit press both key for 3 seconds.

#### • ZONE SELECTION

- Press the button to switch between upper zone and lower zone for choosing which zone to set temperature. Press the key once, the **LED** display in chosen zone flashes. Press up and down key to set temperature. Press the key again; switch the zone to set temperature.

## • ZONE NOTIFICATION



- Left hand symbol indicates lower zone setting, right hand symbol indicates upper zone setting.

## • STORAGE GUIDELINES

- Each shelf is designed to carry 1 or 2 layers of bottles. More than 2 layers of bottles on one shelf are not recommended.
- Each shelf pulls out partly to store wine bottles easily.
- Open the door straight enough before pulling out shelves.
- The shelf in front of the fan should be avoided if possible, to avoid blocking the air inlet and affecting the cooling efficiency.
- If the wine cooler is empty for a period, it is recommended to turn it off, clean and dry it carefully and open the door for ventilation.
- Below table is the recommended temperature for wine storage.

|                              |          |
|------------------------------|----------|
| • Red Wine                   | 15 -18°C |
| • White Wine                 | 9 -14°C  |
| • Rose Wine                  | 10 -11°C |
| • Champagne & Sparkling Wine | 5 - 8°C  |

## TIPS

- It is intended to be used exclusively for the storage of wine.
- This refrigerating appliance is not suitable for the freezing of foodstuffs.
- The wine cooler is designed to run between 5 and 20°C.
- The shelves placed in factory mode is the most efficient use of energy for the refrigerating appliances.
- When the surrounding temperature is 25°C and the wine cooler has no bottles loaded, it will take around 30 minutes to increase the wine cooler's temperature from 5°C to 12°C. Under the same circumstances, it will take around one hour to decrease the wine cooler's temperature from 12°C to 5°C. The less the temperature span is, the less time it will take.
- The wine cooler factory temperature setting is 12°C.

## MAINTENANCE

- Remove the power plug from the supply when performing cleaning or maintenance.
- **DO NOT** use abrasive or chemical cleaning materials on any surface of the unit.
- Wipe interior and exterior surfaces with a damp cloth and dry thoroughly with a clean dry cloth.
- For more soiled surfaces use a neutral detergent, wipe down with a clean damp cloth and dry thoroughly with a clean dry cloth.
- **DO NOT** use organic solvents, alkaline detergent, boiling water, washing powder or acid liquid etc.
- **DO NOT** flush the compartment of the appliance.

## TROUBLESHOOTING

|                                             |                                                                                                                                                                                                                                         |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| • The appliance makes lots of noise?        | <ul style="list-style-type: none"> <li>• Please adjust the front foot to keep the appliance level.</li> <li>• Please keep the appliance spaced away from walls if free standing.</li> </ul>                                             |
| • Liquid flowing sound inside the cabinet?  | <ul style="list-style-type: none"> <li>• It is normal because of the refrigerant working inside.</li> </ul>                                                                                                                             |
| • The appliance does not start?             | <ul style="list-style-type: none"> <li>• Make sure the appliance is connected to the power properly.</li> <li>• Make sure to switch on the power.</li> <li>• The compressor re-starts after 5 minutes for a power cut.</li> </ul>       |
| • Compressor runs continuously?             | <ul style="list-style-type: none"> <li>• If cooling is evident, call the after-sale service.</li> </ul>                                                                                                                                 |
| • Door does not seal tightly?               | <ul style="list-style-type: none"> <li>• After long time use, the door seal might get stiff &amp; distorted partially.</li> <li>• Heat the door seal with hot-wind blower or hot towel. Once seal is softened close the door</li> </ul> |
| • The appliance does not cool sufficiently? | <ul style="list-style-type: none"> <li>• Adjust temperature setting.</li> <li>• Keep the appliance away from sunlight or heat.</li> <li>• Do not open the door frequently.</li> </ul>                                                   |
| • Unpleasant smells inside cabinet?         | <ul style="list-style-type: none"> <li>• A light plastic smell for a new unit is normal and will disappear after a short time.</li> <li>• Clean the compartment and ventilate it for a few hours.</li> </ul>                            |

|                                 |                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| • Condensate on the glass door? | <ul style="list-style-type: none"> <li>• Please do not open the door frequently or for a long time.</li> <li>• Please do not set the temperature too low.</li> <li>• High ambient temperature and humidity would cause condensate.</li> </ul> |
| • The light is not working?     | <ul style="list-style-type: none"> <li>• Check the power supply.</li> <li>• Call the retailer's after-sale service if the light is broken.</li> </ul>                                                                                         |

- An audible alarm will sound when a system malfunction occurs. Press any key on the control panel to cancel the alarm sound.

• **ERROR CODES:**

- When the temperature sensor of upper zone failure occurs, error code displays: E1 for open circuit; E2 for short circuit.
- When the defrost sensor failure occurs, error code displays: E3 for open circuit; E4 for short circuit.
- When the temperature sensor of lower zone failure occurs, error code displays: E5 for open circuit; E6 for short circuit.

## Product Information Sheet. Refrigerating Appliances

SUPPLIER\_NAME\_OR\_TRADEMARK Dellonda EU Ltd. DELEGATED\_ACT EU/2019/2019  
MODEL\_IDENTIFIER DH204  
Baridi 17 Bottle Slim Wine Fridge & Cooler 30cm  
ADDRESS Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ir  
PHONE\_NUMBER 01284 757 500  
EMAIL\_ADDRESS TechnicalCompliance@dellonda.co.uk

Parameter

Verification tolerances

|                        |     |                               |          |
|------------------------|-----|-------------------------------|----------|
| Low-noise appliance    | No  | Design type                   | Built-in |
| Wine storage appliance | Yes | Other refrigerating appliance | No       |

### General product parameters

|                                                    |     |                                                                                                     |         |
|----------------------------------------------------|-----|-----------------------------------------------------------------------------------------------------|---------|
| Height mm                                          | 820 | Total volume. Litres.<br>Compartment volume. Litres.<br>0-star to 4-star / Variable Volume. Litres. |         |
| Width mm                                           | 295 |                                                                                                     |         |
| Depth mm                                           | 570 |                                                                                                     |         |
| EEL                                                | 171 | Energy efficiency class                                                                             |         |
| Airborne acoustical noise emissions (dB(a) re 1 pW | 38  | Airborne acoustical noise emission class                                                            |         |
| Annual energy consumption kWh/a                    | 135 | Climate class                                                                                       | SN/N/ST |

**SN** = extended temperate(10-32°C)

**N** = temperate 16-32°C

**ST** = subtropical 16-38°C

**I** = tropical 16-43°C]

|                                                                                     |    |                                                                                     |
|-------------------------------------------------------------------------------------|----|-------------------------------------------------------------------------------------|
| Minimum ambient temperature (°C) for which the refrigerating appliance is suitable. | 10 | Maximum ambient temperature (°C) for which the refrigerating appliance is suitable. |
| Winter setting                                                                      | No |                                                                                     |

### Environment Protection and Waste Protection and Electrical Equipment Regulations (WEEE)

Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of it in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. Under the Waste Batteries and Accumulators Regulations 2009, Dellonda would like to inform the user that this product contains one or more batteries. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.