


# baridi

---

## Baridi 52 Bottle Dual Zone Wine Cooler, Fridge, Touch Screen Controls, LED - Black

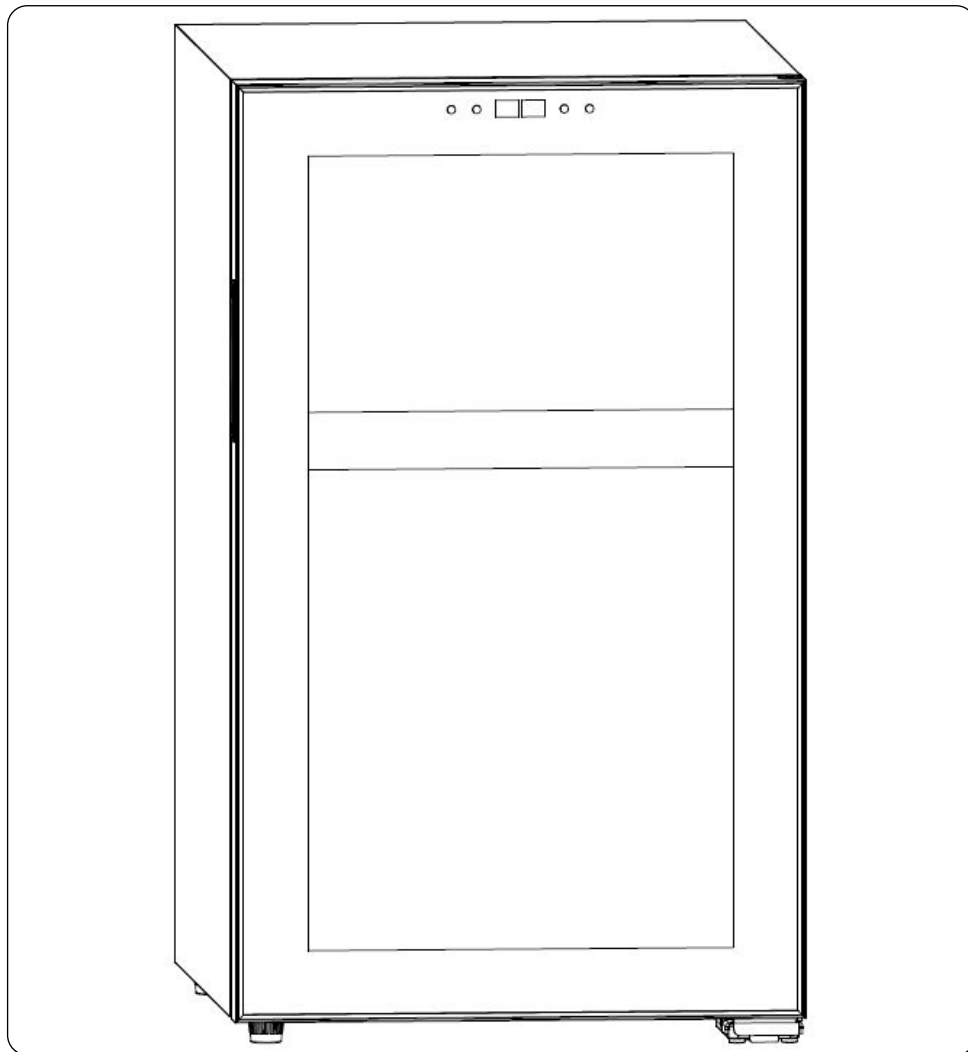

### Model No: DH236

Thank you for purchasing a Baridi product from the Dellonda range. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

## Important Information

Please read these instructions carefully and note any safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to  
instructions



Indoor use  
only



**WARNING!**  
Flammable  
material

### • ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:
- Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Dellonda recommend that an RCD (Residual Current Device) is used with all electrical products.
- Electrical safety information. It is important that the following information is read and understood:
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- **IMPORTANT:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
- **DO NOT** pull or carry the appliance by the power cable.
- **DO NOT** pull the plug from the socket by the cable.
- **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or is replaced immediately by a qualified electrician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- Ensure that repairs are carried out by a qualified electrician.

### • GENERAL SAFETY

- **WARNING!** To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
- Before using the appliance, please read this user manual to ensure that you gain the maximum benefit from it.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **DO NOT** locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **DO NOT** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **DO NOT** damage the refrigerant circuit.
- **DO NOT** use electrical appliances inside the drink storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in households and similar environments such as:
  - staff kitchen areas in shops, offices and other working environments.
  - farm houses and by clients in hotels, motels and other residential type environments.
  - bed and breakfast type environments.
  - catering and similar non-retail applications.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

- To avoid contamination of drink, please respect the following instructions:
  - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
  - Regularly clean surfaces that can come in contact with drink and accessible drainage systems.
  - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- **WARNING!** Keep away from fire. There are flammable materials in the refrigerant pipes and compressor.
- This appliance contains flammable refrigerant R600a and foaming agent cyclopentane.
- This appliance should be serviced by a suitably qualified person.
- **SAVE THESE INSTRUCTIONS**


## • INSTALLATION INSTRUCTIONS

- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded.
- To level your appliance, adjust the leveling legs at the bottom of the appliance.
- Allow 10 cm of space between the top, the back and sides of the appliance, which allows the proper air circulation to cool the compressor and condenser.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the appliance in moist areas.
- Plug the unit into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the earth cable. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorised service centre.
- After plugging the appliance into a wall outlet, allow the appliance to cool down for 2-3 hours before placing any items in the compartment.



During use, service and disposal of the the appliance, please pay attention to the symbol similar to the left, which is located on the rear of appliance (rear panel or compressor) and with yellow or orange colour. It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor. Keep away from fire during using, service and disposal.

## • OVERVIEW

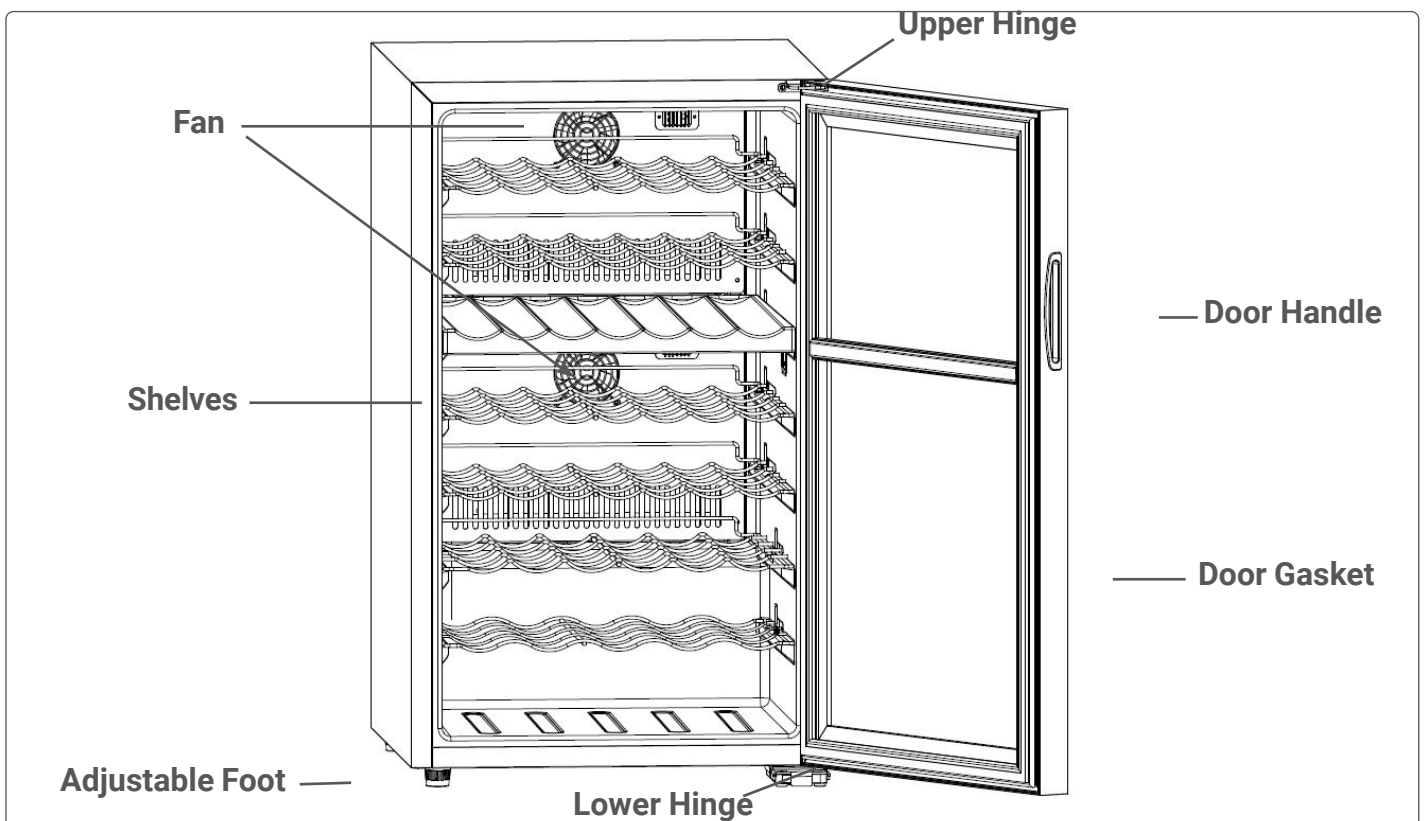

- **OPERATION**
- **SETTING THE TEMPERATURE CONTROL**

**KEY FUNCTION**

- 1. Unlock key:** short press to switch the upper zone/lower zone setting state; long press for 2 seconds to unlock
- 2. Light/CF key:** short press to turn on or off; long press to switch between Fahrenheit and Celsius
- 3. Upwards Arrow:** increase temperature
- 4. Downwards Arrow:** decrease temperature

- **AUTOMATIC LOCKING FUNCTION**

- The keys will automatically lock after 20 seconds if no keys are pressed. After locking, the temperature controls cannot be operated. The unlock key and light / CF key will operate normally.

- **AUTO LIGHT OFF FUNCTION**

- The lamp will turn off automatically after 10 minutes if no keys are pressed.

- **ADJUSTABLE RANGE**

- Upper zone:
  - Lowest value: 5°C / 41°F
  - Maximum value: 18°C / 64°F
- Lower zone:
  - Lowest value: 5°C / 41°F
  - Maximum value: 18°C / 64°F

- **DISPLAY RANGE**

- The temperature display range shows 5-18°C / 41-64°F.
- **In the Celsius state:** When the temperature measured by the temperature probe is within  $\pm 1$  ° C of the set temperature, the temperature display will display the set temperature value.
- **In the Fahrenheit state:** When the temperature measured by the temperature probe is within  $\pm 2$  ° F of the set temperature, the temperature display will display the set temperature value.

ERROR CODES	
EE	Displayed when the temperature probe is short-circuited or disconnected, flashes, and cooling is stopped.
LL	When the temperature measured by the temperature probe is lower than 0 degrees Celsius, "LL" is displayed, flashing, and the cooling is stopped.
HH	When the temperature measured by the temperature probe is higher than 37 degrees Celsius, "HH" is displayed, flashing, and cooling is stopped.

- **FORCED DEFROSTING FUNCTION**

- When the compressor works for 12 hours, the compressor will stop working for 30 minutes

- **MEMORY FUNCTION**

- The control board is re-energized after each power-off, the temperature setting value, Fahrenheit/Celsius state will be the same as before the power-off, and the length of power-off time is not limited.

• **TIPS**

- This appliance is intended to be used exclusively for the storage of wine.
- This appliance is not suitable for freezing foodstuffs.
- It is recommended to set the wine cooler at 12°C.
- The shelves should be placed as shown in the 'Overview' as this is most efficient for cooling.
- When the surrounding temperature is 25°C and the wine cooler has no bottles loaded, it will take around 30 minutes to increase the wine cooler's temperature from 5°C to 12°C. Under the same circumstance, it will take around one hour to decrease the wine cooler's temperature from 12°C to 5°C. The less the temperature span is, the less time it will take.
- The wine cooler is recommended to be designed at 12°C. The energy consumption is 0.356kWh/24h. If the setting temperature is higher than 12°C, the energy consumption will be lower. If the setting temperature is lower than 12°C, the energy consumption will be higher.

• **TROUBLESHOOTING**

- If the product is not working properly, please refer to the following table. If the problem cannot be resolved, please contact a Dellonda authorised service centre.

PROBLEM	POSSIBLE CAUSE / SOLUTION
The refridgerator doesn't work.	Check the power supply is connected and free from damage.
The refridgerator is noisy.	Ensure the refridgerator is placed on flat, stable ground, away from other objects or walls. Use the adjustable feet as necessary to level the appliance.
The internal temperature is too high.	Select the appropriate temperature. Ensure the door is closed and there is enough ventilation space around the appliance. <b>DO NOT</b> leave the door open for long periods.



**Environment Protection, Waste Electrical and Waste Electronic Equipment Regulations (WEEE)**



Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. Please note that this product contains one or more batteries. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Dellonda Limited, Sole UK Distributor of Baridi**

Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757575



support@dellonda.co.uk



www.dellonda.co.uk