 


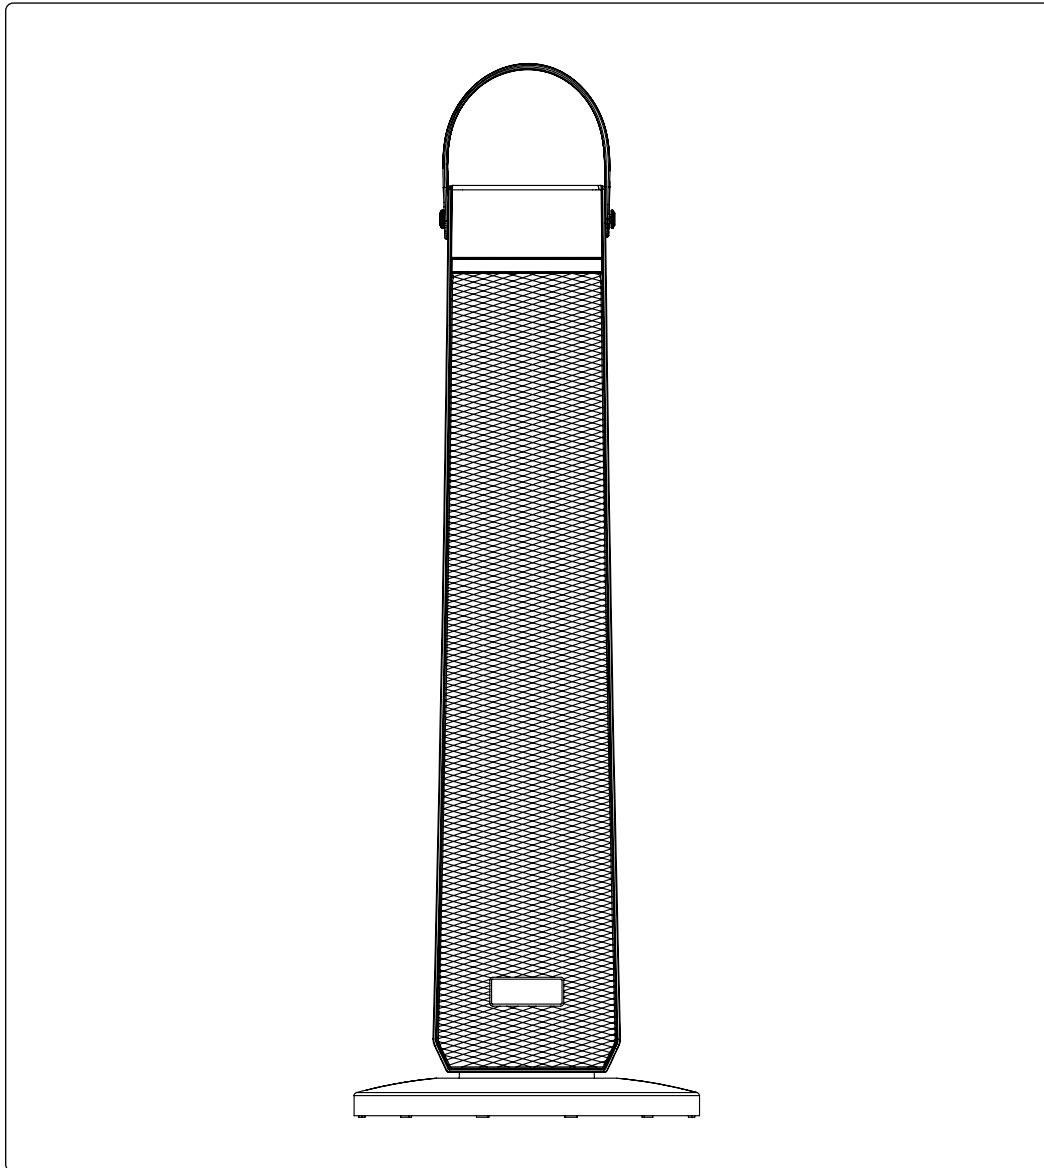

25" Electric Ceramic Tower Heater 1000/2000W with 2-Modes & 3-Speeds, Overheating & Tip-Over Protection & 12H Timer, Cream



This product is only suitable for well insulated spaces or occasional use

Model No: DH437

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to instruction manual



DO NOT cover



Warning: hot surface

BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN
Swallowing can lead to chemical burns, perforating of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.



Warning: Battery in product

Specification

Model No:	DH437
Colour of Product:	Cream with Tan handle
Fuse Rating:	13A
Heating Technology:	PTC
Material:	PP+ABS
Nett Weight:	1.8kg
Noise Power/Pressure:	55dB(A)
Number of Heat Settings:	2
Plug Type:	3-Pin BS
Product Depth (Front to Back):	185mm
Product Dimensions (W x D x H):	185 x 185 x 655mm
Product Height (Floor to Top):	655mm
Product Width (Side to Side):	185mm
Rated Power:	5/1000/2000W
Supply:	230V~50Hz
IP Rating:	IP23
Heating panel area:	166 x 66 x 15mm
Temperature Setting	20–40°C

FEATURES

1	Temperature Control
2	ECO Function
3	12hr Timer
4	Oscillation Control
5	ON/OFF Switch
6	Temperature Settings
7	Control Panel & Display Screen
8	Carry Handle
9	Remote Control Storage
10	Stylish Design

Safety Instructions

ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
 - Check all electrical equipment and appliances to ensure that they are safe before using.
 - Inspect power supply leads, plugs and all electrical connections for wear and damage.
 - Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
 - DO NOT** use worn or damaged cables, plugs or connectors.
 - Ensure that any faulty item is repaired or replaced immediately by a Baridi qualified technician.
 - If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
 - Baridi recommend that an **RCD** (Residual Current Device) is used with all electrical products.
- IMPORTANT:** Ensure that the voltage rating on the appliance suits the mains power supply.
- DO NOT** pull or carry the appliance by the power cable.
- DO NOT** pull the plug from the socket by the cable.
- The heater must not be located under an electrical socket; the socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance and cleaning.
- GENERAL SAFETY**
- IMPORTANT:** Read all instructions and warnings carefully before starting installation. Failure to follow these instructions may result in a possible electric shock or fire hazard and will void the warranty.
- WARNING!** In order to avoid overheating, **DO NOT** cover the heater.
- Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.
- Children shall NOT play with the appliance.
- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.

- The removal of the plug has to be such that an operator can check from any of the points to which he has access that the plug remains removed.
 - **CAUTION!** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
 - To avoid burns, do not let bare skin touch any hot surfaces.
 - **DO NOT** attempt to repair, disassemble or modify the appliance. This unit contains no user-serviceable parts.
 - Always unplug or disconnect the appliance from the mains power supply when not in use, or when moving or cleaning it.
 - Keep the heater clean. **DO NOT** allow any object to enter the ventilation or exhaust opening as this may cause electric shock, fire, or damage to the heater.
 - **DO NOT** use the appliance for anything other than its intended use. It is designed for domestic indoor use only.
 - There may be a trace of odour during the first few minutes of initial use, or after a period of storage. This is normal and will quickly disappear.
 - Avoid the use of an extension cord, as the cord may overheat and cause a risk of fire.
 - **DO NOT** use if there are visible signs of damage to the heater.
 - Use this heater on a horizontal and stable surface.
 - **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
 - **DO NOT** use this heater if it has been dropped.
 - **DO NOT** place this fire directly onto a carpeted surface to avoid discolouration due to the heat.
 - **DO NOT** run the cord under carpeting. **DO NOT** cover the cord with throw rugs, runners or the like.
 - Ensure the cord is kept away from traffic areas, and kept in a position which would not present a trip hazard.
 - To disconnect this appliance, press the On/Off button to turn off, then remove the plug from the outlet.
 - This appliance has hot and arcing or sparking parts inside. **DO NOT** use it in areas where petrol, paint, or any flammable liquids are used or stored.
 - **WARNING! DO NOT** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
 - **WARNING!** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.
 - This appliance should not be used as a drying rack for clothing, nor should Christmas decorations be hung on or near it.
 - Clean the fire regularly to prevent the build-up of hairs, dust or lint around the fire, as this may cause the outlet to become blocked.
 - **DO NOT** use aerosols or steam cleaners on or around the fire.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.
 - Any safety screen or guard removed for servicing must be replaced prior to operating the appliance.
 - Under no circumstances should this appliance be modified.
 - Keep the packaging material out of reach of children and dispose of the material in a safe manner. As with all plastic bags, these are not toys and should be kept away from children and infants.
 - Servicing should be done only while the appliance is disconnected from the power supply circuit. Always unplug appliance when not in use.
 - **DO NOT** use outdoors.
 - **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the appliance.
 - **DO NOT** block air intake.
 - It is normal for your electric appliance to produce noise.
 - Ensure clearances to combustibles are maintained when building a mantel or shelves above the appliance. Elevated temperatures on the wall or in the air above the appliance can cause melting, discolouration, or damage to decorations, a **TV**, or other electronic components.
- SAFETY CUT-OFF**
- This appliance is fitted with a tip-over safety switch. If the heater is knocked over or falls from its upright position, it will automatically shut off.

Assembly (fig.1)

1. Remove all parts from the box.
2. Turn the main unit upside down.
3. Feed the power cord through the opening in the base, then attach the base to the main unit by turning it clockwise until secure.
4. Place the power cord into the grooves on the base.
5. Turn the assembled product upright.

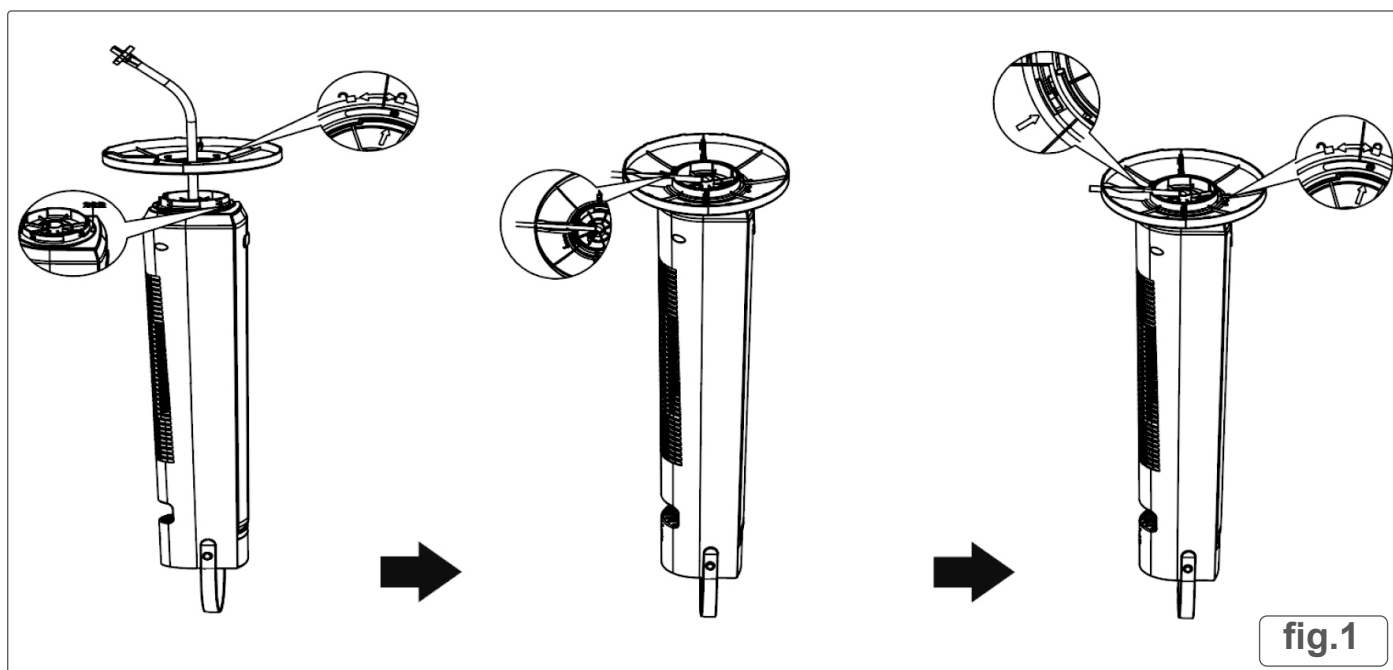 


fig.1

Operation

- Refer to the Features section for reference.

• Power On

- Plug the heater into a socket outlet. Press the **ON/OFF** button. After the unit beeps, the indicator light will illuminate and the heater will begin operating.

• ON/OFF Button

- Press this button to turn the heater on.
- Press it again to turn the heater off.

• Heat Button

Press this button repeatedly to cycle through the following modes:

- **LOW** heat.
- **HIGH** heat.
- Fan Only (F) mode.

• Timer Button

- Press the timer button to set the timer.
- The display will show 0H when timer setting begins.
- Each press increases the timer by 1 hour.
- The timer can be set from 1 to 12 hours.
- After 12H, the next press returns the setting to 0H (timer off).
- The selected timer will be saved automatically if no buttons are pressed for 3 seconds.
- The display will then return to showing the temperature.

• Oscillation Button (OSC.)

- Press this button to start left-right oscillation. Press it again to stop oscillation.

• Temperature Button (TEMP.)

- Press this button to set the target temperature.
- Each press increases the temperature by 1°C.
- The adjustable temperature range is 20°C to 40°C.
- The selected temperature is saved automatically if no buttons are pressed for 5 seconds.

• Light Button

- Press this button to turn the **LED** light on or off.

• ECO Mode

- Press this button to enable or disable **ECO** mode.

When ECO mode is enabled:

- The heater operates automatically based on the room temperature.
- If the ambient temperature is below 18°C, the heater operates in **HIGH** heat mode (the display shows "2d" for 3 seconds).
- Once the ambient temperature reaches 18°C, the heater switches to **LOW** heat mode.
- When the ambient temperature reaches 22°C, heating stops.
- The display turns off and the fan continues running for 15 seconds to cool the heating element.
- The heater will restart automatically when the ambient temperature falls below 22°C.

NOTE: This cycle repeats automatically to maintain a room temperature of approximately 22°C.

• Remote Control

The remote control provides the same functions as the control panel. Press the corresponding buttons to operate the heater.

NOTE: Before operating the remote control, remove the battery insulation strip. Refer to fig.2.

• Auto-Off Display

 
 
The display screen automatically turns off after 3 minutes without operation. Press any button to wake the display.

NOTE: When the heater is turned off, the fan continues running for approximately 30 seconds to cool the internal heating element. The ambient temperature shown on the display is for reference only and may not be completely accurate.

• Maintenance

• Replacing the Coin Cell Battery:

- Turn the remote control over and press the battery tray release tab while pulling out the battery holder. Remove the old coin cell battery and insert a new battery of the same type, ensuring that the positive (+) side faces upward. Slide the battery holder back into the remote control until it clicks securely into place. Use only the specified battery type and keep coin cell batteries out of the reach of children. Refer to fig. 3.

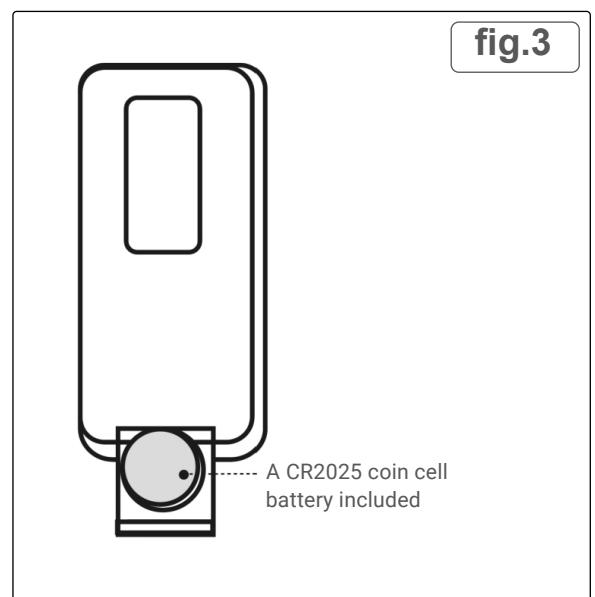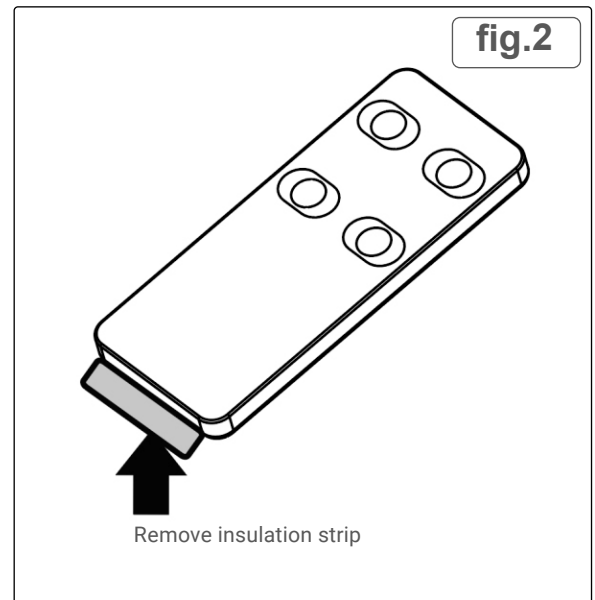

- **Before cleaning or performing any maintenance, switch off the appliance by pressing the ON/OFF button and unplug it from the power outlet.**

Cleaning the Exterior

- Clean the exterior surfaces with a soft, clean cloth. If necessary, use a mild detergent solution.
- **DO NOT** use corrosive, abrasive, or alkaline cleaning agents.
- **DO NOT** clean internal components, such as the motor or control circuitry, with water or solvents.
- Ensure that no water enters the appliance, particularly the control panel or electrical components, as this may cause a short circuit.
- Dry all surfaces thoroughly after cleaning.
- Never immerse the appliance, power cord, or plug in water or any other liquid.

Cleaning the Air Filter

To maintain optimal performance, clean the air filter regularly to prevent dust and dirt build-up.

1. Unscrew and remove the rear filter cover.
 2. Remove the air filter from its holder.
 3. Wash the filter in lukewarm water (approximately 40°C) with a mild detergent.
 4. Rinse thoroughly with clean water.
- Allow the filter to air dry completely before reinstalling. **DO NOT** dry the filter in direct sunlight or with a heat source.
- NOTE:** It is recommended that the air filter be cleaned every two months.
- To prolong the life of the filter, allow it to dry after each use of the cooling function. After switching off the cooling function, leave the fan running for approximately 15 minutes to dry the filter.

Cleaning the Rear Air Intake Mesh

- Remove the rear air intake mesh and clean it with clean water and a soft brush. Allow it to dry before carefully reinstalling it in the holder.
- **DO NOT** use detergents, as they may reduce the service life of the mesh.

Seasonal Storage

Before storing the appliance for an extended period:

- Cover the appliance and store it upright in a cool, dry place.
- NOTE:** If the appliance fails to operate correctly or emits an unusual odour, disconnect it from the power supply immediately and contact the Baridi after-sales service department for assistance.

End of Life

- At the end of its service life, this electric fireplace heater should not be disposed of with general household waste. As an electrical appliance, it must be recycled in accordance with local Waste Electrical and Electronic Equipment (WEEE) regulations to prevent environmental harm and ensure safe handling of components. Improper disposal may lead to environmental pollution or potential hazards due to electrical parts. Always take the unit to an authorised recycling facility or collection point.



Environment Protection, Waste Electrical and Waste Electronic Equipment Regulations (WEEE)



Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Product Information Sheet. Local Space Heaters, Electric.

SUPPLIER_NAME_OR_TRADEMARK Dellonda EU Ltd.
 DELEGATED_ACT 2024/1103/EU
 MODEL_IDENTIFIER DH437

Electric Ceramic Tower Heater 1000/2000W, 25" - Cream

ADDRESS Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
 PHONE_NUMBER 01284 757 500
 EMAIL_ADDRESS TechnicalCompliance@dellonda.co.uk

Heat output

Type of heat input, for electric storage local space heaters only

Nominal heat output kW	2.000	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative) kW	1.350	manual heat charge control with room and/or outdoor temperature feedback	NA
Maximum continuous heat output kW	2.000	electronic heat charge control with room and/or outdoor temperature feedback	NA
		fan assisted heat output	NA

Power consumption

Other control options

Nominal heat output W	2000	Single stage heat output, no room temperature control	No
In standby mode W	0.2	Two or more manual stages, no room temperature control	No
In idle mode W	0.2	With mechanical thermostat room temperature control	No
In network standby W	NA	With electronic room temperature control	Yes
Standby mode with display of information of status	No	With electronic room temperature control plus day timer	No
Seasonal space heating energy efficiency in active mode %	91.5	With electronic room temperature control plus week timer	No

Other control options

Room temperature control, with presence detection	No
Room temperature control, with open window detection	No
with distance control option	No
with adaptive start control	No
with working time limitation	Yes
with black bulb sensor	No
with self-learning functionality	No
with control accuracy	No

Suppliers website <https://www.sealey.co.uk/>