


Baridi 12 Bottle Cooler, Fridge, Touch Screen, LED, Energy Class F, Black

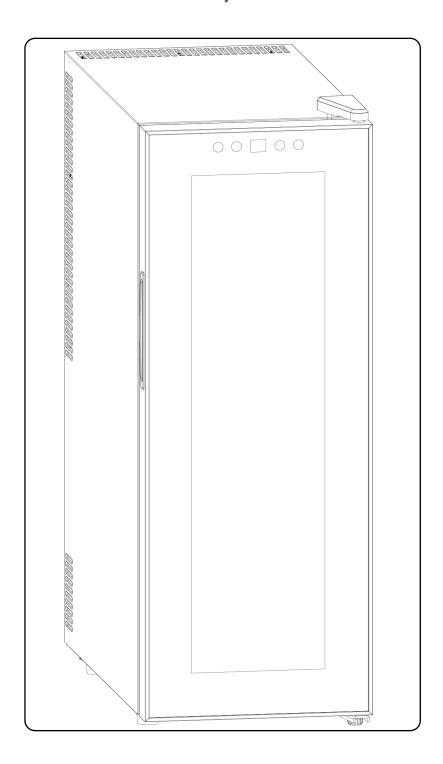

Model No. DH73.V3

Thank you for purchasing a Baridi product from the Dellonda range. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully and note any safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.





Refer to instructions

Indoor use only

ELECTRICAL SAFETY

- WARNING! It is the user's responsibility to check the following:
- Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- **Electrical safety information.** It is important that the following information is read and understood:
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- **Important**: Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
- **DO NOT** pull or carry the appliance by the power cable.
- DO NOT pull the plug from the socket by the cable.
- DO NOT use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or is replaced immediately by a qualified electrician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use. It must then be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that repairs are carried out by a qualified electrician.

GENERAL SAFETY

- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- WARNING: Ensure the supply cord is not trapped or damaged.
- WARNING: DO NOT locate multiple portable socketoutlets or portable power supplies at the rear of the appliance.
- This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; holiday homes, hotels and other residential settings; and catering and similar non-retail applications.
- Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.

- Children shall NOT play with the appliance.
- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- The appliance shall be disconnected from its power source during service and when replacing parts and, if that the removal of the plug is foreseen, it shall be clearly indicated that the removal of the plug has to be such that an operator can check from any of the points to which he has access that the plug remains removed.
- To avoid contamination of food, please respect the following instructions:
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance. If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance."

INTRODUCTION

• Thermoelectric cooling eliminates humming, uses less electricity and causes less vibration, making it ideal for the home environment. Temperature range between 12-18°C, controlled by touchscreen controls. Features an internal LED light. At a whisper quiet 25dB this fridge is suitable for placing under-counter or look great on top of a kitchen counter. Accommodates Max. Bottle Height: 33cm. Annual energy consumption 92 KWh/a. Size (W x D x H): 27.3 x 54.7 x 74cm.

SPECIFICATION

Model No.	DH73.V3
Capacity:	12 Bottles
Energy Rating:	F
Supply:	230V~50Hz
Maximum Bottle Height:	330mm
Plug Type:	3-Pin BS
Power Cable Length:	2m
Product Dimensions (W x D x H):	273 x 547 x 740mm
Power:	55W
Climate Class:	N
Refrigerant:	R600a(25g)
Foaming Gas:	Cyclopentane
Lamp Power:	0.5W
Temperature Range:	12-18°C
Volume:	38L

INSTALLATION

- The unit is designed to be free-standing. Ventilation Space - a minimum space of 20mm is required for the rear and top of the fridge, 30mm for both sides and 50mm under the base. This will maximise the efficiency, performance and life of the fridge and also ensure that there is sufficient space for the hinge to operate effectively. DO NOT locate the unit in a damp or moist location.
- Ensure that the floor surface is strong and stable enough to support the unit when it is fully loaded.
- Level the unit when in location by using the adjustable levelling feet in each corner.
- Once in position allow the unit to rest for an hour before turning it on.
- · Allow the unit 2 3 hours to reach set temperature after switching on before placing any items in the compartment.

OPERATION



- To turn the unit on, press the $^{\textcircled{0}}$ symbol.
- The unit's control panel will automatically lock out after 20 seconds of non-use.
- To unlock the control panel hold the symbol for approximately 2 seconds when an audible noise will be emitted to signify an active state.
- To turn on internal light press symbol. The light will turn off after 10 minutes.
- · To change the temperature units displayed, press and hold the */* symbol for approximately 2 seconds.
- To set the required operating temperature use the symbol to increase it, and the symbol to decrease it. Each press will cause a 1° change in the set value.

MAINTENANCE

- IMPORTANT: professional repair only.
- · Remove the power plug from the supply when performing cleaning or maintenance.
- DO NOT use abrasive or chemical cleaning materials on any surface of the unit.
- · Wipe interior and exterior surfaces with a damp cloth and dry thoroughly with a clean dry cloth.
- For more soiled surfaces use a neutral detergent, wipe down with a clean damp cloth and dry thoroughly with a clean dry cloth.

DISPOSAL

 At the products end of life, it must be correctly disposed of in accordance with local regulations in force.

TROUBLESHOOTING

SYMPTOM	SOLUTION
Unit does not operate.	Not plugged in. Fuse/circuit breaker failure.
Turns on and off frequently. Poor cooling.	Room temperature higher than normal. Door opened too often. Door not properly closed. Temperature control incorrectly set. Door gasket not sealing. Not enough space around unit.
Vibrations	Check to assure unit is level.
Noisy unit	Contraction/expansion of panels. Unit not level. Check fan operation. Check heat pump.
Door will not close properly	Unit not level. Gasket distorted. Internals out of position.



Environment Protection, Waste Electrical and Waste Electronic Equipment Regulations (WEEE)



Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Dellonda Limited, Sole UK Distributor of Baridi

Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR





) 01284 757575 (🔀) support@dellonda.co.uk (🌐) www.dellonda.co.uk

