



INSTRUCTIONS FOR: 750KG EXHAUST SUPPORT STAND MODEL NO: **ES750**

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

⚠ IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.

1. SAFETY INSTRUCTIONS

- ✓ Ensure the exhaust stand is in good order and condition. DO NOT use if damaged.
- ✓ Ensure you familiarise yourself with the product before use.
- ✓ Ensure that vehicle is properly supported with handbrake on.
- x DO NOT use on soft ground or tarmacadam. Use on concrete only.
- x **DO NOT attempt to support more than 750kg.**
- x **DO NOT use this product as an axle stand.**
It is designed to support an exhaust system only and must never be used as a support for a vehicle.
- x Do not attempt to use this product for a task it is not designed to perform.

2. INTRODUCTION AND SPECIFICATION

Screw adjustment with easy-to-use spinner nut and ball bearing thrust race for smooth operation. Removable base for easier storage. Adjustable over 670mm.

Capacity:750kg Min. Height:1390mm Max. Height:2060mm

3. ASSEMBLY

Unpack the product and check contents. Should there be any damaged or missing parts contact your supplier immediately.

- 3.1 Screw fixing tube (2) into the base (1).
- 3.2 Insert threaded rod (3) up through the main tube (4), ensuring that both the threaded rod and the main tube are the correct way up (refer to parts diagram).
- 3.3 Place the bearing (5) into the top of the rim of the main tube and screw on the adjusting handle (6), with the grooves in the handle pointing downwards.
- 3.4 Situate the saddle (7) onto the top of the threaded rod and secure with the supplied bolt (8).
- 3.5 Slide the main tube construction into the base assembly, lining up the pin holes each side of the tubes.
- 3.6 Push the securing pin (9) through one of the supplied washers (10), then through the hole in the tube.
- 3.7 Slide the second washer onto the other end of the pin and secure with the R-clip (11).

4. OPERATION

- WARNING! Before use ensure you have read, understood and apply section 1 “Safety Instructions”.**
- 4.1 POSITIONING STAND BENEATH EXHAUST SYSTEM.**
- WARNING! Before use ensure the exhaust weight and size does not exceed the capacity of the stand.**
- WARNING! Ensure the vehicle from which the exhaust is to be removed is correctly positioned, handbrake applied and raised to allow the exhaust stand to be positioned correctly.**
- 4.1.1 Ensure there are no other persons around or under the vehicle.
- 4.1.2 Ensure saddle is in its lowest position and centrally position stand beneath vehicle’s exhaust.
- 4.1.3 Rotate handle (6) in a clockwise direction to raise the saddle.
- 4.1.4 When saddle is just beneath the exhaust re-adjust alignment if necessary to centralise the saddle.
- 4.2 LIFTING/LOWERING THE EXHAUST.**
- WARNING! Ensure the load is central and stable on the stand saddle and load is fixed in place before attempting to lift or lower.**
- 4.2.1 Rotate the handle in an anti-clockwise direction to lower the saddle, rotate the handle in a clockwise direction to lift the saddle.
- ▲ **DANGER! DO NOT use on tarmacadam, or any soft surface as stand may sink or topple. Serious personal and/or fatal injury may result.**
- ▲ **DANGER! If stand tips or leans STOP WHAT YOUR ARE DOING. MOVE QUICKLY TO A SAFE DISTANCE. DO NOT TRY TO HOLD OR STEADY STAND.**

5. MAINTENANCE

- 5.1. When the stand is not in use, the saddle must be in the lowest position.
- 5.2. Keep the stand clean and wipe off any oil or grease. Lubricate all moving parts on a regular basis.
- 5.3. Before each use, ensure components are in good working order. If any suspect item is found remove stand from service and take necessary action to remedy the problem.
DO NOT use the stand if you believe it has been subjected to an abnormal load or shock load . If in doubt contact your local service agent.
- 5.4. Periodically check the stand for signs of corrosion. Clean exposed areas with a clean oiled cloth.
IMPORTANT: All other maintenance and repair must only be undertaken by fully qualified personnel. Contact your local authorised service agent.
IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE STAND.