

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS


- p **WARNING!** Ensure all health and safety, local authority and general workshop practice regulations are strictly adhered to when using this equipment.
- 3 Before using the stand ensure it is in sound condition and good working order.
- 3 Replace or repair damaged parts. Use recommended parts only. Non authorised parts may be dangerous and will invalidate the warranty.
- 3 Keep the Stand clean for best and safest performance.
- 3 Locate the stand in an adequate working area for its function, keep area clean and tidy, free from unrelated materials and ensure there is adequate lighting.
- 3 Use on a firm, level surface capable of sustaining the Stand and the load.
- 3 Maintain correct balance and footing. Ensure the floor is not slippery and wear non slip shoes.
- 3 Ensure all non essential persons keep a safe distance whilst the Stand is in use.
- 3 Lock Mounting Plate in position before fixing a load, ensure the load is centred and securely mounted on the locking plate.
- 3 Ensure the Stand and the load are stable.
- 3 To move a loaded stand and push from behind the main post of the stand so that the front wheel is at the head of the load.
- 7 **DO NOT** pull the unit backwards or push from the load side as this may cause the stand to tip.
- 3 Ensure area over which the stand is to be moved is clear of obstructions.
- 7 **DO NOT** operate unit if damaged.
- 7 **DO NOT** allow untrained persons to operate the stand.
- 7 **DO NOT** exceed the rated capacity of 900kg.
- s **DANGER: DO NOT** work under an engine mounted on the Stand.
- 7 **DO NOT** use the Stand for purposes other than which it is designed.
- 3 When not in use store in a safe, dry, childproof area.

2. SPECIFICATIONS

SPECIFICATIONS:
 Max capacity 900kg
 Width 820mm
 Length 1020mm
 Height 990mm
 Weight 59kg

3. ASSEMBLY

- 3.1. Attach the base frame (A) to each leg (B) with nuts, washers and bolts (I & J).
- 3.2. Slot main post (C) between brackets in base (A) and loosely secure with bolt (K).
- 3.3. Fit main post braces (D) with bolt (L) and secure to base frame (A) with bolts (L) and tighten both bolts.
- 3.4. Fix mounting arms (E) to head assembly (F) with bolts (M).
- 3.5. Pass head assembly (F) extension through the head of main post (C) and lock with pin (G).
- 3.6. Pass head assembly handle (H) through the end of the assembly extension and check that handle grips are correctly pushed onto the handle.
- 3.7. Check that all nuts and bolts are tight and that the frame is not damaged. The stand is now ready for use.

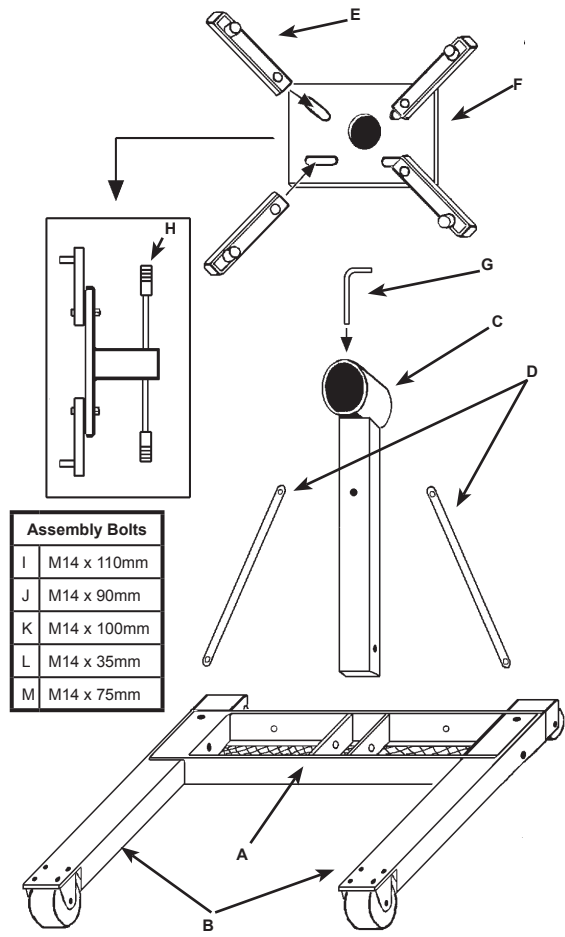

Parts support is available for this product. To obtain a parts list and diagram please log on to www.sealey.co.uk, email sales@sealey.co.uk or phone 01284 757500

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.
IMPORTANT: No liability is accepted for incorrect use of this equipment
WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.
INFORMATION: Call us for a copy of our latest catalogue on 01284 757525 and leave your full name and address including your postcode.