



ENGINE STAND DRAIN PAN CRADLE

MODEL NO: ESPT01

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear protective
gloves



Wear safety
footwear



Wear protective
clothing

1. SAFETY

- ☐ **WARNING!** Ensure all Health and Safety, local authority, and general workshop practice regulations are strictly adhered to when using this equipment.
- ☒ **DO NOT** use unit if damaged.
- ☒ **DO NOT** exceed the rated capacity of the cradle.
- ☒ **DO NOT** use the cradle for purposes other than those for which it is designed.
- ☒ Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ☒ Keep the cradle clean for best and safest performance.
- ☒ Locate the cradle in a suitable work area. Keep area clean and tidy and free from unrelated materials. Ensure there is adequate lighting.
- ☒ Use with an engine stand on a firm, level surface.
- ☒ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ☒ Ensure all non-essential persons keep a safe distance whilst using with an engine stand.
- ☒ When not in use store in a safe, dry, childproof area.

2. INTRODUCTION

Adjustable to fit a majority of engine stands on the market. The angle of the connecting bracket can be adjusted to keep the drain pan level. The span of the drain pan supports can be adjusted to accommodate a majority of current drain pans. The height can be adjusted to bring the drain pan closer to the mounted engine. No more mess as the waste fluids hit the spline as on current engine stand drain pans.


3. SPECIFICATION

Model No: ESPT01
Capacity: 30kg

Nett Weight: 6kg

4. ASSEMBLY

FIG.1

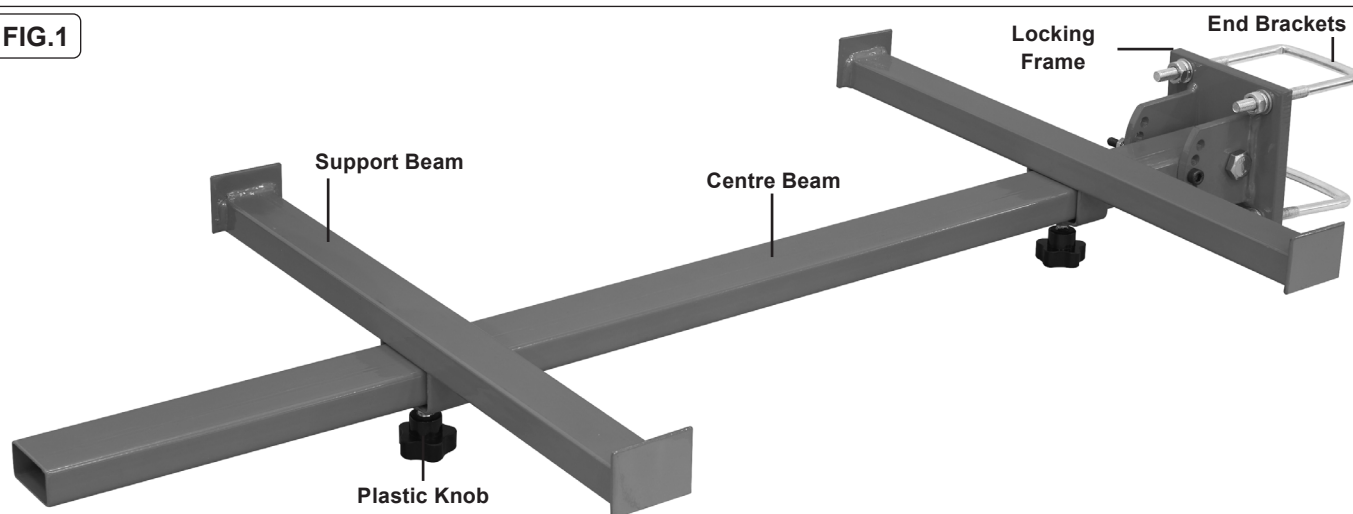

NOTE: numbers in brackets refer to the attached parts information.

- 4.1. Secure the Locking Frame (2) to a compatible engine stand using the End Brackets (1) and fixings shown.
- 4.2. Attach the Centre Beam (6) to the Locking Frame (2) using the fixings shown.
- 4.3. Slide the Support Beams (12) onto the Centre Beam (6), and tighten Plastic Knobs (14).
- 4.4. To adjust the angle of the Centre Beam (6), remove and replace Hex Head Bolt (8).



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk