



INSTRUCTIONS FOR
**STEEL FOLDING LOADING RAMPS 500KG
CAPACITY PER PAIR**
MODEL NO: **FCR500**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
Instruction
Manual



Wear protective
gloves

1. SAFETY

- WARNING!** The warnings, cautions and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- ✓ Read unpacking instructions Section 4 below before removing ramps from packaging.
- ✗ **DO NOT** overload ramps, maximum capacity single = 250kg, pair = 500kg. All loads must be evenly distributed.
- ✓ Always use the safety strap to securely fasten the ramp to the vehicle to prevent the ramp slipping off the tailgate.
- ✓ Carefully roll or winch equipment up or down the ramp. Never drive or ride your equipment while loading or unloading.
- ✓ Make sure the ramp is aligned with the wheels of the equipment being loaded or unloaded.
- ✓ Always load or unload on a solid, level, well lit and stable surface with the vehicle in gear the parking/emergency brake on and the engine off.
- ✓ Wear gloves. Remove ill fitting clothing, remove ties, watches, rings and other loose jewellery and contain long hair.
- ✓ Maintain correct balance and footing, do not over reach. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ Use as a loading ramp only.
- ✓ Ramp surfaces must be clean, dry and free from oil, grease and water.
- ✓ Maximum height of the tailgate that the ramp attaches to is 76cm.
- ✓ Inspect ramp before each use. Check fasteners for tightness, replace any worn or damaged parts. Replace safety strap if webbing is frayed or worn.
- ✗ **DO NOT** attempt to use a ramp that is damaged in any way.
- ✗ **DO NOT** modify the ramp in any way.
- ✓ Proper care and maintenance of the ramp is critical to safety.
- ✓ Proper use of this product is critical to safety. Improper use may result in personal or property damage which is not covered by the warranty.

2. INTRODUCTION

Manufactured from strong, durable powder coated steel. Provides safe and easy ramp access for in line and multi axle vehicles. Suitable for loading/unloading motorbikes, quads, ride on mowers and mini tractors from vans and trailers. Features a strap and hook to help secure ramps while in use. Folding design allows compact storage when not in use.

3. SPECIFICATION


Model no: **FCR500**
Folded dimensions L x W x H: 890 x 230 x 150mm
Extended dimensions L x W x H: 2000 x 230 x 50mm
Maximum capacity single/pair: 250/500kg
Weight single/pair: 13.5/27.5kg
Maximum height of tailgate from ground: 76cm

4. UNPACKING RAMPS

- 4.1. Carefully lift one ramp at a time using handle.
- 4.2. Set ramp on a flat surface. **Note:** arrow indicates which side is up.
- 4.3. Release handle by sliding it upwards.
- 4.4. Unfold top section of ramp, then the other section of ramp.
- 4.5. Remove the stopper and angle ramp from within.

5. OPERATION

- 5.1. Made sure that loading is carried out on a hard, level and stable surface with the vehicle in gear, the parking/emergency brake on and the engine switched off.
- 5.2. Unfold and place the lip edge of the ramp against the tailgate of the vehicle. (Tailgate should be no more than 76cm in height or the incline will be too steep.
- 5.3. Secure the ramp to the vehicle being loaded using the adjustable strap. Test the ramp by pulling backwards on it. Make sure it does not slide back or disengage from the loading surface.
- 5.4. Once the ramp is secure and the area is safe to proceed with loading, move the vehicle to be loaded behind the ramps and centre the load between both ramp rails.
- 5.5. Load the vehicle, make sure that the ramp is sustaining the load and not bowing from the weight.
- 5.6. Continue until the vehicle is fully loaded. Secure and then tie down the load.
- 5.7. Unhook the adjustable strap and fold the ramp.
- 5.8. Store in a clean, dry and childproof environment.

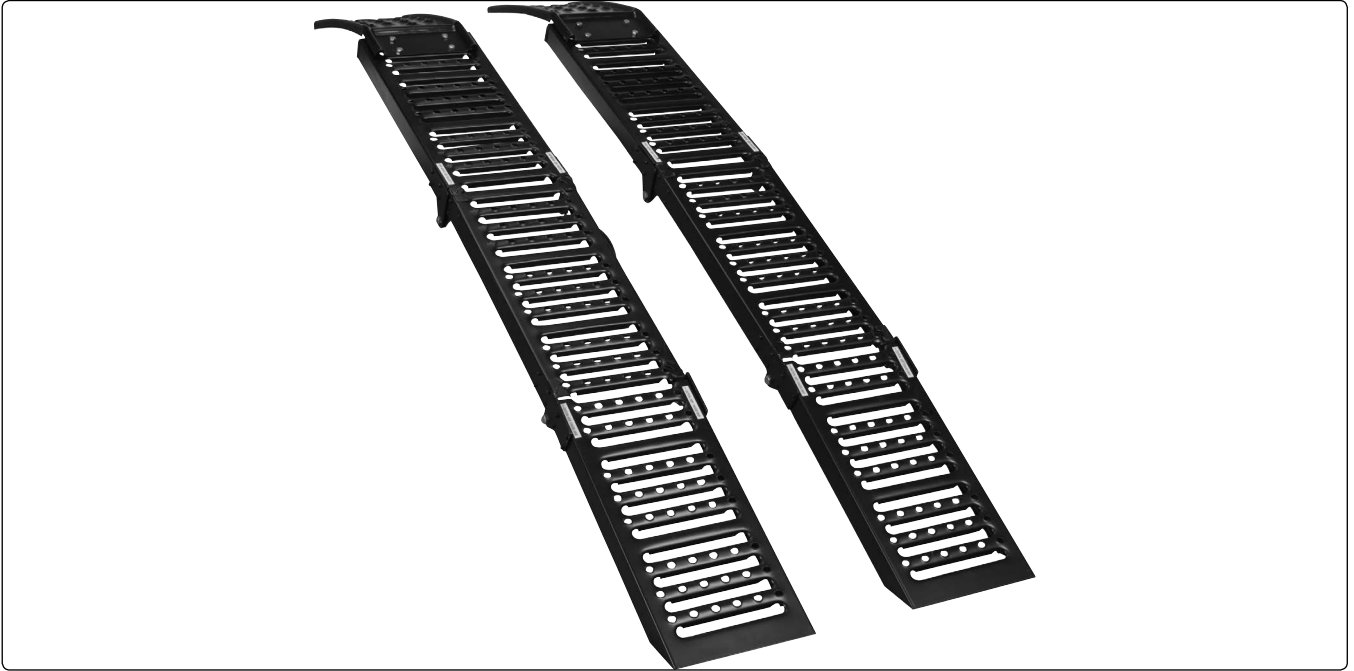

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group.
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk.
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk