



FORKLIFT LIFTING HOIST 1000KG CAPACITY

MODEL NO: **FH01**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear protective
gloves



Wear safety
footwear

1. SAFETY

- ✓ Ensure that the lifting hoist is in good working order. Take action for immediate repair. The use of unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Operate the lifting hoist in a suitable, well lit work area.
- ✓ Keep work area clean and tidy and free from unrelated materials.
- ✓ Ensure all non-essential persons keep a safe distance whilst lifting.
- ✓ Always screw clamp frame to forks.
- ✗ **DO NOT** use to lift personnel.
- ✗ **DO NOT** carry loads over personnel.
- ✗ **DO NOT** leave suspended loads unattended.
- ✗ **DO NOT** use the lifting hoist if damaged.
- ✗ **DO NOT** allow untrained persons to operate the lifting hoist.
- ✗ **DO NOT** exceed the rated capacity of the lifting hoist.
- ✗ **DO NOT** manually carry assembled hoist by the hook.
- ✓ When not in use, store in a safe, dry, childproof area.
- ✓ Before lifting the load ensure that the forks are in the lowest practical position, that there are no obstacles which may snag the load whilst it is being lifted and that the area above the forks is clear.
- ✓ To avoid injury, be fully aware of your own and other persons locations in relation to the lifting, and lowering, of the load.
- ✓ Ensure the centre of gravity always remains inside the forks.
- ✗ **DO NOT** harness the load at an angle or use any attachments not verified as fit for purpose.
- ✗ **DO NOT** allow the load to swing during lifting/transporting.
- ✗ **DO NOT** allow the load to drop suddenly. Lower load with care, ensuring that you are fully aware of the condition of the surface onto which the load is to be placed.
- ✗ **DO NOT** use this product to perform a task for which it is not designed.
- ✗ **DO NOT** use whilst under the influence of drugs, alcohol or intoxicating medication.
- ✗ **DO NOT** climb on the forks.
- ☐ **WARNING!** Failure to heed safety and warning instructions may result in damage and/or personal injury and will invalidate the warranty.

2. INTRODUCTION

Manufactured from heavy-duty steel for added strength. Easily converts a forklift into a mobile crane. Fitted with an opening hook for use with multiple attachments. Safely secures to forklift using 2 heavy-duty tommy bar screws.

3. SPECIFICATION



Maximum Capacity.....	1000kg
Fork Opening Pitch.....	250mm
Fork Size:	140 x 65mm
Overall Size	440 x 120 x 160mm
Weight:	14kg

4. ASSEMBLY

- 4.1. Check contents from list and fig.1. In the unlikely event of missing or damaged parts consult your Sealey dealer immediately.
- 4.2. Initial assembly with the fork lift truck primed for use as in fig.2, the forks pitched at 250mm centrally positioned and raised to a convenient height.
- 4.3. Offer the lifting hoist frame (1) on to the forks and slide toward the main body of the fork lift as far as the apparatus to be lifted will allow.
- 4.4. Clamp the lifting hoist frame with the two tommy bar screws (4).
- 4.5. Remove the shackle-pin and loop the shackle (3) through the hook eye.
- 4.6. Offer the hook (2) and shackle up to the lifting hoist frame lug and insert the shackle pin. Tighten with a tommy bar or spanner

5. MAINTENANCE

- 5.1. Inspect items after each use for integrity, missing parts and damage.
- 5.2. Clean with dry or lightly oiled cloth and store indoors.

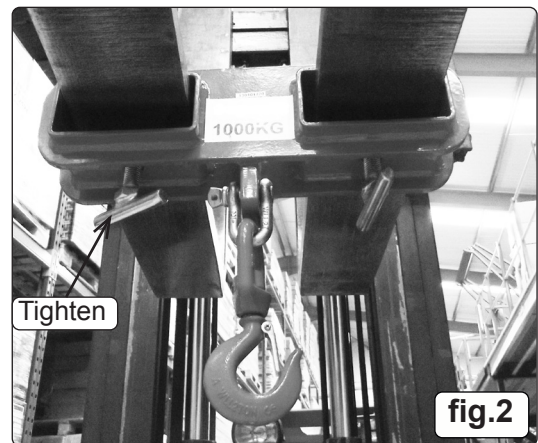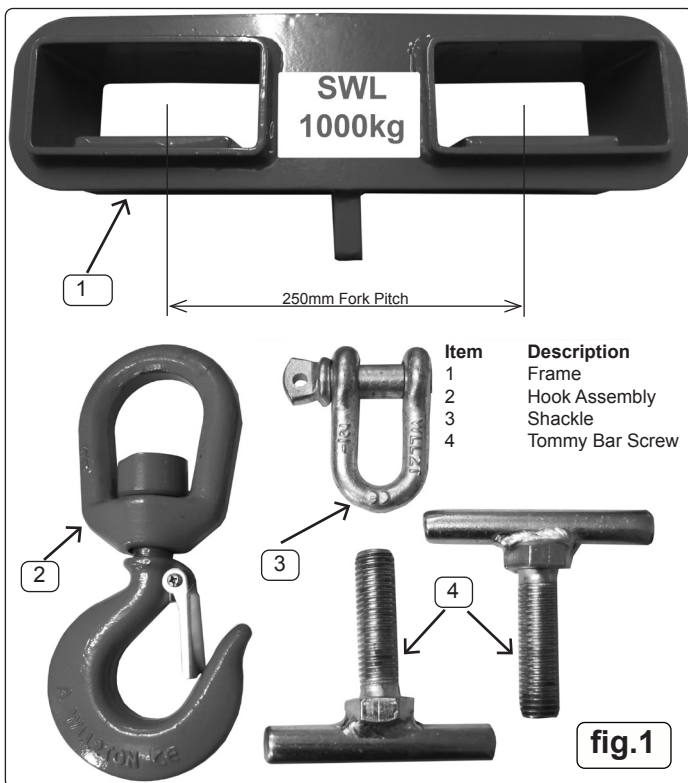

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk