

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Decide on a safe location and fix mounting flange securely. A 4mm hole in lantern frame boss enables fixing to vertical stem with self tapping screw (not supplied).
- ✓ The lamp is designed as a beacon not a floodlight.
- ✗ **DO NOT** attempt to replace the bulb.
- ✗ **DO NOT** use the solar lamp for any purpose other than for which it is designed.
- ✗ **DO NOT** dis-assemble the solar panel.



Model GL60



Model GL61

2. INTRODUCTION


Lightweight composite LED solar powered garden lights. Traditional style design, with a black finish and an old English horse drawn coach lantern look. Fitted with "smart time" technology, allowing the lamps to automatically switch on during dusk and off at dawn, with up to 8 hours illumination time. All garden lamps are rain-proof. Supplied with mounting flange and four fixing screws and fixing plugs.

3. OPERATION

- 3.1 An arrow on the lamp frame indicates a tab position and finger lifting lip for access to I/O switch. Note tab positions in canopy and lamp frame when refitting.
- 3.2 Gently lift off the canopy and bulb module (Fig.1) and operate switch located in canopy border (Fig.2).
- 3.3 **Changing the batteries** (when batteries no longer sustain a satisfactory charge)
 - 3.3.1 Remove the 4 corner screws (Fig.2) and the bulb mounting plate to reveal battery housing. Beware bulb (diffuser) is fragile.
 - 3.3.2 Remove all 3 "AAA" rechargeable batteries and replace with 3 new "AAA" rechargeable batteries. Observe polarity.
 - 3.3.3 Replace bulb mounting plate and 4 corner screws. Beware bulb (diffuser) is fragile.



Lamp canopy removal (no tools required)

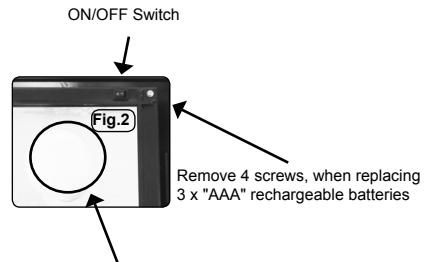

Bulb (diffuser housing 6 LED's)



Environmental Protection. Recycle unwanted packaging materials or dispose of in a manner which is compatible with the environment. When the product is no longer required, dispose of in an environmentally protective way. Open battery compartment as described in Section 3.3.2. and dispose of batteries according to local authority guidelines.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

