



# GENERATION SERIES COMPACT AIR RATCHETS

## 1/4" & 3/8" DRIVE

MODEL NO'S: **GSA634, GSA635**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear eye protection



Wear protective gloves



Wear ear protection

### 1. SAFETY

- ✓ Follow all workshop safety rules, regulations, and conditions when using wrench.
- ❑ **WARNING!** Disconnect from air supply before changing accessories or servicing.
- ✓ Maintain the wrench in good condition and replace any damaged or worn parts. Use genuine parts only. Non-authorized parts may be dangerous and will invalidate the warranty.
- ❑ **WARNING!** Check correct air pressure is maintained and not exceeded. We recommend 90psi.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use and ensure that all connections are secure.
- ✓ Wear approved safety eye/face shield, ear defenders, and hand protection.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and non essential persons away from the working area.
- ✗ **DO NOT** use the wrench for a task it is not designed to perform.
- ❑ **WARNING! DO NOT** use wrench if damaged or thought to be faulty. (Contact Service Agent).
- ✗ **DO NOT** use wrench unless you have been instructed in its use by a qualified person.
- ✗ **DO NOT** expose the comfort grip to excessive heat.
- ✗ **DO NOT** carry the wrench by the air hose, or pull the hose from the air supply.
- ✗ **DO NOT** operate wrench if you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** carry wrench with your hand on the power trigger in order to avoid unintentional starting.
- ✗ **DO NOT** direct air from the air hose at yourself or others.
- ✓ When not in use disconnect from air supply and store in a safe, dry, childproof location.

### 2. INTRODUCTION

Generation Series twin pawl compact air ratchet wrenches. Feature packed, with contoured handle to insulate user from chill and vibration. Finger operated trigger and textured grip allows added control, even with greasy hands. Low noise exhaust adjusts 360°, keeping airflow away from operator. Four-position air regulator integrated into air inlet adjusts torque output. Ideal for working in engine bays or other places with restricted access.

### 3. SPECIFICATION



MODEL	GSA634	GSA635
Drive size	1/4" Sq	3/8" Sq
Max torque	50lb.ft	50lb.ft
Air consumption	5cfm	5cfm
Operating pressure	90psi	90psi
Air inlet size	1/4" BSP	1/4" BSP
Weight	0.75kg	0.75kg
Noise-Power	97.28dB(A)	97.28dB(A)
Noise-Pressure	86.28dB(A)	86.28dB(A)
Vibration	4.3m/s <sup>2</sup>	4.3m/s <sup>2</sup>
Uncertainty	0.56m/s <sup>2</sup>	0.56m/s <sup>2</sup>

### 4. PREPARATION

- 4.1. Air Supply. (Recommended hook-up procedure is shown in fig 1.)
  - 4.1.1. Ensure wrench air valve (or trigger) is in the "off" position before connecting to the air supply.
  - 4.1.2. You will require an air pressure of 90psi, and an air flow according to specification.
    - ❑ **WARNING!** Ensure the air supply is clean and does not exceed 90psi while operating the wrench. Too high an air pressure and unclean air will shorten the product life owing to excessive wear, and may be dangerous, causing damage and/or personal injury.
  - 4.1.3. Drain the air tank daily. Water in the air line will damage the wrench.
  - 4.1.4. Clean air inlet filter weekly.
  - 4.1.5. Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose diameter should be 1/4" I.D. and fittings must have the same inside dimensions.
  - 4.1.6. Keep hose away from heat, oil and sharp edges. Check hose for wear, and make certain that all connections are secure.


## 4.2. Couplings.

Vibration may cause failure if a quick change coupling is connected directly to the wrench. To overcome this, connect a leader hose to the wrench. A quick change coupling may then be used to connect the leader hose to the air line recoil hose. See figs. 1 & 2.

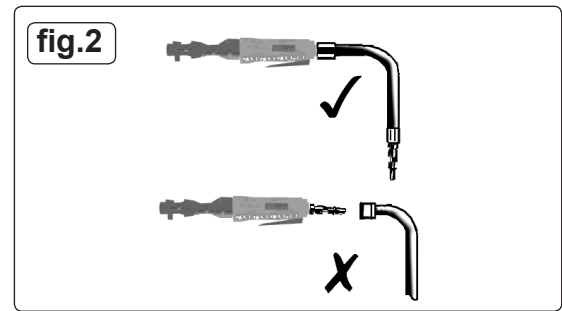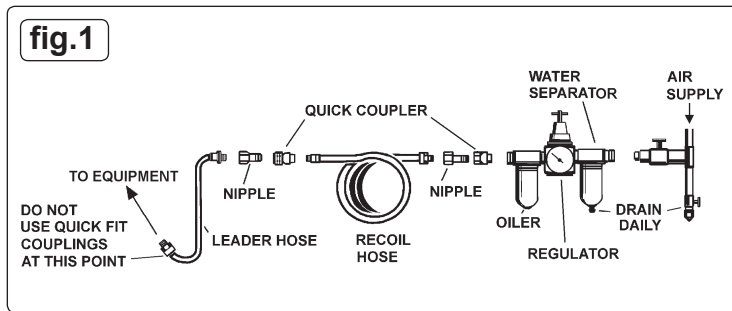

## 5. OPERATION

- **WARNING! Ensure you read, understand and apply safety instructions before use.**
- 5.1. **Connect the wrench to the air hose as indicated in section 4.**
- 5.2. **Set the integral air regulator to one of the four positions indicated. (See fig.3)**
- 5.3. **Place the socket over the subject nut and depress the trigger to operate the wrench.**
- 5.4. **To change wrench direction turn the switch on the head of the wrench. (See fig.3)**
- × **DO NOT** use any additional force upon the wrench in order to remove a nut.
- × **DO NOT** allow wrench to free run for an extended period of time as this will shorten its life.
- 5.5. The direction of the air flow from the exhaust holes in the sleeve can be altered by rotating the whole sleeve to a suitable position. The sleeve can be rotated continuously through 360° (fig.3).

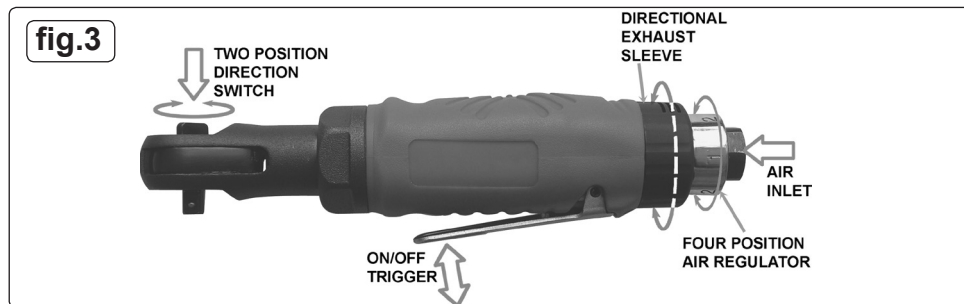

## 6. MAINTENANCE

- **WARNING! Disconnect wrench from air supply before changing accessories, servicing or performing maintenance. Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.**
- 6.1. If the air system does not have an oiler, lubricate the air wrench daily with a few drops of Sealey air tool oil dripped into the air inlet to prolong its life.
- 6.2. Clean the wrench after use. **DO NOT** use worn or damaged sockets.
- 6.3. **Loss of power or erratic action may be due to the following:**
  - a) Excessive drain on the air line. Moisture or restriction in the air pipe. Incorrect size or type of hose connectors. To remedy check the air supply and follow instructions in chapter 3.
  - b) Grit or gum deposits in the wrench may also reduce performance. If your model has an air strainer (located in the area of the air inlet), remove the strainer and clean it. Flush the wrench out with gum solvent oil or an equal mixture of SAE No 10 oil and paraffin. Allow to dry before use.
- 6.4. For a full service contact your local Sealey service agent.
- 6.5. Periodically lubricate ratchet yoke drive shaft using grease nipple on side of the ratchet head. This will reduce friction and increase the power and longevity of the tool.



### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

01284 703534

sales@sealey.co.uk

www.sealey.co.uk