



# 1.2/2.4KW 110V INFRARED CABINET HEATER

MODEL NO: IR14110V.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
Instruction  
Manual



Hot surfaces



Warning!  
electricity



Do not cover



Indoor use only

## 1. SAFETY

**THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASIONAL USE**

### 1.1. ELECTRICAL SAFETY

- ☐ **WARNING!** It is the user's responsibility to check the following:
- ✓ Check all electrical equipment and appliances to ensure that they are safe before using.
- ✓ Inspect power supply leads, plugs and all electrical connections for wear and damage.
- ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- ✗ **DO NOT** use worn or damaged cables, plugs or connectors.
- ✓ Ensure that any faulty item is repaired or replaced immediately by a Sealey qualified technician.
- ✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
- ✗ **DO NOT** pull or carry the appliance by the power cable.
- ✗ **DO NOT** pull the plug from the socket by the cable.

### 1.2. GENERAL SAFETY

- ▲ **CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given to where children and vulnerable persons are present.**
- ☐ **WARNING!** The appliance shall be disconnected from its power source during service and when replacing parts and, if the removal of the plug is foreseen, it shall be clearly indicated that the removal of the plug has to be such that an operator can check from any of the points to which they has access that the plug remains removed.
- ✓ The heater must not be located immediately below a socket outlet.
- ✓ Maintain the heater in good order and clean condition for best and safest performance. Replace or repair damaged parts.
- ✓ Locate heater in a suitable work area and keep area clean, tidy and free from unrelated materials. Ensure there is adequate lighting and keep the immediate area in front of the outlet grille clear.
- ✓ Allow the unit to cool before storage. When not in use, disconnect from the mains power supply and store in a safe, cool, dry, childproof area.
- ✗ **DO NOT** use the heater where there are flammable liquids, solids or gases such as petrol, solvents, aerosols etc, or where heat sensitive materials may be stored.
- ✗ **DO NOT** allow the heater to get wet as this may cause an electric shock, causing damage to the heater and possible personal injury.
- ✗ **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- ✗ **DO NOT** use this heater if it has been dropped.
- ✗ **DO NOT** use if there are visible signs of damage to the heater.
- ✓ Use this heater on a horizontal and stable surface.
- ☐ **WARNING: DO NOT** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- ☐ **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the heat source.
- ✗ **DO NOT** let power lead hang over an edge (i.e. table), or touch a hot surface, lie in the beam of heat, or run under a carpet.
- ✗ **DO NOT** operate the heater when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** insert or allow objects to enter any openings of heater as this may cause an electric shock, fire or damage to heater.
- ✗ **DO NOT** use heater if the power cord, plug or the heater is damaged, or if the heater has become wet.
- ✗ **DO NOT** use the heater for any purpose other than for which it is designed.
- ✗ **DO NOT** use the heater with a programmer, timer or any other device that switches the heater on automatically.
- ✗ **DO NOT** touch the lamps, even when cold.
- ✗ **DO NOT** use the heater without the wheels fitted and locked.
- ✗ **DO NOT** use the heater without the grille fitted.
- ✗ **DO NOT** use the heater out of doors. These heaters are designed for indoor use only.
- ✗ **DO NOT** use if there are visible signs of damage to the heater.
- ✗ **DO NOT** cover heater when in use, and do not obstruct the air inlet and outlet grilles.
- ✗ **DO NOT** touch the outlet grille of the heater during and immediately after use as it will be hot.
- ✓ Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and

knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.

- ✓ Children shall NOT play with the appliance.
- ✓ Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- ✓ Children of less than 3 years should be kept away unless continuously supervised.
- ✓ Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.
- ✓ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## 2. INTRODUCTION

Powder coated metal construction with tilting head giving directional heat control. Adjustable thermostat control (15-45°C). Soft-touch control panel with LED display. Six programmable heat settings with shut-off timer function. Equipped with a tilt cut-out switch for added safety. Fitted with two ruby halogen infrared elements and chemically polished reflectors for maximum heat emission. Stand features easy-rolling castors with a locking castor fitted to the rear. Suitable for a wide range of heating including restorative applications. Supplied with cable and 3-pin plug.

## 3. SPECIFICATION


Model No: ..... IR14110V.V2  
Dimensions (W x D x H):..... 575 x 505 x 868mm  
Plug Type:..... Yellow - 32A-2P+E  
Power Supply Cable Length: ..... 1.8m  
Power..... 1200/ 2400W  
Supply..... 110V - 32A  
Weight:..... 16.2kg

## 4. ASSEMBLY

- 4.1. Attach the wheel sub-assemblies to the base of the heater using the bolts provided. Ensure the lockable wheels are to the rear of the heater.
- 4.2. Attach the handle to the top of the heater using the bolts provided, ensuring the shaped spacers are fitted between the heater and the handle.
- 4.3. Remove the front grille by unscrewing the retaining screws.
- 4.4. Extract the lamps from the shipping carton.
  - ❑ **WARNING!** Never touch lamp glass directly with fingers, only touch the ceramic ends or use a soft cloth, otherwise elements could be damaged.
- 4.5. Carefully insert each lamp into the two push-in side fittings with a gentle pressure.
- 4.6. Check the lamps are properly located.
- 4.7. Reassemble front grille.

## 5. OPERATION

- ❑ **WARNING! DO NOT** touch the top of the heater when in use as it becomes hot.
  - ❑ **WARNING!** Always allow elements to cool before moving the units. Use only on a smooth even surface. Failure to do so will cause premature wear to the lamps and reduce their working life.
  - ❑ **WARNING!** This heater is not equipped with a device to control the room temperature. **DO NOT** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
  - ❑ **WARNING!** Place the heater on a level floor in the area you require to heat.
- 5.1. Allow a minimum of 2m between the heater and adjacent objects.
  - 5.2. Plug the heater into the mains supply and turn on the unit using the side mounted rocker switch.
  - 5.3. To switch the unit off, select "0" on the rocker switch and unplug from the mains. Allow the unit to cool before handling or storage.
  - 5.4. The heater has a built in tilt switch safety mechanism that switches off the unit if it is tilted beyond 35° either forwards or backwards. This prevents fire in the event of the unit being knocked over. The heater requires manual input to restart e.g. it does not restart automatically.
- 5.5. POWER ON/OFF**
- 5.5.1. Connect to mains supply and turn the unit on using the red rocker switch.
  - 5.5.2. Heater is initially in standby mode and screen shows "P0".

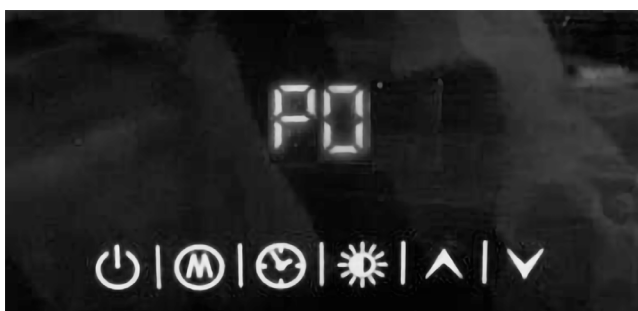

- 5.6. Press  to start heater using the upper lamp. Screen shows "P1"



- 5.7. Press  or  to select mode "P0" to "P6"

|    |                  |    |               |
|----|------------------|----|---------------|
| P0 | OFF              | P4 | 28°C          |
| P1 | Top element only | P5 | 30°C          |
| P2 | 24°C             | P6 | Both elements |
| P3 | 26°C             |    |               |

- 5.8. While the lamp is working, the user can switch modes from "P1" to "P6" using the  button. The unit displays the full cascade effect when in "P6" mode.



- 5.9. To power off the unit, use the  button. The unit will revert back to showing the standby "P0" screen.

## 5.10. SETTING SHUTDOWN TIMER

- 5.10.1. Press  to set the shut down time. Screen initially shows 00:00.

- 5.10.2. Press  or  to set shut down time. Time increases or decreases by 1 hour per press.

- 5.10.3. When the required time is set, press . The screen will show the number of hours set i.e. "02:00" as well as current mode.  
5.10.4. When the time is up, the heater turns off automatically and enters the standby state P0.

## 5.11. OPEN WINDOW DETECTION FUNCTION

- 5.11.1. When ambient temperature drops over 5°C in 10 minutes, heater will power off automatically and sound 3 alarm beeps. Power on again by pressing 

## 6. MAINTENANCE

- ❑ **WARNING!** Before attempting any maintenance ensure the unit is unplugged from the mains power supply, it is cool and on level ground.
  - ✗ **DO NOT** touch the element glass, even when cold.
  - ✗ **DO NOT** use the heater with out the grilles fitted.
- 6.1. To clean the reflector, remove the front grill by unscrewing the retaining screws and wipe the reflector with a clean dry cloth. **DO NOT** use abrasives or solvents. The surface of the reflector is very soft and scratches may cause it to overheat. Replace the grille.
- 6.2. To change the element remove the front grille by unscrewing the retaining screws.
- 6.2.1. Ease the sprung sockets on the ends of the element back and pull the element forward so that it clears the socket, remove element.
- ❑ **WARNING!** Never touch element glass directly with fingers, only touch the ceramic ends or use a soft cloth, to prevent damage.
- 6.2.2. Carefully insert the replacement lamp into the two push-in side fittings with gentle pressure.
- 6.2.3. Check the element is properly located, then replace front grille.



#### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



#### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR  
PURCHASE HERE

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on [technical@sealey.co.uk](mailto:technical@sealey.co.uk) or 01284 757505.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Jack Sealey Ltd t/a Sealey Group**, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK  
**Jack Sealey (EU) Ltd t/a Sealey Group**, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland  
**Tel:** 01284 757500 • **Email:** [sales@sealey.co.uk](mailto:sales@sealey.co.uk) • **Web:** [www.sealey.co.uk](http://www.sealey.co.uk)



## Information requirements for electric local space heaters

| Model identifier(s): IR14110V                                                                                                                                 |             |       |      |                                                                                       |                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-------|------|---------------------------------------------------------------------------------------|--------------------------------------------|
| Item                                                                                                                                                          | Symbol      | Value | Unit | Item                                                                                  | Unit                                       |
| <b>Heat output</b>                                                                                                                                            |             |       |      | <b>Type of heat input, for electric storage local space heaters only (select one)</b> |                                            |
| Nominal heat output                                                                                                                                           | $P_{nom}$   | 2.4   | kW   | Manual heat charge control, with integrated thermostat                                | Yes No <input checked="" type="checkbox"/> |
| Minimum heat output (indicative)*<br>* Enter figure or NA                                                                                                     | $P_{min}$   | NA    | kW   | Manual heat charge control with room and/or outdoor temperature feedback              | Yes No <input checked="" type="checkbox"/> |
| Maximum continuous heat output                                                                                                                                | $P_{max,c}$ | NA    | kW   | Electronic heat charge control with room and/or outdoor temperature feedback          | Yes No <input checked="" type="checkbox"/> |
|                                                                                                                                                               |             |       |      | Fan assisted heat output                                                              | Yes No <input checked="" type="checkbox"/> |
| <b>Auxiliary electricity consumption</b>                                                                                                                      |             |       |      | <b>Type of heat output/room temperature control (select one)</b>                      |                                            |
| At nominal heat output                                                                                                                                        | $el_{max}$  | 2.3   | kW   | Single stage heat output and no room temperature control                              | Yes No <input checked="" type="checkbox"/> |
| At minimum heat output                                                                                                                                        | $el_{min}$  | NA    | kW   | Two or more manual stages, no room temperature control                                | Yes No <input checked="" type="checkbox"/> |
| In standby mode                                                                                                                                               | $el_{SB}$   | 0.009 | kW   | With mechanic thermostat room temperature control                                     | Yes No <input checked="" type="checkbox"/> |
|                                                                                                                                                               |             |       |      | With electronic room temperature control                                              | Yes No <input checked="" type="checkbox"/> |
|                                                                                                                                                               |             |       |      | Electronic room temperature control plus day timer                                    | Yes No <input checked="" type="checkbox"/> |
|                                                                                                                                                               |             |       |      | Electronic room temperature control plus week timer                                   | Yes No <input checked="" type="checkbox"/> |
|                                                                                                                                                               |             |       |      | <b>Other control options (multiple selections possible)</b>                           |                                            |
|                                                                                                                                                               |             |       |      | Room temperature control, with presence detection                                     | Yes No <input checked="" type="checkbox"/> |
|                                                                                                                                                               |             |       |      | Room temperature control, with open window detection                                  | Yes <input checked="" type="checkbox"/> No |
|                                                                                                                                                               |             |       |      | With distance control option                                                          | Yes <input checked="" type="checkbox"/> No |
|                                                                                                                                                               |             |       |      | With adaptive start control                                                           | Yes No <input checked="" type="checkbox"/> |
|                                                                                                                                                               |             |       |      | With working time limitation                                                          | Yes <input checked="" type="checkbox"/> No |
|                                                                                                                                                               |             |       |      | With black bulb sensor                                                                | Yes No <input checked="" type="checkbox"/> |
| Contact details: Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR. <a href="http://www.sealey.co.uk">www.sealey.co.uk</a> |             |       |      |                                                                                       |                                            |
| v1                                                                                                                                                            |             |       |      | ERP Table 2                                                                           |                                            |