

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.**

### 1. SAFETY PRECAUTIONS

- ✓ Refer to the Safety Precautions supplied with the jack.
- ✓ Ensure the jack is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts. Use genuine parts only. The use of unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Locate the jack in a suitable, well lit work area.
- ✓ Keep work area clean and tidy and free from unrelated materials.
- ✓ Use jack on level and solid ground, preferably concrete. Avoid tarmac as jack may sink in.
- ✓ Ensure minimum distance of 0.5m between vehicle and static objects such as doors, walls, etc., to allow for vehicle tilting.
- ✓ Ensure all non-essential persons keep a safe distance whilst the jack is in use.
- x **DO NOT** operate the jack if damaged.
- x **DO NOT** allow untrained persons to operate the jack.
- x **DO NOT** exceed the rated capacity of the jack.
- x **DO NOT** allow the vehicle to move while supported by the jack, nor use the jack to move the vehicle.
- x **DO NOT** use the jack for purposes other than that for which it is designed.
- ✓ When not in use store the jack in a safe, dry, childproof area.

### 2. INTRODUCTION

For added manoeuvrability on uneven surfaces in and around the workshop for the heavy duty jacks. Suitable for use with specific models in the Sealey Premier Viking range.

Models include: 3010HL, 5000SL, 5000HL, 8000SL, 10000SL, 10000HL and 20CT.

### 3. INSTRUCTIONS

- 3.1. Remove top cover of jack, by undoing the cross-head screws and lifting off the cover.
- 3.2. Depending on model of Jack, there may be a number of pre-drilled holes in the side plates, select a position that is in between the existing wheels and fit a bolt through the hole from the inside (see fig.1) and screw an axle onto the bolt.
- 3.3. Tighten the bolt with an appropriate sized spanner or socket whilst holding the axle securely.
- 3.4. Slide a spacer over the axle followed by a wheel with the tyre valve facing outwards, the jack may need to be tipped slightly to one side to allow the wheel to slide on. Obtain the help of another person to do this safely.
- 3.5. Using circlip pliers, fit a circlip over the end of the axle ensuring it fits into the groove securely.
- 3.6. Repeat for the other side of the jack.
- 3.7. Re-fit the cover and the cross-head screws.
- 3.8. Ensure that the tyres are always at the correct pressure (max. 1.0 bar) for optimum manoeuvrability.

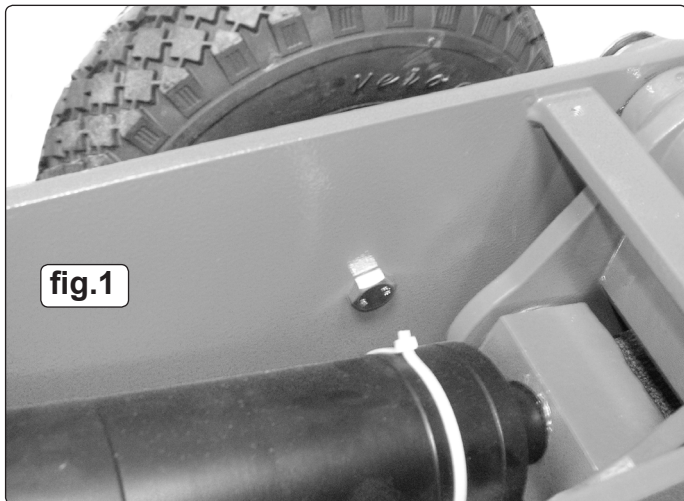


fig.1

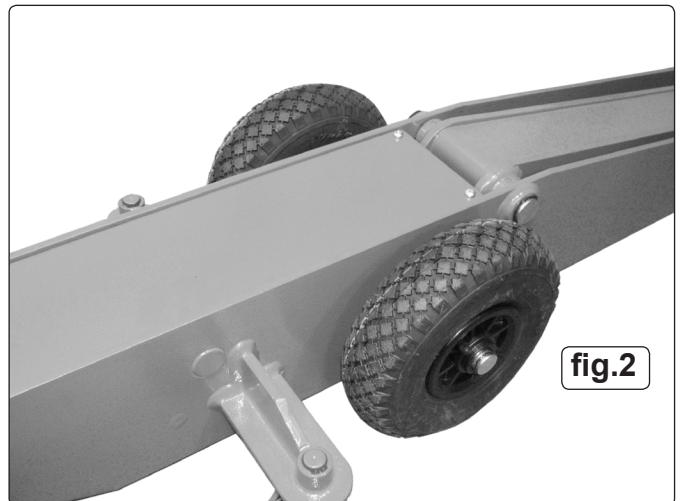


fig.2

Parts support is available for this product.

To obtain a parts listing and/or diagram, please log on to [www.sealey.co.uk](http://www.sealey.co.uk), email [sales@sealey.co.uk](mailto:sales@sealey.co.uk) or phone 01284 757500.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.