

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- WARNING!** The user must secure the lock/alarm properly.
- DO NOT** use the lock alarm if any parts are missing or damaged as this may cause failure.
- DO NOT** use the lock alarm for any purpose other than for which it is designed.
- Do make sure all screws and brackets are secure and tight before leaving the locked items unattended.
- Always make sure a working battery is in the lock alarm.

2. ASSEMBLY

2.1 Installing Battery

- 2.1.1 Lift up the cable clamp on the lock/alarm unit and unwrap the cable, this will reveal the front cover release tabs (fig.1).
- 2.1.2 Insert the key into the lock barrel and ensure its in the unlocked (vertical) position. Remove the front cover by pressing down on the release tabs (the use of a small screwdriver will need to be used). While pushing in the release tabs pull the front cover away from the base.
- 2.1.3 Remove the battery cover screw, then the cover itself, insert an alkaline 9V battery, replace the cover and secure with the screw.
- 2.1.4 Refit the front cover of the lock/alarm ensuring that the key is still in the unlocked (vertical) position and make sure the release tabs click fully back into place.


2.2 Fitting Wall Bracket

- 2.2.1 Position the wall bracket on the surface you want to secure it, with the flat side of the bracket against the flat surface you intend to use.
- 2.2.3 With the bracket in place mark out where the holes will need to be drilled.
- 2.2.4 For Brick and concrete use a 6mm drill bit and insert a plastic plug, when using wood use a 3mm drill bit, the use of plugs are not required.
- 2.2.5 Secure the wall bracket using the small screws through the two holes at either end of the bracket. Repeat steps 2.1.1 - 2.1.2. Once the front cover is removed take the two longer screws and slot them through the holes in the alarm unit as in (fig.1) then through the wall bracket and into the holes previously drilled.

- 2.2.6 If the battery has already been installed replace the front cover as in 2.1.4, if the battery has not been installed, do so following step 2.1.3 - 2.1.4.

2.3 Fitting "U" Bracket

- 2.3.1 Lift up the red cable clamp on the lock/alarm unit and unwrap the cable, this will reveal the front cover release tabs (fig.1).
- 2.3.2 Insert the key into the lock barrel and ensure is in the unlocked (vertical) position. Remove the front cover by pressing down on the release tabs (the use of a small screwdriver will need to be used). While pushing in the release tabs pull the front cover away from the base.
- 2.3.4 position the "U" bracket around the tubing the alarm is to be fixed. To protect the tubing fix some adhesive tape around it where the bracket touches the tube.
- 2.3.5 Slot the rear of the lock/alarm onto the "U" bracket and using the small screws secure the bracket to the unit through the holes in the metal chassis. **DO NOT** overtighten.
- 2.3.6 If the battery is not yet installed follow step 2.1.3 - 2.1.4. If the battery is installed replace the front cover as in 2.1.4.

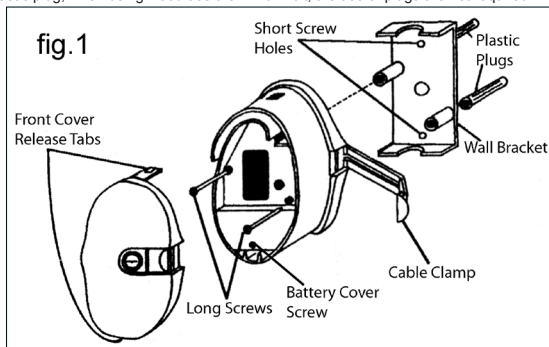

3. INSTRUCTIONS FOR USE

- 3.1 Guide the locking cable around the items you want to secure and then back towards the lock/alarm, if the unit is not attached to a solid object e.g. its attached to one of the items you want to protect, you should guide the cable around a solid object e.g. a post or railing.
- 3.2 Raise the hinged flap on the front of the unit (you will need to open the cable clamp to do this.) and plug the end of the cable into the revealed hole, now turn the key to the horizontal position this will set the alarm. Wrap any excess cable around the unit and secure with the cable clamp.
- 3.3 Always test the alarm prior to use. Ensure the cable is not inserted and turn the key to the locked position, after a few seconds the alarm will sound, if the alarm does not sound or is quiet change the battery immediately.

Disclaimer: The Lock Alarm LA24 has been designed as a deterrent to theft. Jack Sealey Ltd. does not accept any liability for personal injury, property damage or loss.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.