

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

1.1 GENERAL

- ✓ Ensure the torch is correctly charged before initial use.
- x **DO NOT** turn the torch on when it is being re-charged.
- x **DO NOT** shine directly into your, other person's or animal's eyes.
- x **DO NOT** allow children to use the torch.
- x **DO NOT** handle or move the torch whilst it is being charged.
- x **DO NOT** use the torch if you suspect that the battery or the torch casing is damaged.
- x **DO NOT** leave battery in a discharged state, recharge battery immediately. If the torch is not in use, recharge the battery every month.

1.2 ELECTRICAL SAFETY FOR USE OF CHARGER. *USE ONLY THE SUPPLIED CHARGER PLUG FOR CONNECTING TORCH TO THE POWER SUPPLY.*

- WARNING!** It is the user's responsibility to read, understand and comply with the following electrical instructions:

You must ensure the risk of electric shock is minimised by the installation of appropriate safety devices. An RCCB (Residual Current Circuit Breaker) should be incorporated in the main distribution board. We also recommend that an RCD (Residual Current Device) is used with all electrical products, particularly portable equipment which is plugged into an electrical supply not protected by an RCCB.

You must also read and understand the following instructions concerning electrical safety.

- 1.2.1 **The Electricity At Work Act 1989** requires all portable electrical appliances, if used on business premises, to be tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.
- 1.2.2 **The Health & Safety at Work Act 1974** makes owners of electrical appliances responsible for the safe condition of the appliance and the safety of the appliance operator.
If in any doubt about electrical safety, contact a qualified electrician.
- 1.2.3 **You must ensure that you:**
 - ✓ Inspect the charger plug, cable and connector for wear and damage to ensure items are safe before connecting to the mains power supply. If worn or damaged **DO NOT** use.
 - ✓ Important: Check that the voltage marked on the charger plug is the same as the power supply to be used.
 - ✓ Uncoil the cable between charger and the torch.
 - x **DO NOT** pull the charger plug from the mains socket by the lead.
 - x **DO NOT** use any other type of charger with this product.
 - x **DO NOT** try to take the charger plug apart.
 - x **DO NOT** use the charger plug to charge or power any other electrical item.
 - x **DO NOT** get the charger wet, or use in wet, damp conditions (for indoor use only).
 - WARNING! NEVER** substitute a standard 13amp 3 pin plug, or any other type of plug, for the charger plug.

2. INTRODUCTION

- Impact-resistant ABS housing.
- 24 LEDs to emit brilliant light.
- 360° swivel hanging hook.
- Ideal for use in engine bays and dull work areas.
- Charger specification BS Adaptor 6V 700mA.
- Charging time 3 - 4 hours.
- Battery type, NiMH rechargeable 3.6V 1,800mAh
- Continuous use 8 hours.



3. CHARGING

□ IMPORTANT WARRANTY INFORMATION:

The battery fitted to this lamp is considered to be a consumable item and its ability to accept charge will reduce over time. We will warranty it against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery even if it is less than one year old.

- 3.1 Make sure the torch is switched off before commencing charging.
- 3.2 Uncoil the charging lead and plug the connector into the charging socket at the base of the torch.
- 3.3 Plug the power lead from the charger into the mains supply.
- 3.4 Whilst the torch is charging the LED at the base of the torch adjacent to the charging socket will light up red. Once the torch is fully charged the LED will turn green. **Charging time is 3 - 4 hours.**
- 3.5 Unplug the charger from the mains supply. Unplug the charging lead from the torch.
- 3.6 The light will operate continuously for 8 hours on one charge.

NOTE: To maintain battery, charge monthly if light is not in use.

4. OPERATION

- 4.1 Switch the torch ON & OFF using the push button switch immediately below the lens. Direct the lens away from your eyes before switching on.
- 4.2 To suspend the torch, unclip the hanging hook from behind the top of the light and hinge it upwards. When the light is hanging from its hook it can be rotated through 360° for more precise positioning.

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.



When the product is no longer required, it must be disposed of in an environmentally protective way.

Battery Removal



1. For battery removal remove all the screws on the rear of the casing.
2. Split the casing in two, revealing the battery.
3. Cut the negative wire then the positive to remove the battery from the lamp.
4. **Dispose of battery according to local authority guidelines.**

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk