

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE, AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.


1. SAFETY INSTRUCTIONS

- ❑ **WARNING! Disconnect light from the power source before servicing or performing any maintenance.**
- ✓ Maintain the light in good condition (Repairs must only be undertaken by a qualified electrician, use an authorised service agent).
- ✓ Replace or repair damaged parts. Use recommended parts only, unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Ensure the voltage of the power source is suitable for the light. Required power supply must provide 12-14Vdc.
- ✓ To avoid short-circuit and possible flesh burns, remove personal metallic items such as rings, bracelets, necklaces and watches before connecting the light to a battery.
- ✓ Connect power lead from light to battery with the RED clamp (+) positive to the battery positive terminal, and BLACK clamp (-) negative to battery negative terminal.
- ✓ If the battery terminals are corroded or dirty, clean them before attaching the light clamps in order to achieve good contact.
- ❑ **WARNING! DO NOT attempt to connect a 12 Volt light to any mains power supply.**
- ✗ DO NOT pull the power cables or clamps from the battery terminals.
- ✓ When not in use disconnect the light from the power source and store in a safe, dry, childproof area.
- ❑ **WARNING: The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which must be applied by the operator.**

2. SPECIFICATION

Easily adjusted telescopic bracket mounts under open car bonnet. 96 LEDs give complete engine bay illumination. Lamp unit can be unclipped from mounting bracket and used separately. Supplied with hanging hook, 2.6mtr cable and battery terminal clamps.

Voltage:12Vdc.
Power:6W.
Lamp Type:96 LED.
Min/Max Bonnet Width:1200/2870mm.

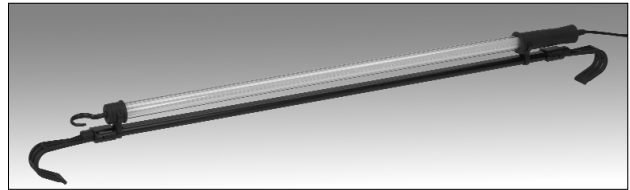


2. OPERATING INSTRUCTIONS

2.1. ATTACHING LAMP TO BONNET.

- 2.1.1. Lift the locking latch (fig.1A) on each end of the mounting bracket and extend hooks (fig.1B) on either side to fit the width of the bonnet.
- 2.1.2. Offer the mounting bracket up to the underside of the raised bonnet.
- 2.1.3. Slide the hooks in so they grip the bonnet from underneath and press the locking lever down to lock the hooks in position.
- 2.1.4. Removal is a reversal of the previous procedure.
- 2.1.5. You may also remove the mounting bracket from the lamp, and use the light hanging vertically from the hook at the top of the lamp.
- 2.1.6. When fixing lamp back onto mounting bracket ensure the clips are connected to the black rubber surround each end of the tube and not directly onto the tube itself.

fig.1

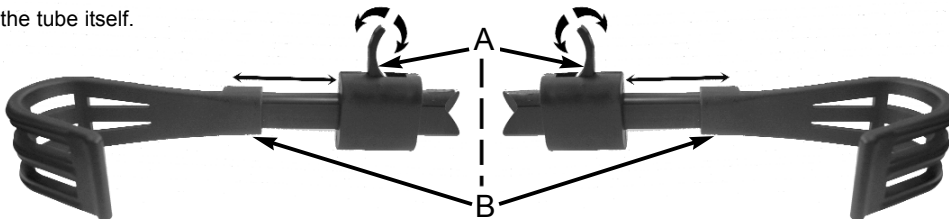

2.2. USING THE LIGHT.

CAUTION! Observe the warnings and cautions laid out in section 1 Safety Instructions before connecting the lamp to a battery.

- 2.2.1. Connect to a 12V battery as follows:
 First connect the RED clamp (+) positive to the battery positive terminal, then the BLACK clamp (-) negative to negative battery terminal. The lamp will illuminate. (Provided there is sufficient voltage in the battery).
- 2.2.2. To disconnect the lamp from the battery:
 First remove the BLACK clamp (-) negative from the negative battery terminal, then the remove the RED clamp (+) positive from the battery positive terminal.

Declaration of Conformity We, the sole importer into the UK, declare that the product listed below is in conformity with the following standards and directives.

LED9512V
 89/336/EEC EMC Directive
 2002/95/EC RoHS Directive
 2002/96/EC WEEE Directive
 93/68/EEC Marking Directive



The construction file for this product is held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd

Signed by Mark Sweetman  15th May 2007

For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Products

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.
IMPORTANT: No liability is accepted for incorrect use of product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** Call us for a copy of our latest catalogue on 01284 757525 and leave your full name and address including your postcode.