

#### INSTRUCTION MANUAL FOR:

# **UNDER BONNET 96 LED LAMP**

MODEL NO: LED95230V

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

# 1. SAFETY

#### 1.1. GENERAL

- ☐ **WARNING!** Disconnect lamp from mains power before performing any maintenance.
- X DO NOT shine lamp directly into your, other person's or animal's eyes.
- **X DO NOT** allow children to use the lamp.
- ✓ Maintain the lamp in good condition.
- **x DO NOT** use the lamp if the lamp if damaged.
- ✓ When not in use store the light in a safe, dry, childproof location.

# 1.2. ELECTRICAL SAFETY FOR USE OF TRANSFORMER. USE ONLY THE SUPPLIED TRANSFORMER PLUG FOR CONNECTING LAMP TO THE POWER SUPPLY.

☐ WARNING! It is the user's responsibility to read, understand and comply with the following electrical instructions:

You must ensure the risk of electric shock is minimised by the installation of appropriate safety devices. An RCCB (Residual Current Circuit Breaker) should be incorporated in the main distribution board. We also recommend that an RCD (Residual Current Device) is used with all electrical products, particularly portable equipment which is plugged into an electrical supply not protected by an RCCB.

**You must** also read and understand the following instructions concerning electrical safety.

**1.2.1. The Electricity At Work Act 1989** requires all portable electrical appliances, if used on business premises, to be tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.

1.2.2. The Health & Safety at Work Act 1974 makes owners of electrical appliances responsible for the safe condition of the appliance and the safety of the appliance operator. If in any doubt about electrical safety, contact a qualified electrician.

# 1.2.3. You must ensure that you:

- ✓ Inspect the transformer plug, cable and connector for wear and damage to ensure items are safe before connecting to the mains power supply. If worn or damaged **DO NOT** use.
- ✓ Important: Check that the voltage marked on the transformer plug is the same as the power supply to be used.
- ✓ Uncoil the cable between transformer plug and lamp.
- X DO NOT pull the transformer plug from the mains socket by the lead.
- X DO NOT use any other type of transformer with this product.
- **X DO NOT** try to take the transformer plug apart.
- X DO NOT use the transformer plug to power any other electrical item.
- X DO NOT get the transformer plug wet, or use in wet, damp conditions (for indoor use only).
- ☐ **WARNING! NEVER** substitute a standard 13amp 3 pin plug, or any other type of plug, for the transformer plug.

This transformer plug reduces and rectifies the mains voltage (230 volts AC) to **12 volts DC**.

□ WARNING: The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which must be applied by the operator.



# 2. INTRODUCTION

Easily adjusted telescopic bracket mounts under open bonnet. 96 LEDs give complete engine bay illumination. Lamp unit can be unclipped from mounting bracket and used separately. Supplied with hanging hook, 2.8mtr cable and transformer plug.

**Supply:** . . . . . . . . . . . . . . . . . 230V 50Hz 100mA.

 Power:
 12W.


 Lamp Type:
 96 LED.

 Min/Max Bonnet Width:
 1200/2870mm.

# 3. OPERATION INSTRUCTIONS

# 3.1. ATTACHING LAMP TO BONNET.

- 3.1.1. Lift the locking latch (fig.1A) on each end of the mounting bracket and extend hooks (fig.1B) on either side to fit the width of the bonnet.
- 3.1.2. Offer the mounting bracket up to the underside of the raised bonnet.
- 3.1.3. Slide the hooks in so they grip the bonnet from underneath and press the locking lever down to lock the hooks in position.
- 3.1.4. Removal is a reversal of the previous procedure.
- 3.1.5. You may also remove the mounting bracket from the lamp, and use the light hanging vertically from the hook at the top of the lamp.
- 3.1.6. When fixing lamp back onto mounting bracket ensure the clips are gripping the black rubber surround at each end of the tube and not the tube itself.

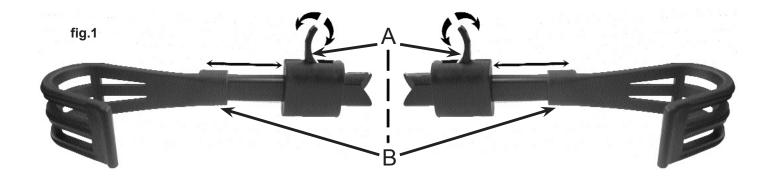

- 3.1.7. To use the lamp, plug the transformer plug into the mains socket to turn the light on.
- 3.1.8. When finished, disconnect the transformer plug from the mains supply and store the lamp in a safe, dry and childproof location.

# 4. MAINTENANCE

Keep lamp clean and check for damage before every use. If damage is observed remove from use until unit is repaired.

 
NOTE! There are no user serviceable parts on this lamp. For repair please return to your nearest Sealey authorised dealer.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.







Sole UK Distributor, Sealey Group, Kempson Way, Suffolk Business Park, Bury St. Edmunds, Suffolk, IP32 7AR