

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.


1. SAFETY INSTRUCTIONS

- WARNING! Before use, ensure the motorcycle to be supported has a suitable structure and centre of gravity to accommodate the support pins without damaging the bike. DO NOT use if the stand will foul on the exhaust or other vulnerable parts.**
- ✓ Maintain the stand in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Use a qualified person to lubricate and maintain the stand.
- ✓ Locate the stand in a suitable work area, keep area clean and tidy and free from unrelated materials, and ensure that there is adequate lighting. Also ensure the floor is level and strong enough (preferably concrete) to take the weight of the stand and the bike. **DO NOT** operate the stand on tarmac/adam, as the surface may be unstable.
- ✓ Keep the stand clean for best and safest performance.
- ✓ Before use, ensure that the stand is grounded on all 4 feet.
- ✓ The maximum bike weight is 500kgs. **DO NOT** exceed this rated capacity.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery, and contain long hair.
- ✓ Maintain correct balance and footing, do not over reach. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Ensure the bike is adequately secured to the stand with appropriate straps.
- ✓ Before lifting check that there are no overhead obstructions.
- ✓ Keep children and unauthorised persons away from the work area.
- x **DO NOT** use the stand for a task it is not designed to perform.
- x **DO NOT** operate the stand if damaged.
- x **DO NOT** exceed the rated capacity of the stand.
- x **DO NOT** operate the stand when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- x **DO NOT** allow untrained persons to operate the stand.
- x **DO NOT** make any modifications to the stand.
- ✓ Before lowering the stand ensure that there are no obstructions underneath the motorcycle and that all persons are standing clear.
- ✓ Before storing in safe area, ensure all parts are clean and free of grease and oil. Store stand in the lowest position.

2. INTRODUCTION & SPECIFICATION

The MC5904 Motorcycle scissor stand is suitable for use either on a motorcycle lift or on the floor. It will support bikes without a centre stand and provide a solid support leaving one wheel free for working on the drive components. The unit is fitted with two sliding saddles which will take two lengths of support pins.

Model no. MC5904
 Capacity 500kg
 Low extension Min. height 196mm
 Low extension Max. height 423mm
 Tall extension Min. height 298mm
 Tall extension Max. height 480mm

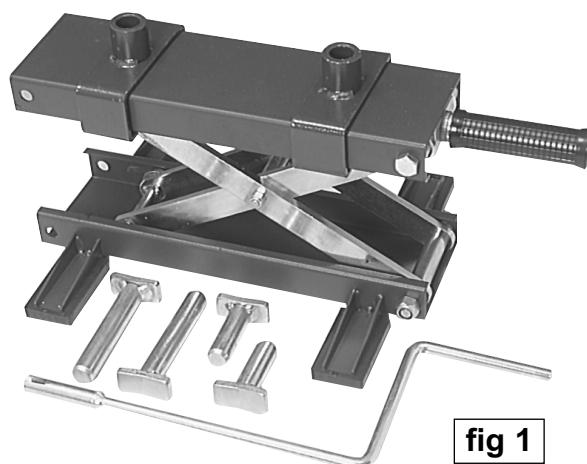

3. CONTENTS


Unpack the stand and check contents. Should there be any damaged or missing parts contact your supplier immediately.

- 1 x Scissor stand
- 2 x Sliding saddles
- 2 x Long extension pins
- 2 x Short extension pins
- 1 x Lifting handle

4. OPERATING INSTRUCTIONS

- WARNING! Ensure you read, understand and apply the safety instructions before use.**
 - WARNING! Before use, ensure the motorcycle has a suitable structure and centre of gravity to accommodate the stand support pins without damaging the bike. DO NOT use if the stand will foul on the exhaust or other vulnerable parts. If necessary remove any lower fairing and ensure the bike is stable on the stand before operating.**
 - WARNING! The stand should only be raised by turning the grip handle manually or by means of the chrome winding handle inserted into the grip tube. Do not attempt to lift the platform up by lifting the grip as the platform will not be locked and will rapidly return to the ground when the handle is released.**
- 4.1. Position the bike in a suitable area, checking that the surface on which the stand will be placed is solid and flat (preferably concrete). Ensure there is good access and clearance beneath the bike for the stand.
 - 4.2. The stand can be also be used in conjunction with a motorcycle that is already raised on a motorcycle lift. Ensure that the stand has all four feet firmly placed on the lift platform.

- 4.3 Slide the two saddles over the upper steel platform of the stand.
- 4.4 Inspect the underside of the motorcycle for suitable support points bearing in mind the centre of gravity of the motorcycle and which wheel is to be lifted from the ground.
- 4.5 Insert either the long or short support pins into the sockets on the sliding brackets.
- 4.6 Place the stand under the motorcycle in the approximate position required.
- 4.7 Insert the chrome winding handle into the tube inside the black grip and turn it until the slot in the handle engages with the pin inside the tube. Turn the handle to raise the stand until the extension pins are close to the intended points of contact on the underside of the motorcycle. Adjust the position of the extension pins if necessary and proceed to raise the bike so that one wheel is clear of the ground.
- 4.8 For additional security it is advisable to retain the motorcycle on the stand with suitable straps, especially if the motorcycle is already raised from the ground on a hydraulic motorcycle lift.
- 4.9 When work is complete, check under the stand to ensure that there are no obstructions and that it is safe to lower the unit.
- 4.10 When the stand is fully lowered, ensure the bike is standing on its wheels and is supported in the upright position.

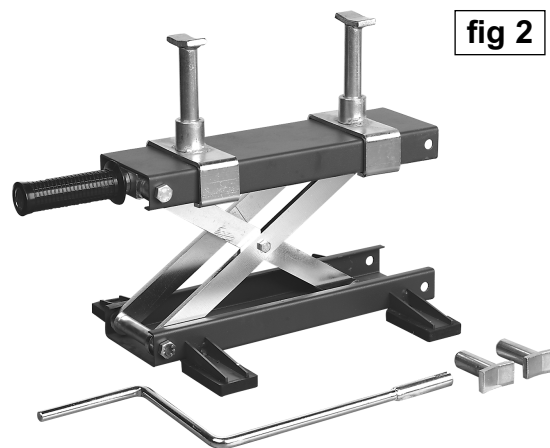

5. MAINTENANCE

- 5.1. When the stand is not in use, store it in the lowered position.
- 5.2. Keep the stand clean and wipe off any oil or grease. Lubricate all moving parts with oil.
- 5.3. Before each use check all parts. If any part of the stand is damaged or defective remove stand from service and take necessary action to remedy the problem.

DO NOT use the stand if it is believed to have been subjected to abnormal load or shock. Inspect and take appropriate action.

6. DECLARATION OF CONFORMITY

MOTORCYCLE SCISSOR STAND Model: MC5904

98/37/EC Machinery Directive
93/68/EEC CE Marking Directive

Declaration of Conformity We, the sole importer into the UK, declare that the product listed here is in conformity with the following standards and directives.



The construction file for this product is held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.

Signed by Mark Sweetman  23rd January 2003

For Jack Sealey Ltd. Sole importer into the UK of Sealey Quality Machinery.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor
Sealey Group,
Bury St. Edmunds, Suffolk.



Web www.sealey.co.uk



01284 757500



01284 703534



email

sales@sealey.co.uk