



INSTRUCTIONS FOR:  
**FORK SEAL DRIVER**  
 MODEL NO: **MS016**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.**

### 1. SAFETY



- x **DO NOT** use the driver for a purpose it is not designed to perform.
- x **DO NOT** use the driver if it is damaged, it could scratch the stanchion.
- x **DO NOT** make any modifications to the driver.
- ✓ Maintain the driver in a good clean condition for the best and safest performance.
- ✓ When not in use, store in a dry location.

### 2. INTRODUCTION

Designed for easy installation of fork seals. Limits potential damage caused by other installation methods to the forks.

### 3. SPECIFICATION

Diagram	1 (engaged)	2 (engaged)	3 (disengaged)
Ø"A"	35mm-40mm	40mm-45mm	45mm-55mm
Ø"B"	55mm-60mm	50mm-55mm	65mm-75mm

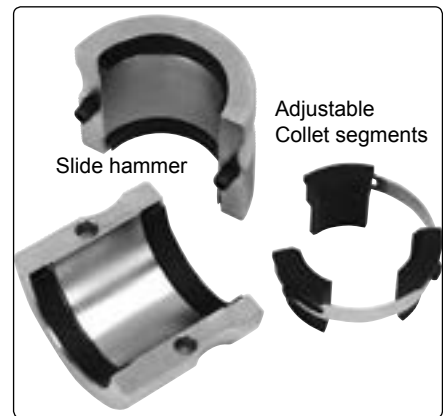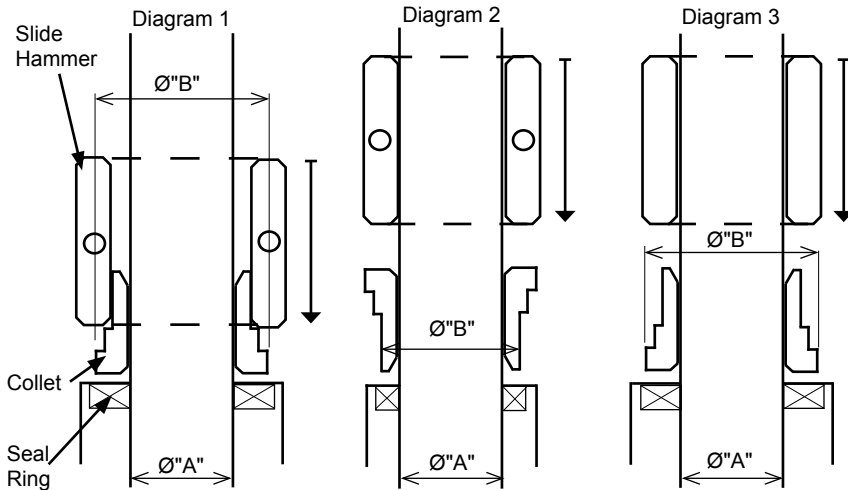

### 4. OPERATION

Always refer to the original manufacturer's manual for assembly and disassembly of the motorcycle fork seals.

- 4.1. Measure the stanchion diameter (Ø"A") and the seal ring outer diameter. It may be better that (Ø"B") is less than the seal ring outer diameter.
- 4.2. Ensure correct orientation, lubricate and slip the new seal ring over the stanchion and slide it down to the slider housing.
- 4.3. From the specification table, decide on the set up. Adjust equally on the slots, the collar segment to best represent (Ø"A"). In Diagrams 1 and 2 the pins in the slide hammer will be engaged with opposing holes of the other half of the hammer. (In Diagram 3 the engagement between the pins and holes will be lost. It will be necessary to align, by eye, the two halves of the slide hammer to obtain even seal ring insertion).
- 4.4. Holding the slide hammer halves together press the seal into the slider housing. Replace retaining ring if required and repeat all tasks with the other fork.



#### Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group,  
 Kempson Way, Suffolk Business Park,  
 Bury St. Edmunds, Suffolk,  
 IP32 7AR



01284 757500

01284 703534



www.sealey.co.uk

sales@sealey.co.uk