



MOTORCYCLE DOLLY LONG - SIDE STAND

MODEL NO: **MS063L**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear protective
gloves



Wear safety
footwear



Wear protective
clothing


1. SAFETY

- ❑ **WARNING!** The warnings, cautions and instructions in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- ✓ Maintain the dolly in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Locate the dolly in a suitable work area.
- ✓ Keep area clean, tidy, and free from unrelated materials.
- ✓ Ensure there is adequate lighting.
- ✓ Ensure that the floor is level and strong enough (preferably concrete) to take the weight of the dolly and the motorcycle.
- ✗ **DO NOT** use the dolly on tarmac/adam, as the surface may be unstable.
- ✓ Keep the dolly clean for best and safest performance.
- ✗ **DO NOT** exceed the rated capacity of the motorcycle dolly.
- ✓ Pull rather than push the motorcycle when manoeuvring on the dolly to reduce the risk of pushing the motorcycle off its side stand.
- ✓ Maintain correct balance and footing.
- ✗ **DO NOT** overreach.
- ✓ Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✗ **DO NOT** use the dolly for a task it is not designed to perform.
- ✗ **DO NOT** use the dolly if it is damaged.
- ✗ **DO NOT** use the dolly when you are tired, or under the influence of alcohol, drugs, or intoxicating medication.
- ✗ **DO NOT** allow untrained persons to use the dolly.
- ✗ **DO NOT** make any modifications to the dolly.
- ✓ Before storing in safe area, ensure that all parts are clean and free of grease and oil.

2. INTRODUCTION

Motorcycle dolly holds a single motorcycle with a side stand, weighing up to 565kg. Reposition around the workshop or garage quickly and efficiently. Front and rear lever operated wedge gates allow for easy loading and unloading to the 2300 x 200 x 50mm (L x W x H) loading track. 5-Position side stand platform to fit varied side stand locations. Features front/rear steel pins, to keep the motorcycle on the dolly during moving, and smooth-rolling dual castor wheels. Front and rear lever operated wedge gates allow for easy loading and unloading to the loading track.

FIG.1

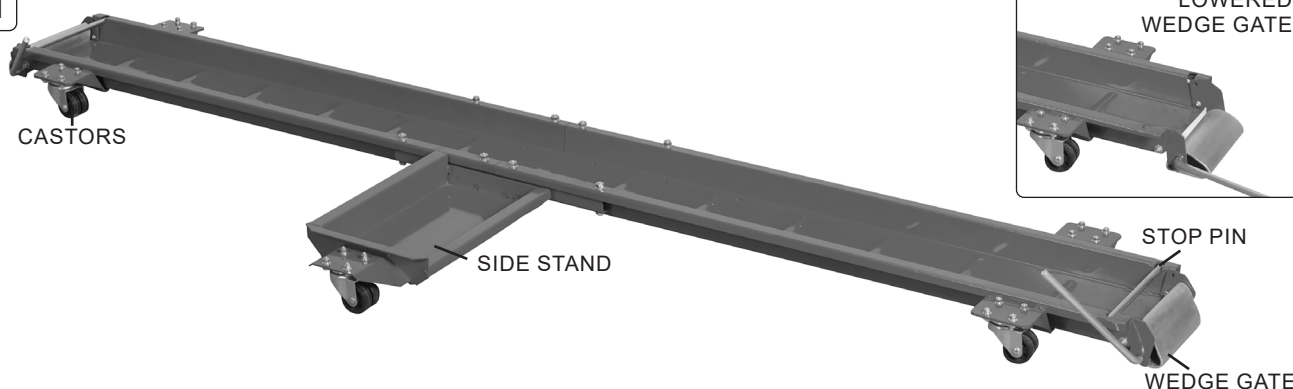

3. SPECIFICATION

Model No:	MS063L
Capacity:	565kg
Loading Track Dimensions (L x W x H):	(L x W x H): 2300 x 200 x 50mm
Nett Weight:	32.6kg
Overall Dimensions (L x W x H):	(L x W x H): 2540 x 860 x 90mm

4. OPERATION

4.1. Assemble as per the attached parts list.

- ☐ **WARNING!** Ensure that you read, understand and apply the safety instructions before use.
- ☐ **WARNING! DO NOT** attempt to overload the dolly.

4.2. LOADING

- 4.2.1. Position the dolly in a suitable area, checking that the surface on which the dolly will be used is solid and flat (preferably concrete).
- 4.2.2. Lower both wedge gates at either end to hold the dolly in position.
- 4.2.3. Remove the stop pin from the frame assembly at the end of the dolly the motorcycle is to be loaded.
- 4.2.4. Push the motorcycle onto the dolly. Support with the side stand on the platform. Replace the stop pin.
- 4.2.5. Lift the wedge gates to allow the dolly to be manoeuvred.

4.3. UNLOADING

- 4.3.1. Lower both wedge gates at either end to hold the dolly in position.
- 4.3.2. Remove the stop pin from the frame assembly at the end of the dolly the motorcycle is to be unloaded.
- 4.3.3. Lift the side stand and remove the motorcycle from the dolly.
- 4.3.4. Replace the stop pin.

5. MAINTENANCE

- ✓ Before use, check the frame assembly and platform for cracks and damage.
- ✓ Regularly check that all fasteners are tight.
- ✓ Periodically lubricate the castors.
- ✓ Store the dolly in a safe, dry, childproof location with the wedge gates lowered.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk