



INSTRUCTIONS FOR:

## HYDRAULIC PIPE BENDERS

Models: **PBS95/12.V2 & PBS95/15.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.**

### 1. SAFETY INSTRUCTIONS

- ✓ Ensure the pipe bender is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts. *Use recommended parts only. The use of improper parts may be dangerous and will invalidate the warranty.*
- ✓ Keep bender and associated parts clean for best and safest performance.
- ✓ Locate the bender in a suitable, well lit working area.
- ✓ Keep working area clean, tidy and free from unrelated materials.
- ✓ Use on level and solid ground, preferably concrete.
- ✓ Ensure all non-essential persons keep a safe distance whilst the bender is in use.
- ✓ Check that bending die is correctly seated on ram and that the roller shafts are fully engaged in the frame and pinned before operating hydraulic unit.
- ✓ Use a qualified person to lubricate and maintain the hydraulic unit.
- ✓ Confirm that the recommended *hydraulic oil* is used during maintenance.
- ✗ **DO NOT** top up system with brake fluid. Use hydraulic oil only.
- ✗ **DO NOT** operate the pipe bender if damaged.
- ✗ **DO NOT** allow untrained persons to operate the bender.
- ✗ **DO NOT** exceed the rated capacity of the hydraulic unit.
- ✗ **DO NOT** use the pipe bender for purposes other than that for which it is intended.
- ✗ **DO NOT** alter the pressure control valve.
- ✓ When not in use store pipe bender, with the hydraulic ram in the down position, in a dry, childproof area.

### 2. INTRODUCTION

Floor standing pipe bender with fabricated steel chassis and compact 12/15 ton hydraulic ram system with integral pump and reservoir. Suitable for bending gas and air pipe and supplied with 6 steel (PBS95/12.V2 & PBS95/15.V2) and 2 aluminium (PBS95/15.V2 only) interchangeable dies to help prevent pipe distortion. Bends up to 180° (3 x 60° bends).

	PBS95/12.V2	PBS95/15.V2
Capacity (ton)	12	15
Bending capacity	Ø13mm - Ø51mm	Ø13mm - Ø76mm

### 3. OPERATION & MAINTENANCE

- WARNING! Ensure that you read, understand and apply Section 1 safety instructions before operating the pipe bender.**

**Note:** Numbers in brackets refer to those on the parts diagram.

- 3.1. With the hydraulic unit (2) ram fully retracted, fit the appropriate sized die (7-14) to the ram.
- 3.2. Move pipe rollers (5) and shafts (4) to appropriate holes in frame (1) and ensure that shafts are properly fitted and secured using hitch pins (6).
- 3.3. Introduce the pipe between die (7-14) and rollers (5), positioning it so that the centre of the required bend in the pipe is over the centre of the die.
- 3.4. Pump hydraulic unit using handle (15) until the required degree of bend is achieved.
- 3.5. Using the end of the handle (15), open the relief valve and the ram can be retracted with a small amount of force.
- 3.6. Annually replace hydraulic oil using Sealey Hydraulic Jack Oil. With ram fully down, drain and refill to bottom of filler plug hole.

### 4. DECLARATION OF CONFORMITY

**Declaration of Conformity** We, the sole importer into the UK, declare that the products listed below are in conformity with the following standards and directives.

**HYDRAULIC PIPE BENDERS  
MODELS: PBS95/12.V2 & PBS95/15.V2**

98/37/EC Machinery Directive



The construction files for these products are held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.

Signed by Mark Sweetman

24th September 2003

For Jack Sealey Ltd. Sole importer into the UK of Sealey Quality Machinery.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor,  
**Sealey Group**, Bury St. Edmunds, Suffolk.



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk