

INSTRUCTIONS FOR:

ASH VACUUM CLEANER 15LTR 1000W/230V

MODEL NO: PC150A

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions and maintained properly, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.




Refer to Instruction Manual

ELECTRICAL SAFETY

□ WARNING! It is the responsibility of the owner and the operator to read, understand and comply with the following: You must check all electrical products, before use, to ensure that they are safe. You must inspect power cables, plugs, sockets and any other connectors for wear or damage. You must ensure that the risk of electric shock is minimised by the installation of appropriate safety devices. A Residual Current Circuit Breaker (RCCB) should be incorporated in the main distribution board. We also recommend that a Residual Current Device (RCD) is used. It is particularly important to use an RCD with portable products that are plugged into a supply which is not protected by an RCCB. If in any doubt consult a qualified electrician. You may obtain a Residual Current Device by contacting your Sealey dealer.

You must also read and understand the following instructions concerning electrical safety.

- 1.1.1. The Electricity at Work Act 1989 requires that all portable electrical appliances, if used on business premises, are tested by a qualified electrician, using a Portable Appliance Tester (PAT), at suitable intervals.
- 1.1.2. The Health & Safety at Work Act 1974 makes owners of electrical appliances responsible for the safe condition of those appliances and the safety of the appliance operators. If in any doubt about electrical safety, contact a qualified electrician.
- 1.1.3. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply. See 1.1.1. and 1.1.2. and use a Portable Appliance Tester.
- 1.1.4. Ensure that cables are always protected against short circuit and overload.
- 1.1.5. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that none is loose.
- 1.1.6. Important: Ensure that the voltage marked on the appliance matches the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating at right.
- 1.1.7. **DO NOT** pull or carry the appliance by the power cable.
- 1.1.8. **DO NOT** pull the plug from the socket by the cable.
- 1.1.9. DO NOT use worn or damaged cables, plugs or connectors. Immediately have any faulty item repaired or replaced by a qualified electrician.
- 1.1.10. Double insulated products, which are always marked with this symbol ☐, are fitted with live (brown) and neutral (blue) wires only. To rewire, connect the wires as shown - DO NOT connect either wire to the earth terminal
- 1.1.11. If an extension reel is used it should be fully unwound before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm², but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm² section cable.

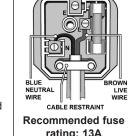

rating: 13A

1.2. **GENERAL SAFETY**

This cleaner is for dry use only

- Disconnect the cleaner from the power supply before servicing, changing accessories, or performing any maintenance.
- Use only genuine parts and accessories. Unauthorised parts and accessories may be dangerous and will invalidate your warranty.
- Maintain the cleaner in good condition. Use authorised agent for servicing.
- DO NOT operate the unit without both filters in place. Using the cleaner without a filter will result in motor failure and will invalidate your warranty.
- **DO NOT** allow children or untrained persons to operate the cleaner.
- DO NOT place attachments close to your face. DO NOT point the hose end at other persons or animals.
- DANGER! DO NOT vacuum hot or glowing ash, cigarette ends, inflammable, explosive, corrosive or other dangerous substances.
- DO NOT use to vacuum soot.
- DO NOT use for vacuuming materials with a temperature above 40°C.
- DO NOT leave machine running unattended. Turn power supply OFF, and DO NOT leave the vicinity until motor has come to a complete
- DO NOT operate the cleaner while under the influence of drugs, alcohol or impairing medication, or if you are tired.
- **DO NOT** use the cleaner in the rain or in very damp conditions.
- DO NOT use the cleaner for a task it is not designed to perform.
- When not in use, store the cleaner in a safe, dry, childproof location.

NOTE: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. INTRODUCTION

Ideal for the collection of ash or fire debris from fireplaces, stoves, wood burners, BBQs, grills and more. A powerful 1000W motor provides great suction performance. With a 15ltr capacity, the lightweight tank features quick release clips for ease of emptying. A 1mtr flexible metal lined suction hose allows the suction of ash up to a temperature of 40°C (100°F). Supplied with Model No. PC150ACF HEPA Cartridge Filter, Model No. PC150ACLF Cloth Filter, crevice tool and extension tube.

SPECIFICATION

| Model No: | |
|-------------------|--|
| Motor Power: | |
| Supply: | |
| Maximum Vacuum: | |
| Airflow: | |
| Drum Size: | |
| Weight: | |
| | |
| Filter Type: | Cartridge, Cloth |
| Consumable Parts: | PC150ACE - Cartridge Filter PC150ACLE - Cloth Filter |



KEY:

- 1: Tank
- 2. Cover
- 3: Cloth Filter
- 4: HEPA Cartridge Filter
- 5: Suction Hose
- 6: Extension Tube
- 7: Crevice Tool

OPERATION

The cleaner must have both the cloth filter (fig.1.3) and HEPA cartridge filter (fig.1.4) fitted before use. Fit as in figs.2 and 3.





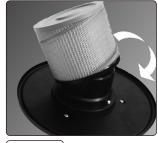


fig.3



fig.4

- 4.2. Connect the suction tube (fig.1.5) to the drum (fig.1.1) and the extension tube (fig.1.6) to the hose. If required, fit the crevice tool (fig.1.7) to the extension tube
- 4.3. Connect the cleaner to the electrical mains. Start the cleaner by pressing the on/off switch (fig.4).
- To empty the tank: unclip the securing clips to remove the cover. Remove the cloth filter and empty the tank. 4.4.

5. MAINTENANCE

Before carrying out any maintenance or cleaning, isolate the unit from electrical power

- 5.1. Cloth filter cleaning
- The cloth filter may be cleaned, when necessary, by removing from the tank and washing in warm water. 511
- 5.1.2. Allow the filter to dry at room temperature for 24 hours before replacing in the machine.
- 5.2. **HEPA** cartridge filter cleaning
- 5.2.1. The HEPA cartridge filter should be cleaned when a reduction of suction is noticed.
- 5.2.2. To clean the cartridge, remove from the top cover by pulling gently (fig.3).
- For routine cleaning, use a soft bristle brush (not supplied) to remove deposits from the outside of the filter. 5.2.3. NOTE: avoid breathing in airborne dust.
- The cartridge filter can be washed: run water through the filter from the inside to loosen deposits. 5.2.4.
- 5.2.5. When wet cleaned, leave at room temperature for at least 24 hours, or until dry to the touch.
- 5.2.6. When dry, push over the top cover (fig.3) until locked firmly in place.
- 5.3. Cleaning
- 5.3.1. Clean with a damp cloth, DO NOT use abrasive or solvent cleaners.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR 🔚 01284 757500 🕩 01284 703534 🧖 sales@sealey.co.uk 🕥 www.sealey.co.uk