



# RCD SAFETY ADAPTOR 230V

MODEL NO: RCD981.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Indoor use only

## 1. SAFETY

- ✓ For use with a 230V AC supply only.
- ✓ Test before each use (see section 4). If the unit trips repeatedly, seek professional advice.
- ✓ **DO NOT** allow to get wet or use in a damp atmosphere.
- ✗ **DO NOT** drop or subject to shock.
- ✗ **DO NOT** use if it suspected that the unit has been damaged.
- ☐ **WARNING! This RCD (residual current device) is an electrical safety device and should not be regarded as a substitute for basic electrical safety precautions.**

## 2. INTRODUCTION

Cuts power automatically to protect against electrocution. Suitable for all types of indoor and outdoor electrical appliances. Easy-to-use, two-button operation. No wiring needed - plugs straight into 13A socket. No need to remove from socket to reset unit.

## 3. SPECIFICATION

Model No: ..... RCD981.V2  
Supply: ..... 230V  
Maximum Load: ..... 3000W  
Maximum Operating Current: ..... 16A  
Trip Speed: ..... 50ms  
Trip Current: ..... 30mA

## 4. OPERATION

- 4.1. Insert the RCD adaptor into a fixed 13A socket and then plug the portable appliance into the RCD outlet socket.
- 4.2. **TESTING**
  - 4.2.1. Test the RCD before each use.
  - 4.2.2. With the appliance connected, push the 'Test' button. The RCD will automatically cut the electricity supply and the indicator flag will show 'off'
  - 4.2.3. To reconnect the electrical supply, press the 'reset' button. The outlet socket will be energised and the indicator flag will show 'on' (red).
- 4.3. If the RCD disconnects the electrical power at any time, remove the unit from the outlet socket and investigate the apparent fault.
- 4.4. If the RCD continues to trip, consult a competent electrician.



### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on [technical@sealey.co.uk](mailto:technical@sealey.co.uk) or 01284 757505.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



[sales@sealey.co.uk](mailto:sales@sealey.co.uk)



[www.sealey.co.uk](http://www.sealey.co.uk)