

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- 3 Familiarise yourself with the application and limitations of the hose reel, as well as the specific hazards.
- p **WARNING!** Isolate the hose reel from the gas supply before changing accessories, servicing or performing any maintenance.
- 3 Maintain the hose reel in good condition (use an authorised service agent).
- 3 Replace or repair damaged parts. *Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- 3 Locate and fix the hose reel in a suitable working area. Do not position the hoses in direct sun light, or in areas of extreme heat or cold. Ensure there is adequate lighting.
- 3 Keep extended hoses away from heat, oil and sharp edges. Check hose for wear before each use, and ensure all connections are secure.
- 3 Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- 3 Keep children and unauthorised persons away from the working area.
- 7 **DO NOT** use the hose reel for any purpose other than that for which it is designed.
- 7 **DO NOT** operate the hose reel when you are tired, under the influence of alcohol, drugs or intoxicating medication.
- 3 When not in use ensure the gas supply is turned off. Disconnect from the supply and retract hose into case.
- p **WARNING! DO NOT** dismantle the hose reel casing, or attempt to remove the screws on the sides. *To do so may result in damage to the appliance and/or personal injury and will invalidate the warranty. Internal maintenance, which will require the opening of the casing, must only be undertaken by an authorised service agent.*

2. INTRODUCTION & SPECIFICATION

The RGH15 has a hard wearing composite casing with retracting dual hose reel which has ratchet and free-running operation, enabling easy access to locations within the hose range. The reel comes complete with mounting brackets. Check content with list below. If any items are damaged or missing contact your supplier.

Specification

| | |
|-----------------------|------------------|
| Hose length |15m |
| Hose bore |8mm |
| Hose type |Rubber |
| Hose fittings |3/8" BSP(F) |
| Inlets |3/8" BSP(M) |
| Max. working pressure |13.6 bar |
| Weight |12kg |

Note:



Oxygen - blue hose and right-hand threaded fittings.
Acetylene - red hose and left-hand threaded fittings.

Content

- Reel & Hose Asm.
- Support Tube
- Screw x 4
- Mounting Bracket x 2
- Washer x 2
- Split Pin x 2


3. FITTING THE HOSE REEL

- p **WARNING! Ensure the hose reel is disconnected from the supply. Do not position the hose in direct sun light or in areas of extreme heat or cold.**
- 3.1. Ensure the wall to which the hose reel is to be fixed is of sound construction and that the securing points will hold the working strain of the hose when in use.
- 3.2. Mark out the mounting hole positions as shown in fig.1. Drill and plug the surface and screw mount the support brackets.
- 3.3. Fit washer and split pin (fig.2.4 & 3) to one end of support tube (fig.2.1). Feed support tube through one bracket (fig.2.2), through the hose reel (fig.2.5) and through the second bracket. Secure with the second washer and split pin.
- Note:** When wall mounting, reel lifting handle must be uppermost.
- 3.4. Check to ensure that the main body will turn sufficiently to allow the hose to be extended without rubbing on either side of the housing.
- 3.5. Before use, check that all fixings are safe and secure, and that the hose extends and retracts smoothly.
- p **IMPORTANT: If the reel is to be ceiling mounted it must be modified to ensure correct operation of the clamping/recoil mechanism - contact your supplier.**

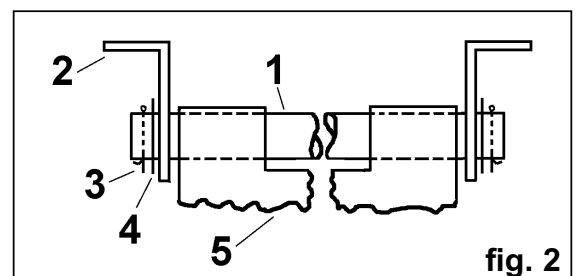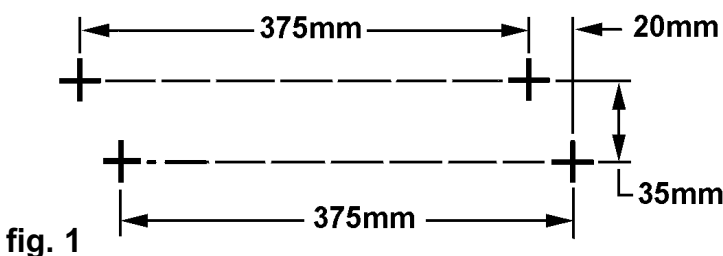

4. HOSE CLAMPING SYSTEM

- 4.1. To clamp the hose whilst in an extended position, turn the recoil control (fig.3.A) anticlockwise. An intermittent 'knock' will be noticed as the hose is pulled off the reel. When the tension is let off the hose it will retract slightly and then lock.
- 4.2. To release the hose and allow it to automatically rewind, pull the hose out from the locked position and then release.
- 4.3. To release the ratchet so that the hose remains in constant tension, turn the recoil control (fig.3.A) clockwise. If the control will not turn under finger pressure, pull the hose out a few inches to 'unload' the mechanism.
- p **WARNING!** The reel tension is factory set and the control (fig.3.B) is sealed with four screws. **DO NOT remove these screws.** If any adjustment is required contact an authorised service agent.

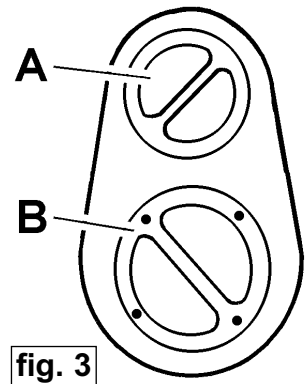

5. MAINTENANCE & STORAGE

- p **WARNING! Before attempting maintenance or inspection vent any pressure remaining in the hoses.**
To ensure reliable operation, clean the hoses and casing regularly. **DO NOT** spray or wet the product, but clean with a cloth and warm water. **DO NOT** use solvents or detergents, as these may permanently damage the item.
- p **WARNING! DO NOT attempt to loosen, or remove, any casing screws.**
Replacement of the hoses should be carried out by skilled personnel only, consult your nearest authorised service agent.
- 5.1. **Seals**
All O-ring seals should be replaced, by an authorised service agent, annually, to ensure reel remains gas tight.
- 5.2. **Storage**
Should you wish to store the hose reel, ensure it is clean and dry. Place in a dark, safe, dry, childproof location, where the temperature will remain reasonably stable. **DO NOT** store in a nylon, or plastic, bag as this will encourage condensation.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this equipment.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

SEALEY **POWER WELDERS**

Sole UK Distributor,
Sealey Group,
Bury St. Edmunds, Suffolk.



01284 757500



01284 703534

E-mail: sales@sealey.co.uk