

## COMBINATION AIR NAILER/STAPLER GUN

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.**

### 1. SAFETY INSTRUCTIONS

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- WARNING!** Disconnect from air supply before refilling, servicing or performing maintenance.
- ✓ Maintain the gun in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Use in suitable clean and tidy work area, free from unrelated materials and ensure there is adequate lighting.
- WARNING!** Always wear approved eye and/or face and hand protection when operating the gun.
- ✓ Remove ill fitting clothing. Remove ties, loose jewellery, and contain and/or tie back long hair.
- ✓ Wear appropriate protective clothing and keep hands and body clear of working parts.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the working area.
- ✓ Check moving parts alignment on a regular basis.
- ✓ Ensure workpiece is secure before operating the gun. Never hold a workpiece by hand.
- ✓ When the gun is put down during pauses in operation ensure that the trigger catch slide is not depressed by the weight of the gun or by placing the gun in a restricted position that could put pressure on the trigger catch slide.
- ✓ During extended breaks in operation disconnect the gun from the air supply.
- WARNING!** Ensure correct air pressure is maintained and not exceeded. Recommended pressure 60- 100psi.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use and ensure that all connections are secure.
- x DO NOT point the discharge outlet at yourself or anyone else. Do not point at animals.
- x DO NOT use any power source except an air compressor.
- x DO NOT operate the gun near any flammable substance or on any container that once contained a flammable substance.
- x DO NOT use the gun for a task it is not designed to perform.
- x DO NOT operate gun if any parts are damaged or missing as this may cause failure and/or personal injury.
- x DO NOT carry the gun by the hose, or yank the hose from the air supply.
- x DO NOT place the gun close to your face and do not point at other persons or animals.
- x DO NOT operate gun when you are tired and/or under the influence of alcohol, drugs or intoxicating medication.
- x DO NOT carry the gun with your finger on the trigger.
- x DO NOT direct air from the air hose at yourself or others.
- ✓ When not in use, disconnect from air supply and store in a safe, dry, childproof location.
- WARNING!** The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.



## 2. INTRODUCTION & SPECIFICATION

Professional air nailer/stapler with lightweight aluminium housing and ergonomically designed rubber grip handle. Safety trigger device to prevent accidental firing. Adjustable wheel to control depth. Easy side load magazine. Supplied in blow mould case with oiler and starter pack of nail and staples.

|                       |                                      |                                |
|-----------------------|--------------------------------------|--------------------------------|
| <b>Specification:</b> | Staple Capacity: . . . . . 16-40mm   | Air Inlet: . . . . . 1/4" BSP  |
|                       | Nail Capacity: . . . . . 15-50mm     | Weight: . . . . . 1.6kg        |
|                       | Operating Pressure: . . . . . 120psi | Sound Power: . . . . . 95dB(A) |


**fig.1**



**fig.4**



**fig.5**

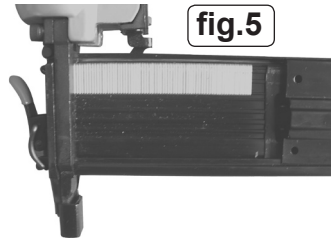


## 3. PREPARING GUN FOR USE

- 3.1. **Air Supply.** Recommended hook-up procedure is shown in fig 2.
  - 3.1.1. Before connecting to an air supply ensure that the trigger catch release slide is not depressed (see fig 1).
  - 3.1.2. You will require an air pressure between 60-100psi.
  - 3.1.3. **WARNING!** Ensure the air supply is clean and does not exceed 100psi while operating the gun. Too high an air pressure and unclean air will shorten the product life due to excessive wear and may be dangerous, causing damage and/or personal injury.
  - 3.1.4. Drain the air tank daily. Water in the air line will damage the gun **and will invalidate your warranty.**
  - 3.1.5. Clean air inlet filter weekly.
  - 3.1.6. Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose diameter should be 1/4" I.D. and fittings must have the same bore.
  - 3.1.7. Keep hose away from heat, oil and sharp edges. Check hoses for wear, and make certain that all connections are secure.
- 3.2. **Couplings.**

Vibration may cause failure if a quick change coupling is connected directly to the gun. To overcome this, connect a leader hose to the gun. A quick change coupling may then be used to connect the leader hose to the air line recoil hose. See fig 2 & 3.

**fig 2**

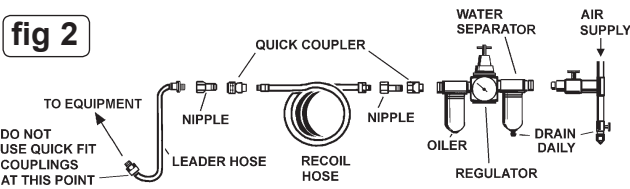

**fig 3**

