

EMPTY AIR HOSE REEL - 1/4"BSP FITTINGS

MODEL NO: **SA826**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



instructions

1. SAFETY

- Familiarise yourself with the application and limitations of the hose reel, as well as the specific hazards.
- WARNING! Disconnect the hose reel from the supply before servicing or performing any maintenance.
- √ Maintain the hose reel in good condition (use an authorised service agent).
- √ Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- √ Locate and fix the hose reel in a suitable working area, ensure that the correct fixings are used to secure the unit to the wall.
- × DO NOT position the hose in direct sunlight, or in areas of extreme heat or cold.
- × DO NOT mount inside a spray booth/oven.
- ~ Ensure there is adequate lighting.
- WARNING! Ensure maximum air pressure is not exceeded (300psi/20bar).
- ~ Keep extended air hose away from heat, oil and sharp edges.
- ~ Check hose for wear before each use and ensure all connections are secure.
- ~ Keep the unwound hose away from wet, damp, oily surfaces to avoid debris accumulation in between the hose reel.
- WARNING! Always wear approved eye protection when operating the air hose reel.
- ~ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip footwear.
- ~ Keep children and unauthorised persons away from the working area.
- DO NOT operate the hose reel if any parts are damaged or missing as this may cause failure and/or personal injury. ×
- DO NOT use the hose reel for any purpose other than that for which it is designed. ×
- × DO NOT pull the hose from the supply.
- DO NOT operate the hose reel when you are tired or under the influence of alcohol, drugs or intoxicating medication. ×
- DO NOT direct air from the air hose at yourself or others.
- When not in use ensure the air supply is turned off and tools disconnected. Disconnect from the supply..

INTRODUCTION 2

Hose reel can be used with rubber, PVC and hybrid air hoses up to 40m in length (Ø5/16" or 8mm). Air hoses are simple to install on the hose reel. Manual winding steel drum features tall guides to ensure the hose layers efficiently. Durable wall mount can be used to attach the hose reel to a wall or floor. Solid brass 1/4"BSP inlet and outlet.

3. SPECIFICATION

SA826
1/4"BSP
300psi
1/4"BSP

CONTENTS 4.

WARNING! Ensure the hose is disconnected from the supply. DO NOT position the hose in direct sunlight or in areas of extreme heat or cold.

4.1. **REMOVE ALL ITEMS FROM THE PACKAGING.**

WALL MOUNTING 4.2.

- WARNING! Ensure the wall is capable of holding the weight of unit and operation.
- 4.2.1. Assemble as in fig.1.
- Using the bracket, as a template, mark the wall, where the hose 4.2.2. reel is to be mounted and drill four centres and fix to the wall. (fixings not supplied.)
- 4.2.3. Connect to an air line. DO NOT connect directly to an air tool, connect a leader hose to the tool first and then connect the leader hose to the air hose reel



4.3. EXTENDING THE HOSE

- 4.3.1. Pull the hose out slowly to the length required and stop.
- 4.4. RETRACTING THE HOSE
- 4.4.1. Rewind the hose manually.

5. MAINTENANCE

WARNING! Before attempting maintenance or inspection, vent any pressure remaining in the hose.

To ensure reliable operation, clean the hose and casing regularly. **DO NOT** spray or wet the product, but clean with a damp cloth and warm water. **DO NOT** use solvents or detergents, as these may permanently damage the item. The hose reel does not require special maintenance as it is lubricated for life. Replacement of the supply hose should be carried out by skilled personnel only, consult your authorised service agent.

5.1. STORAGE

5.1.1. Before storing the air hose, ensure it is clean and dry. Store it in a dark, safe, dry, childproof location, where the temperature will remain reasonably stable.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR 01284 757500 R sales@sealey.co.uk www.sealey.co.uk

Original Language Version