


Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Familiarise yourself with the application, limitations, and hazards of the gun.
- ✗ **WARNING!** Disconnect the cleaning gun from the air supply before changing accessories, servicing or performing any maintenance.
- ✓ Maintain the cleaning gun in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. *Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Locate the cleaning gun in a suitable work area. Keep area clean and tidy and free from unrelated materials and ensure that there is adequate ventilation and lighting.
- ✓ Keep the cleaning gun clean for best and safest performance.
- ✓ Ensure the air system has sufficient output for the cleaning gun's air consumption (see specification).
- ✓ Wear approved respiratory protection, safety eye goggles and skin protection.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery and tie back long hair.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ When gun is not in use ensure the air supply is disconnected.
- ✓ Avoid unintentional operation.
- ✗ **DO NOT** point cleaning gun at yourself or at other persons or animals.
- ✗ **DO NOT** carry the gun by the air hose, or yank the hose from the air supply.
- ✗ **DO NOT** use the cleaning gun for any purpose other than for which it is designed.
- ✗ **DO NOT** allow untrained persons to operate the cleaning gun.
- ✗ **DO NOT** operate gun if any parts are missing or damaged as this may cause failure and/or personal injury.
- ✗ **DO NOT** direct air from the air hose at yourself or others.
- ✓ When not in use disconnect from the air supply.
- ✓ When not in use, store the gun in a safe, dry, childproof location.

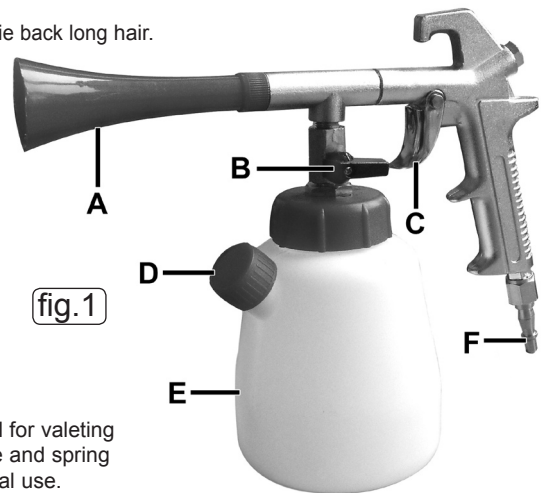

2. SPECIFICATION


Robust cleaning gun featuring rotary pressure cleaning action and brass fittings, ideal for valeting vehicle upholstery and cleaning bodywork. Features 1000ml refillable detergent bottle and spring loaded trigger. Fitted with fluid release valve to control flow rate and prevent accidental use. Supplied with 250ml measuring jug.

Maximum Operating Air Pressure: 150psi
 Bottle Capacity: 1ltr
 Air Connection: 1/4" BSP

3. AIR SUPPLY

For recommended hook-up, see fig.2.

- 3.1. Ensure the trigger (fig.1C) is in the "off" position before connecting to the air supply.
- 3.2. You will require an air pressure of approximately 90psi and an air volume of more than 6.6cfm to operate the gun.
- 3.3. ✗ **WARNING! Ensure the air supply is clean and does not exceed 150psi. Too high an air pressure and/or unclean air will shorten the life of the gun due to excessive wear and may be dangerous, causing damage and/or personal injury.**
- 3.4. Drain the air supply tank daily and clean the compressor air inlet filter weekly.
- 3.5. Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose diameter should be 10mm I.D. and fittings must have the same inside dimensions.
- 3.6. Keep hose away from heat, oil and sharp edges. Check hoses for wear, and make certain that all connections are secure.

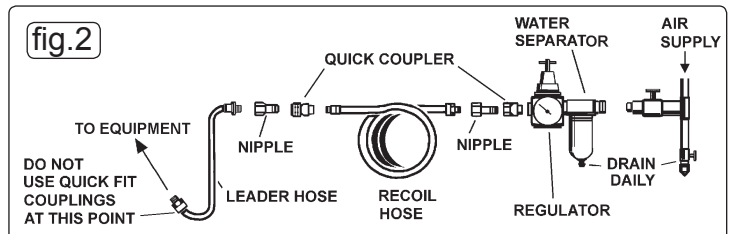

4. OPERATION

- 4.1. Ensure the trigger is not depressed while connecting to the air supply.
- 4.2. Remove container (fig.1E) and fill with suitable detergent, or top up through side filler (fig.1D).
- 4.3. Hook up the air supply as in section 3.
- 4.4. Turn the fluid release valve (fig.1B) to allow detergent to flow through the gun. This can be adjusted if too much detergent is being used.
- 4.5. Hold the nozzle 15-25mm from the surface to be cleaned, this may vary depending on air pressure and surface material.
- 4.6. Hold trigger and slowly go over the surface holding longer over ground-in dirt.

NOTE! The area to be cleaned will become wet, **DO NOT** use near electrical connections or outlets.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.