



# AIR COOLER/PURIFIER/HUMIDIFIER WITH REMOTE CONTROL

MODEL NO: **SAC13**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
instructions



Indoor use only

## 1. SAFETY

### 1.1. ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:  
Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.

If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.

- × **DO NOT** pull or carry the appliance by the power cable.
- × **DO NOT** pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
- × **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.

If the cable or plug is damaged during use, switch off the electricity supply and remove from use.

Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.

Class II products are wired with live (brown) and neutral (blue) only are marked with the Class II symbol;

A) Connect the BROWN live wire to the live terminal 'L'.

B) Connect the BLUE neutral wire to the neutral terminal 'N'.

 
C) After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.

Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.

- × **DO NOT** connect either wire to the earth terminal.  
Sealey recommend that repairs are carried out by a qualified electrician.

### 1.2. GENERAL SAFETY

- ✓ Only use as described in this manual.
- ✓ This product is intended for indoor, household use ONLY. **DO NOT** use outdoors or for commercial or industrial purposes.
- × **DO NOT** immerse the unit, plug or cord in water or spray with liquids. **DO NOT** place vases or similar objects filled with liquids near the unit.
- × **DO NOT** use the unit within the immediate vicinity of water, such as bathtubs, wash bowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
- ✓ Children should be supervised to ensure that they do not play with the appliance.
- ✓ Turn the unit off and unplug it from the mains when: not in use; when moving the unit from one location to another and before Maintenance or Cleaning.
- ✓ This product is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- × **DO NOT** operate in the presence of explosive and/or flammable liquids or plugs.
- × **DO NOT** use the unit near an open flame, cooking or other heating appliance.
- × **DO NOT** operate the unit with a damaged cord or plug, or if the product malfunctions or is damaged in any way.
- ✓ Avoid contact with moving parts. **DO NOT** insert anything through the grill when the unit is operating.
- ✓ The use of attachments is not recommended and may be hazardous.
- ✓ Place the unit on a dry level surface to avoid overturning.
- × **DO NOT** operate if the housing is damaged.
- × **DO NOT** cover the grill, or operate in close proximity to curtains etc. Ensure there is adequate ventilation around the unit.
- ✓ If the mains lead needs to be replaced, ensure it is carried out by a suitably qualified person.
- ✓ If the unit is not working properly contact a qualified technician for repair. Never attempt to dismantle the unit.

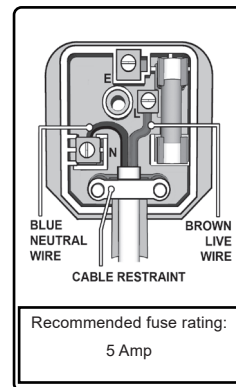

- ✓ Never install or store the unit where it could be subject to:
    - a. Heat sources such as radiators, heat registers, stoves or other products that produce heat
    - b. Direct sunlight
    - c. Mechanical vibration or shock
    - d. Excessive dust
    - e. Lack of ventilation, such as a cabinet or bookcase
    - f. Uneven surfaces
  - ✗ **DO NOT** leave the product running unattended.
  - ✓ The castor wheels must be attached before use.
  - ✗ **DO NOT** remove the water tank while the unit is plugged in.
- NOTE:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


## 2. INTRODUCTION

 Multifunction three-in-one unit comprising air cooler, air purifier and humidifier with active carbon filter. Features three-speed fan, adjustable timer ranging from 30 minutes - 7.5 hours and adjustable airflow direction. A Large 13ltr water tank supplied with two ice packs enables refrigerant-free cooling by evaporating water. Supplied with electronic remote control for Easy operation. Mounted on castors for manoeuvrability.

## 3. SPECIFICATION

Model no .....SAC13  
 Cooler .....65W  
 Cooling water tank ..... 13lt  
 Fuse Rating: .....5A  
 Max. airflow ..... 10m/s  
 Power Supply Cable Length: ..... 1.8m  
 Supply: .....230V

## 4. FEATURES

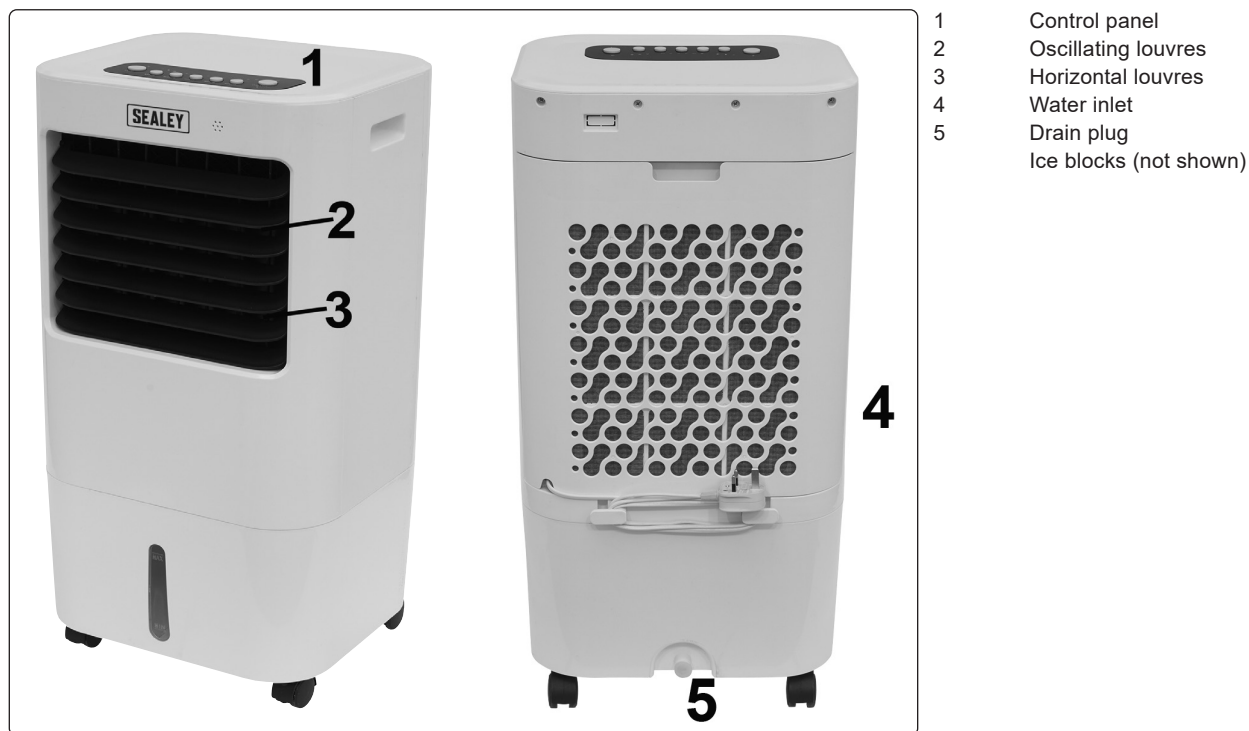


## 5. ASSEMBLY

- 5.1. FIT WHEELS**  
 5.1.1. Install wheels before use. Turn cooler upside down onto a soft mat, to protect it, gently push all 4 wheels into the base.

## 6. OPERATION

- 6.1. FILL WATER TANK**  
 **WARNING!** disconnect from mains supply before filling the water tank.  
**IMPORTANT! DO NOT** use water with any chemical additives added. Water must be cold or lukewarm. **DO NOT** use water above 40°C.
- 6.2. USING THE ICE BLOCKS (OPTIONAL)**  
 6.2.1. There are two ice blocks included that can be used for extra cooling effect, if desired.  
**IMPORTANT:** Use only clean water for filling the ice blocks. **DO NOT** fill water above the maximum marking.  
 6.2.2. The ice blocks are not food safe, do not use for storing food or beverages.  
 6.2.3. Keep away from children.

 - 6.2.4. Empty the water and dry out the ice blocks before storage.
- 6.2.5. Open the cap, add clean water up to the maximum level marking, close and place in your freezer for a few hours.
- 6.2.6. Once frozen, the ice blocks can be added to the water tank.  
**NOTE:** Make sure that the water level in the tank does not go above the 'MAX' level indicated on the sight window.
- 6.2.7. Once water is filled, take extra care to ensure that you don't tilt the cooler. Push the unit gently if you wish to move it to a new position.
- 6.2.8. Keep the unit on a flat, stable ground without any obstacles near it.
- 6.2.9. Connect to the mains supply.
- 6.2.10. When the supply is turned on at the outlet, the unit receives power and is in standby mode. The Power indicator light turns on.
- 6.2.11. You may now use the control panel buttons or the remote control to operate the cooler.

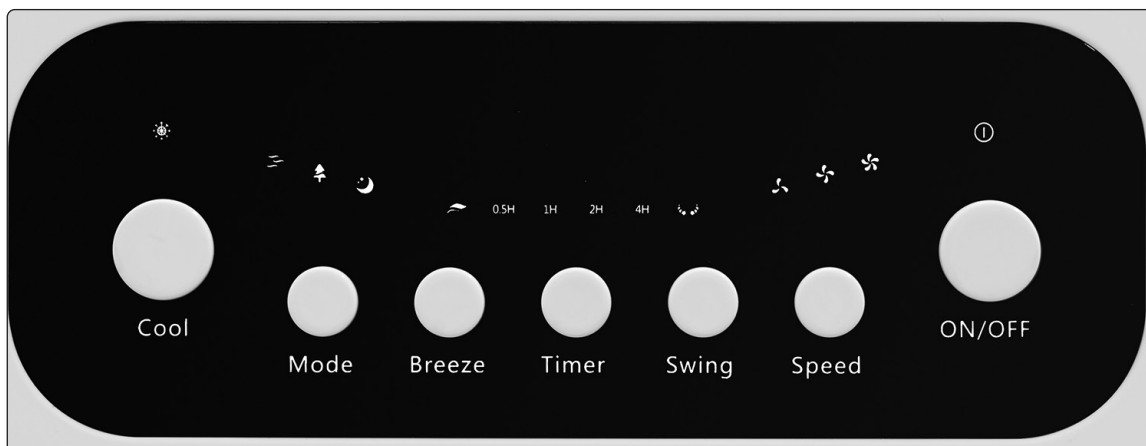

### 6.3. CONTROL PANEL

#### 6.3.1. ON/OFF

Press the ON/OFF button to turn on the unit. The unit starts working in medium speed and switches to low speed after 3 seconds. When the unit is working, press the ON/OFF button again to switch it back to standby mode.

#### 6.3.2. SPEED

Press the SPEED button to adjust the speed. There are three positions – Low, Medium or High. The corresponding indicator turns on.

#### 6.3.3. SWING

Press this button to start or stop louvre oscillation from left to right. The corresponding indicator turns on.

#### 6.3.4. TIMER

Press this button to set the turn-off time for the unit.

The turn-off time can be set in half-hour increments from 0.5 to 7.5 hours. There are 4 indicators – 0.5H, 1H, 2H and 4H. For example, if the timer is set for 3 hours, the 1H and 2H indicators turn on.

#### 6.3.5. BREEZE

Press this button for a very low speed breeze.

### 6.4. MODE

There are three selectable modes, the corresponding indicator turns on.

**Normal mode:** The fan operates in the constant speed set using the SPEED button.

**Natural mode:** The unit simulates a natural breeze.

**Sleep mode:** The unit simulates a gentle breeze suitable for night-time use.

#### 6.4.1. COOL

Press this button for a cool breeze when water is added to the water tank. The corresponding indicator turns on. Press again to turn off the cool breeze.

### 6.5. REMOTE CONTROL

- WARNING!** Keep batteries out of reach of children.

6.5.1. Remote control uses 1 x CR2025 button cell battery (included).

6.5.2. Remove plastic tab before first use.

#### 6.5.3. BATTERY REPLACEMENT

Lay the remote control face-down on a table and hold it down with your left hand.

Insert the thumbnail of your right hand into the Release Tab, and your index fingernail into the pull-groove.

With your thumbnail squeeze the release tab inwards and at the same time slide the battery holder out.



## 7. CLEANING

- WARNING!** Disconnect from mains supply before removing the filters or carrying out any cleaning or maintenance.
- DO NOT** use harsh detergents or chemical cleaners or solvents as they may damage the surface of plastic components.

#### 7.5.1. MAIN BODY

Use a soft duster to dust off all surfaces.

Clean the air inlet and air outlet using a vacuum cleaner on a regular basis.

Wipe all the parts with a soft damp (not wet) cloth dipped in mild soapy water. **CAUTION:** Ensure that water doesn't get inside the unit.

Use a dry cloth to thoroughly dry the unit before turning on.

#### 7.5.2. AIR INLET COVER AND INNER FILTER

Unclip the air inlet cover. Vacuum clean the inner filter. Replace the inner filter if necessary by pulling up the clip on the top edge and easing the inner filter out. Vacuum clean the inner screen. Fit new filter (if necessary) and clip the air inlet cover back in place.

#### 7.5.3. WATER TANK

- WARNING!** Unplug the unit from the mains supply before removing the water tank.

When the unit or the Cool function will not be used for some time, empty the water from the water tank.

Use mild soap and water to clean the water tank. Allow it to air dry or wipe dry using a soft cloth. Make sure the water tank is

completely dry before replacing. This helps prevent any mould or mildew inside the water tank.  
Empty the water and dry out the ice blocks before storage.  
Make sure the air inlet cover and water tank are replaced in position before switching on again.



#### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE



#### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



#### BATTERY REMOVAL: SEE SECTION 6.5.3

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

sales@sealey.co.uk

www.sealey.co.uk