



SOUNDBAR WIRELESS RECHARGEABLE

MODEL NO: **SB1**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

1. SAFETY



- 1.1. **GENERAL**
 - ✓ Read instructions before use
 - ✓ Indoor use only
 - ✗ **DO NOT** leave batteries in a discharged state. Before storage remove batteries.
- 1.2. **BATTERY SAFETY**
 - ☐ **WARNING!** To reduce the risk of burns or fire:
 - ✗ **DO NOT** attempt to open the batteries.
 - ✗ **DO NOT** crush, puncture, short contacts or dispose of in fire or water.
 - ✗ **DO NOT** expose to temperatures above 60°C (140°F).
 - ✓ Recycle or dispose of used batteries as stipulated by local regulation.
 - ✓ If the electrolyte in the batteries gets on your skin or in eyes, rinse thoroughly with cool water and seek immediate medical attention.

2. INTRODUCTION

Stylish and modern sound bar is finished in a nicely painted anthracite grey. Can play your favourite music easily from your smart phone or tablet either by wireless technology, AUX in via an AUX cable (1mtr AUX cable supplied) or even takes a micro SD card. (Micro SD not supplied). 2 Channel sound bar includes a pair of 2" speakers and 1 vibrating diaphragm for added sound quality. Base is mounted on 2 sturdy feet with high grip foam pads which helps dampen any vibration. Charges from a USB cable. (USB cable included).

3. SPECIFICATION

Battery: 3.7V 1.5Ah
Charging Time: 2hr
Model No: SB1
Nett Weight: 790g
Running Time (min): 4hr
Speaker Output: RMS: 6W

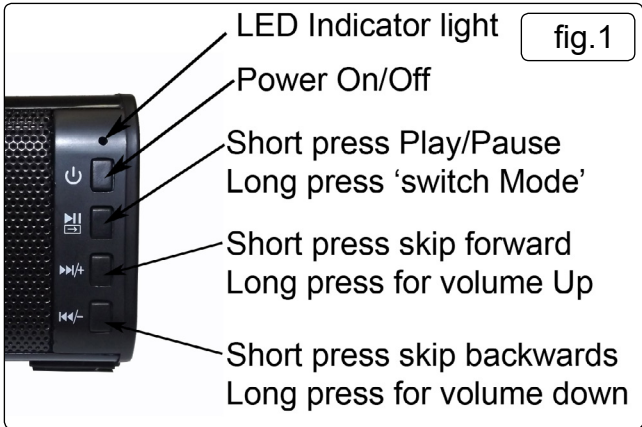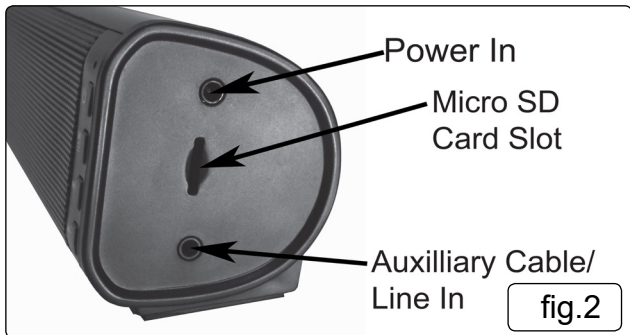

4. OPERATION

- 4.1. **CONNECTIONS**
- 4.2. **WIRELESS CONNECTION**
 - 4.2.1. To pair the SB1 with your Smartphone or other Wireless enabled device turn on the speaker. Enable the wireless function on your smartphone or other wireless enabled device and hit scan for SB1. When found choose it from the list. If prompted to, input password, use password 0000. Once successfully paired, select the SB1 from the list of paired devices and select to connect.



4.3. AUX IN (FIG.4)

4.3.1. Use the provided AUX cable (3.5mm) to directly connect Smartphones, tablets, and other music devices. Switch to line AUX IN by long pressing (mode/play/pause) on the panel (fig.1).

4.4. MICRO SD CARD INPUT (FIG.3)

4.4.1. Insert the Micro SD Card into the device, and then you can enjoy music. The Micro SD Card will only go into the slot one way. **DO NOT** force the card into the slot. Switch to Micro SD Card by long pressing (mode/play/pause) on the panel (fig.1).

4.5. INDICATOR LIGHT (FIG.1)

4.5.1. FAST BLINKING BLUE LIGHT; Pairing mode looking for Wireless device.

4.5.2. BLUE SOLID LIGHT; Device successfully paired.

4.5.3. BLINKING BLUE LIGHT; Wireless play.

4.5.4. SOLID GREEN LIGHT AND BLINKING BLUE LIGHT; Micro SD Card Mode.

4.5.5. GREEN SOLID LIGHT; Line IN Mode.

4.5.6. RED SOLID LIGHT; Charging state.

4.5.7. RED LIGHT GOES OUT; Charging completion



5. TROUBLESHOOTING

Issue	Possible Causes	Solution
No sound or distorted sound	1. Low battery 2. The volume is set to the minimum level.	1. Charge the device 2. Turn up the Volume
The buttons on the unit are not working or the device doesn't respond	Flat battery	Charge the device



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk