



STEEL CREEPER WITH 6 ROUGH GROUND 5" WHEELS & HEADREST

MODEL NO: **SCR101P**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection

1. SAFETY

- WARNING!** Ensure health & safety, local authority and general workshop practice regulations are strictly adhered to when using this equipment.
- ✓ Familiarise yourself with product application and limitations, as well as the specific potential hazards peculiar to this product.
- ✓ Maintain creeper in good condition. Use an authorised service agent.
- ✓ Replace or repair damaged parts. Use only genuine parts only. Non authorised parts will invalidate warranty.
- WARNING!** Use the creeper on level and solid ground, preferably concrete.
- * **DO NOT** use the creeper for any purpose other than that for which is designed.
- * **DO NOT** stand on the creeper.
- * **DO NOT** get the creeper wet or use in damp or wet locations or areas where there is condensation.
- * **DO NOT** clean the creeper with any solvents which may damage the paint surface or padded areas.

2. INTRODUCTION

Steel framework with powder coat paint finish. 5" Composite swivel castors making it easier to travel over rough surfaces. Comfortable vinyl covered deep foam filled back and headrest. Easily assembled, castors and hardware provided. For the professional workshop.

3. SPECIFICATION

Model no	SCR101P
Capacity	180kg
L X W X H	920 X 700 X 190mm
Nett Weight	12.5kg
Wheels	6



fig.1

4. ASSEMBLY

- 4.1. **REFER TO PARTS DIAGRAM**
- 4.2. **UNBOX AND ORGANIZE PARTS**
 - 4.2.1. Lay out all the components, including the two board sections, casters wheels, and any included fasteners. Identify the main centre section and the two side sections.
 - 4.2.2. Align components correctly.
 - 4.2.3. Secure the sections using the provided nuts and bolts.
 - 4.2.4. Install the casters wheels and ensure they spin freely.
NOTE: When tighten all fasteners to ensure stability.
 - 4.2.5. Attach the headrest/ cushion with self tapping screws.
- 4.3. **FINAL CHECK**
 - 4.3.1. All screws and bolts are securely tightened.
 - 4.3.2. Place the creeper on a smooth surface and test the wheels for proper movement.

5. OPERATION

- WARNING!** If you raise the vehicle to work under it, set the vehicle on axle stands.
 - * **DO NOT** work under a vehicle raised on a jack(s).
 - ✓ If the vehicle is on the ground, ensure the vehicle's wheels are chocked, apply the handbrake and put it into gear or Park mode.
- 5.1. As you slide under the vehicle and prior to sliding out on the creeper, keep your head flat on the headrest.

6. MAINTENANCE

- 6.1. Before each use inspect the overall condition of the creeper for broken, cracked or bent parts that may effect the proper operation.

**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No Liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

 **01284 757500**

 **sales@sealey.co.uk**

 **www.sealey.co.uk**