



10L DEHUMIDIFIER

MODEL NO: **SDH102.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Do not cover



Caution: risk of fire



Indoor use only

This appliance contains approximately 45g of R290 refrigerant gas. Appliance shall be installed, operated and stored in a room with a floor area larger than 4m².

1. SAFETY


1.1. ELECTRICAL SAFETY

WARNING! It is the responsibility of the owner and the operator to read, understand and comply with the following: You must check all electrical products, before use, to ensure that they are safe. You must inspect power cables, plugs, sockets and any other connectors for wear or damage. You must ensure that the risk of electric shock is minimised by the installation of appropriate safety devices. A Residual Current Circuit Breaker (RCCB) should be incorporated in the main distribution board. We also recommend that a Residual Current Device (RCD) is used. It is particularly important to use an RCD with portable products that are plugged into a supply which is not protected by an RCCB. If in any doubt consult a qualified electrician. You must also read and understand the following instructions concerning electrical safety.

- 1.1.1. The Electricity at Work Act 1989 requires that all portable electrical appliances, if used on business premises, are tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.
- 1.1.2. The Health & Safety at Work Act 1974 makes owners of electrical appliances responsible for the safe condition of those appliances and the safety of the appliance operators. If in any doubt about electrical safety, contact a qualified electrician.
- 1.1.3. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply. See 1.1.1. and 1.1.2. and use a Portable Appliance Tester.
- 1.1.4. Ensure that cables are always protected against short circuit and overload.
- 1.1.5. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that none are loose.

IMPORTANT: Ensure that the voltage marked on the appliance matches the power supply to be used.

- * **DO NOT** pull or carry the appliance by the power cable.
- * **DO NOT** pull the plug from the socket by the cable.
- * **DO NOT** use worn or damaged cables, plugs or connectors. Immediately have any faulty item repaired or replaced by a qualified electrician. When a BS1363/A UK 3 pin plug is damaged, cut the cable just above the plug and dispose of the plug safely. Fit a new plug according to the following instructions (UK only).
 - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
 - b) Connect the BROWN live wire to the live terminal 'L'.
 - c) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - d) After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight.
- 1.1.6. If an extension reel is used it should be fully unwound before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm², but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm² section cable.

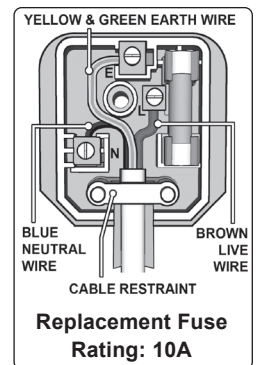

1.2. GENERAL SAFETY

- ✓ Check that the dehumidifier is in sound condition and good working order. Take immediate action to repair or replace damaged parts.
- ✓ Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- * **DO NOT** stand or place any object less than 30cm from the front of the unit, 30cm from the rear and sides of the unit, and 50cm above the unit.
- * **DO NOT** obstruct the air intakes or outlets of the dehumidifier, and **DO NOT** cover with washed clothes.
- * **DO NOT** place any object into the outlets - the unit has a fan running at high speed, contact with this will cause injury.
- * **DO NOT** operate the dehumidifier when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- * **DO NOT** switch the dehumidifier off by disconnecting it from the mains. ALWAYS switch to the "OFF" position first.
- * **DO NOT** remove the float lever from the water collection tank.
- * **DO NOT** connect or disconnect the plug from the mains with wet hands.
- * **DO NOT** use the dehumidifier outside.
- * **DO NOT** place the dehumidifier near to radiators or other heating appliances.
- * **DO NOT** tip to any side as escaping water could damage the appliance.
- ✓ **ALWAYS** discard the water from the collection tank, **DO NOT** use it for any other purpose.
- ✓ Only operate the dehumidifier on a level and stable surface.
- ✓ To prevent water from freezing, **DO NOT** use the dehumidifier at ambient temperatures below 5°C.
- ✓ Ensure that heating appliances are not exposed to the flow of air from the dehumidifier.
- ✓ Before attempting to move the dehumidifier, empty the contents of the collection tank.
- ✓ Use top carrying handle when moving unit.

- ✓ Switch off and disconnect it from the mains before attempting any cleaning or other maintenance work.
 - ✓ Ensure that the dehumidifier is correctly turned off when not in use, and stored in a safe, dry area, out of reach of children.
NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 1.3. SAFETY PRECAUTIONS ON SERVICING**
- **WARNING:** Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry, recognized assessment specification.
 - **WARNING:** Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
 - **WARNING:** If you don't understand something or need help, please contact Sealey.
- 1.3.1. Checks to the area**
- 1.3.1.1. Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.
- 1.3.2. Work procedure**
- 1.3.2.1. Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.
- 1.3.3. General work area**
- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.
- 1.3.4. Checking for presence of refrigerant**
- 1.3.4.1. The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.
- 1.3.5. Presence of fire extinguisher**
- 1.3.5.1. If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.
- 1.3.6. No ignition sources**
- 1.3.6.1. No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.
- 1.3.7. Ventilated area**
- 1.3.7.1. Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- 1.3.8. Checks to the refrigeration equipment**
- 1.3.8.1. Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.
- 1.3.8.2. The following checks shall be applied to installations using flammable refrigerants:
- ✓ The charge size is in accordance with the room size within which the refrigerant containing parts are installed.
 - ✓ The ventilation machinery and outlets are operating adequately and are not obstructed.
 - ✓ If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
 - ✓ Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
 - ✓ Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.
- 1.3.9. Checks to electrical devices**
- 1.3.9.1. Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.
- 1.3.9.2. Initial safety checks shall include:
- ✓ Those capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking.
 - ✓ That there no live electrical components and wiring are exposed while charging, recovering or purging the system.
 - ✓ That there is continuity of earth bonding.

2. INTRODUCTION

Compact, efficient, low noise portable unit that extracts up to 10L of water per day. Removes excess moisture from air to prevent build-up of mildew and mould. Features adjustable 24hr timer, water-full indicator and auto-defrosting. Digital control panel, LED display and 3-colour indicator to show different RH% levels. Refrigerant is environmentally friendly R290. Supplied with drain hose for continuous operation.

3. SPECIFICATION


Model No:.....	SDH102.V2
CO ₂ Equivalent:.....	0
Condensate Tank:.....	2L (with Auto-Shut-Off)
Dehumidifying Capacity:.....	10L/Day @ 30°C, 80% RH
Freezing Pressure (Max):.....	3.2MPa
Fuse Rating:.....	10A
Global Warming Potential (Rating):.....	3
IP Rating:.....	IPX1
Mass:.....	45g
Maximum Airflow:.....	120m ³ /hr
Power:.....	195W
Power Supply Cable Length:.....	2m
Refrigerant:.....	R290
Steaming Pressure (Max):.....	3.2MPa
Supply:.....	230V
Working Space:.....	15m ³
Working Temperature:.....	5-35°C

4. OPERATION

NOTE: Empty water tank before every use.

NOTE: During operation keep doors and windows closed.

NOTE: Place the unit in the area to be dehumidified ensuring that inlet and outlet grilles are unobstructed and that the unit is positioned as stated in section 1.2. Close all doors and windows.

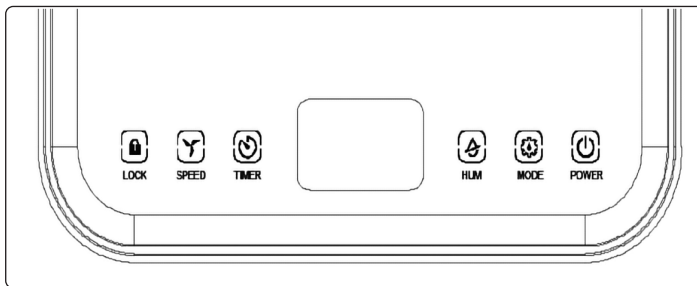

4.1. POWER



- 4.1.1. After switching on the power, all indicators and the LED screen will be on for 1 second and then off. After a buzzer, the power indicator will be on and the machine will be in standby mode.
- 4.1.2. Press power button and the machine starts to run. Initially the machine's settings are 60%RH humidity, automatic mode and high speed operation.
- 4.1.3. Press this key again, the machine will stop running, and the fan will stop. The power light will remain lit.

4.2. MODE



- 4.2.1. To select mode press mode button to switch between modes. The corresponding code indicator will light up in the LED screen.

4.2.2. Auto Mode

The corresponding code indicator (A) will light up in the LED screen.

When the environmental humidity is greater than or equal to the set humidity by +3%, the fan and compressor start working after 3 seconds.

When the environmental humidity is less than or equal to the set humidity by -3%, the compressor stops working and the fan will shut down.

NOTE: Both fan speed and humidity can be adjusted while running in auto mode.

4.2.3. Continuous drying mode

The corresponding code indicator (Cnt) will light up in the LED screen. The machine continues to run, but the humidity cannot be adjusted.

4.2.4. Sleep mode

The corresponding code indicator () will light up in the LED screen. After 10 seconds idling, all indicators gradually fade and the fan speed is automatically switched from high to low. Press the timer button to set the required sleep period. Touch any button to wake up the indicator. Press mode button again to exit the sleep mode.

NOTE: In sleep mode, fault codes is not displayed, fan speed is not adjustable but the humidity is adjustable.

4.3. HUMIDITY SETTING



- 4.3.1. In automatic mode or sleep mode press the button to adjust the set humidity. Each press increments the setting by 5%. Once 80% is reached the value set cycles back to 30%.
- 4.3.2. If the button is held down continuously the unit will display the current ambient temperature.

4.4. TIMER



- 4.4.1. The timer can be set from 0-24 hours in 1 hour increments. Set the value to "00" to cancel the timer function.

- 4.4.2. After the timer is set, the timer LED is on during the timing period. After the timing is over, the timer LED turns off.
- 4.4.3. To set the running time turn the unit off.
- 4.4.4. To set the standby time turn the unit on.

4.5. FAN SPEED



- 4.5.1. The fan speed can only be adjusted in the automatic mode. Press this key to switch between high and low wind speed.
- 4.5.2. The corresponding fan speed indicator lights up (3 blades or 4 blades).

4.6. LOCK



- 4.6.1. Press this button to engage the child lock function. The child lock indicator light is on when set. All other keys are locked and cannot be operated. Press this button again, the indicator light will go out, and the button will be restored.

5. DRAINAGE

5.1. WATER TANK

- 5.1.1. When the water tank is full the warning light on the control panel will flash, the unit will stop working and a buzzer will sound.
- 5.1.2. To remove the water tank first remove lower rear cover by gently pulling it from both sides using grip recesses to pull it.
- 5.1.3. Carefully slide the water tank forward making sure no spillage occurs.
- 5.1.4. Before replacing water tank dry it off thoroughly and also remove any mildew deposits.

5.2. CONTINUOUS DRAINAGE

- 5.2.1. Connect a water pipe (not supplied) to the drain on the rear of the unit.
- 5.2.2. The water pipe requires an inner diameter of 9mm and should not be longer than 1.5 metres.
- 5.2.3. Ensure the connection does not leak.
- WARNING!** The water pipe must **ALWAYS** be lower along all of it's length than the unit outlet drain height.

6. MAINTENANCE

- WARNING!** Switch the machine off and unplug from the mains before carrying out any maintenance or cleaning.

6.1. FILTER CLEANING

- 6.1.1. It is recommended that the air filter is cleaned every two weeks maximum.
- 6.1.2. To remove the filter, remove water tank and gently pull down exposed tab of filter.
- 6.1.3. The filter may only be washed with water.
 - * **DO NOT** use hot water. Leave to dry naturally.
 - * **DO NOT** use solvent cleaners nor use heat to dry the filter.
- 6.1.4. Once dry, replace the filter by snapping it back into place, making sure that the lower edge fits behind the casing locations and that all the lugs are sprung gently into place thus holding the filter up inside casing.

6.2. CLEANING THE CASING

- 6.2.1. The casing may be cleaned by rubbing over with a damp cloth.
 - * **DO NOT** use detergents, abrasive or solvent cleaners as these will damage the surface finish.
 - * **DO NOT** allow the control panel to become wet.

7. TROUBLESHOOTING

SYMPTOM	POTENTIAL CAUSE	POSSIBLE REMEDY
Unit does not operate	Is power supply connected?	Insert the plug into an electrical outlet fully and securely - check fuse in plug is OK.
	Check to see if the water tank is full of water i.e. is water level warning light on.	Remove front cover Empty water out of the tank.
	Check to see if the water tank is fitted properly in position.	Remove front cover and reposition tank.
Dehumidified volume is small	Is filter dirty / clogged ?	Clean filter section
	Check for any obstructions to front and back air inlets / outlets of unit.	See section
	Low ambient temp.	Unit does not work below approx 5°C.
	Low ambient humidity.	Unit has reached required level set.
Humidity remains too high.	Room size may be too large.	Room size may exceed 12m ³ .
	Doors and windows may be opened and closed frequently.	Keep doors and windows shut during operation.
	The dehumidifier is used together with a kerosene heater which emits water vapour.	Turn heater off.
E2	Humidity sensor problem	Change a sensor
LO	Environmental humidity is below 20%	Unit shuts down.
HI	Environmental humidity is above 90%	
CL	Low temperature protection, the environmental temperature < 5°C	
CH	High temperature protection, the environmental temperature > 38°C	



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk