



## 3-SPEED OSCILLATING USB DESK FAN 6"

MODEL NO: **SFF6USB.V3**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
instructions



Indoor use only

### 1. SAFETY

#### ELECTRICAL SAFETY FOR USE OF CHARGER.

- ☐ **WARNING!** It is the user's responsibility to read, understand and comply with the following instructions.
- ☒ Ensure that you inspect the USB cable and connections for wear and damage to ensure items are safe before connecting them. If worn or damaged **DO NOT** use.
- ☐ **WARNING!** There are no user serviceable components. **DO NOT** dismantle.
- ☐ **WARNING!** For indoor use only.
- ☒ **DO NOT** pull USB socket by the lead.
- ☒ Only use the supplied cable for charging.
- ☒ Use the fan in dry areas only. **DO NOT** use in wet or areas with high condensation such as showers, pools etc.
- ☒ Always disconnect the fan from the USB power supply when moving it from one location to another and ensure fan stands on a level surface.
- ☒ The fan air flow is powerful. Before use ensure that there is nothing nearby that will be damaged or displaced by the stream of air.
- ☒ Keep the fan clean and maintained in good condition. For motor service contact an authorised service agent.
- ☒ Use recommended parts only. Unapproved parts may be dangerous, and will invalidate your warranty.
- ☒ **DO NOT** operate the fan where there are explosive or flammable gases, fumes or other hazardous substances.
- ☒ **DO NOT** stand the fan on the power cable.
- ☒ **DO NOT** insert any objects through the fan guard.
- ☒ **DO NOT** cover the fan when in use.
- ☒ **DO NOT** immerse the fan in water or any other liquid.
- ☒ **DO NOT** stand the fan where it may be knocked over or off a surface, or where the lead may cause a person to trip.
- ☒ **DO NOT** use the fan outdoors.
- ☒ **DO NOT** modify speed control or attempt to fit any additional external speed control device to the fan.
- ☒ When not in use place the fan in its original box, or otherwise cover, to protect from dust and store in a safe, dry, childproof location.

**NOTE:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

### 2. INTRODUCTION

Manufactured from composite materials with a steel fan guard. Oscillation control switch and pivot head allow the user to control how the airflow is distributed. Brushless fan motor keeps the fan quiet, making it ideal for office environments. 3-Speed settings. Supplied with a USB cable for powering via a laptop or mobile power bank, alternatively can be powered by 3 x AA batteries (not included) making it perfect as a portable fan.

### 3. SPECIFICATION

Model No: .....SFF6USB.V3  
Fan Diameter: .....Ø150mm (6")  
Height: .....205mm  
Max Current: .....700mA  
Power: .....3.5W  
Speeds: .....3  
Supply: .....5V /USB


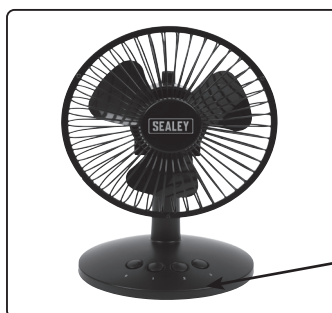 


fig.1

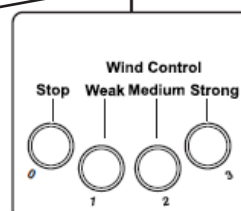 

## 4. OPERATION

Refer to fig.2

### 4.1. POWER BY USB

- 4.1.1. Insert the DC plug into the DC port of the fan base. Then insert the USB plug into the USB port of the computer.

**Note:** Remove the USB plug carefully to avoid damaging the USB port.

- 4.1.2. Press one button of the 1/2/3 buttons to turn on the fan. Press the 0 button to turn off the fan, see fig.1.

### 4.2. POWER BY BATTERIES

- 4.2.1. Insert 3 x AA batteries into the battery box. Ensure they are inserted the correct way round.
- 4.2.2. Remove the batteries if they are not being used to power the fan.

Refer to fig.3

 
 
### 4.3. WIND DIRECTION

- 4.3.1. Adjust wind direction by rotating the fan head. The tightness of the fan head can be adjusted by adjusting the knob.

### 4.4. OSCILLATION

- 4.4.1. Rotate anticlockwise to activate oscillation, clockwise to stop oscillation.

**Note:** Rotate the button carefully to avoid damaging the fan.

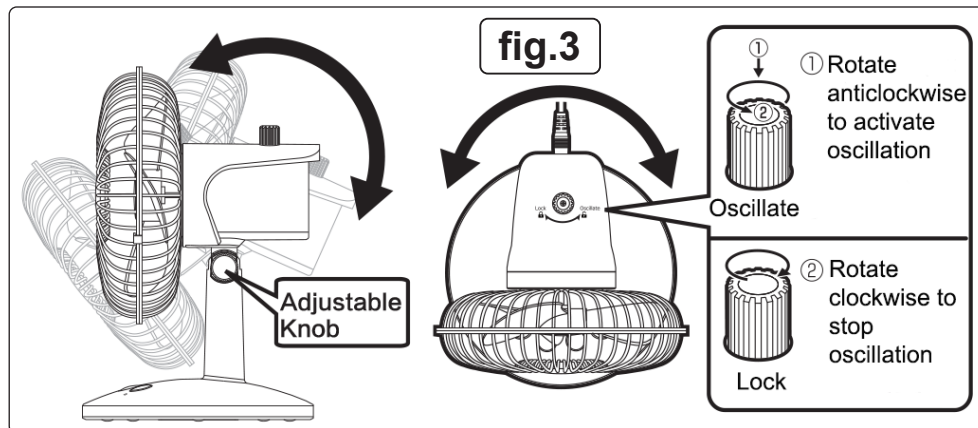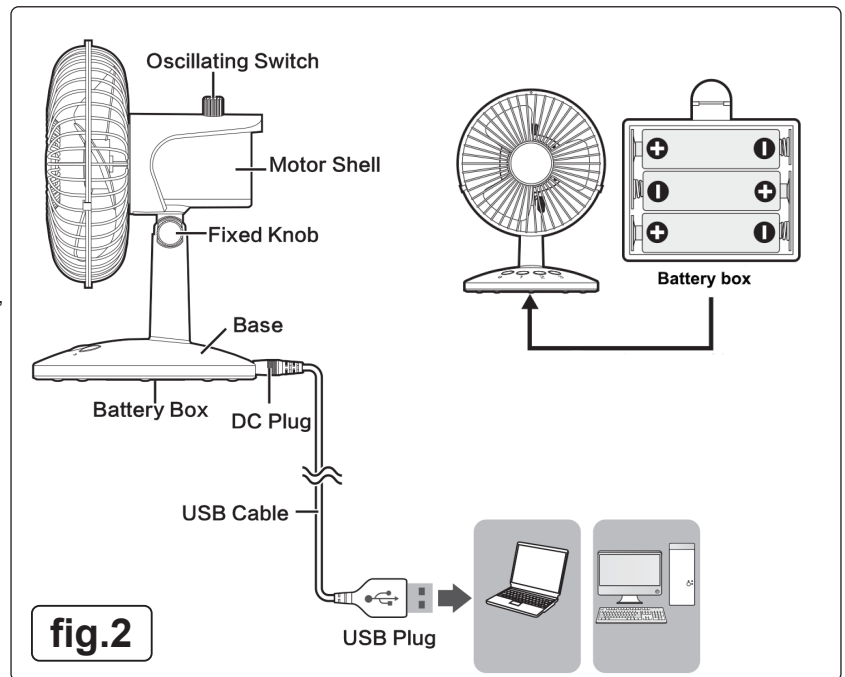

### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



### BATTERY REMOVAL REFER TO SECTION 4.2

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on [technical@sealey.co.uk](mailto:technical@sealey.co.uk) or 01284 757505.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.



REGISTER YOUR PURCHASE HERE

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

[sales@sealey.co.uk](mailto:sales@sealey.co.uk)

[www.sealey.co.uk](http://www.sealey.co.uk)