



SJ SERIES BOTTLE JACKS INSTRUCTION MANUAL

IMPORTANT! READ BEFORE USE! DO NOT DISCARD!

Sealey bottle jacks are designed for lifting vehicles no heavier than their rated lifting capacities. No other use is recommended.

SAFETY INSTRUCTIONS

1. Use the jack only for its intended purpose.
2. Place the vehicle to be lifted on a flat, solid, hard surface. Place wedges under the wheels to prevent the vehicle from moving. **Never use the jack on a slope.**
3. Be sure the vehicle is in gear and the handbrake is on. For vehicles with automatic transmissions, select "PARK".
4. Never operate the jack beyond its maximum rated stroke or lifting capacity.
5. Position the jack so as to avoid having to operate it from under the vehicle. Loads lifted by a jack should have a secondary means of support such as axle stands.
6. Do not raise the vehicle with anyone inside it or leaning against it.
7. Take all possible precautions to avoid unexpected movement of the load when it is being lifted.

USE AND OPERATION

1. Before using the jack, purge the hydraulic system (follow the steps below) in order to eliminate any possible air in the system.
 - Open the release valve by turning it counter-clockwise.
 - Pump the jack handle a few times.
 - Close the release valve until it is tight.

2. Centre the jack head beneath the load. Undo the extension screw if needed. Be sure the jack head is secure and in the correct position.
3. Pump the handle to raise the load.
4. To lower the jack, turn the release valve very slowly in a counter-clockwise direction.
5. Always keep the ram, extension screw and pump retracted after use.

MAINTENANCE

1. Lubricate all moving parts regularly.
2. Keep the jack clean and protected from harsh conditions.
3. If the hydraulic oil needs replacing, fill the reservoir up to the level of the filler plug. **Do not overfill.**
4. Use only a good quality hydraulic oil. **Never use brake fluid or oil mixtures.** Hydraulic oil is available from Sealey Quality Machinery.
5. When ordering spare parts, quote the part number and model jack. Repair kits are available containing the common spare parts.
6. Maintenance and repair must only be carried out by qualified and approved persons.



Sealey Quality Machinery
Easlea Road, Moreton Hall Industrial Estate
Bury St. Edmunds, Suffolk IP32 7BY
Phone: (01284) 757500 Fax: (01284) 760160