



FLOOR STAND FOR SM27

MODEL NO: **SM27ST.V3**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear protective
gloves

1. SAFETY

- ☐ **WARNING!** The lathe (not included) is heavy - it is recommended that two persons lift and lower the lathe onto the assembled stand.
- ✓ Avoid trapping hands/fingers beneath the lathe, when lowering onto the stand.
- ✓ Ensure the stand is positioned on firm, level ground (we recommend concrete or a similar hard surface).
- ✓ Ensure the surrounding environment is not conducive to rust. Rust will damage the stand, rendering it structurally unsafe.

2. INTRODUCTION

Suitable for Model No. SM27 metal turning lathe and other similar lathes. Includes suds tray and two latched door storage cabinets with shelves. Made from welded steel and heavy duty feet making it incredibly sturdy. Part of a vast range of lathe accessories and tools available from Sealey. (Lathe not included)

3. SPECIFICATION

Dimensions (HxWxD):	765mm x 1040mm x 420mm
Nett Weight:	33kg

4. ASSEMBLY


NOTE: assemble using the fixings provided.

- ✱ **DO NOT** tighten fully until all parts are aligned.
- 4.1. Attach the left cabinet (1) to the right cabinet (2) using the back connector plate (3) and the front connector plate (4). Use the smaller fixings provided.
- 4.2. Align the holes and attach the tray (5) to the cabinets using the larger fixings.

5. MAINTENANCE

NOTE: the lathe is heavy and should the stand sustain structural damage, it could collapse/overbalance if not properly repaired/replaced.

- 5.1. Check the stand regularly to ensure structural integrity.
- 5.2. Periodically check the stand for rust.
- 5.3. Occasionally remove the lathe and check the nuts & screws within the stand. Ensure they are all present, intact and tightened.
- 5.4. Regularly check the stand for dents, distortion and signs of misuse.
- 5.5. For information regarding repairs/replacement contact your authorised Sealey stockist.

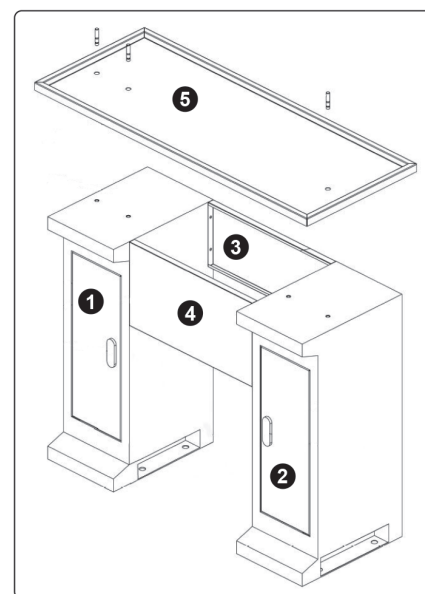

Parts support is available for this product. Please email sales@sealey.co.uk or telephone 01284 757500



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk