



# 42" OSCILLATING TOWER FAN 3-SPEED

MODEL NO: **STF42**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Indoor use only

## 1. SAFETY

### 1.1. ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:  
Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey stockist.

if the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.
  - × **DO NOT** pull or carry the appliance by the power cable.
  - × **DO NOT** pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
  - × **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.  
If the cable or plug is damaged during use, switch the electricity supply and remove from use.  
Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.  
Class II products are wired with live (brown) and neutral (blue) only are marked with the Class II symbol;

A) Connect the BROWN live wire to the live terminal 'L'.

B) Connect the BLUE neutral wire to the neutral terminal 'N'.

C) After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.




Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.

- × **DO NOT** connect either wire to the earth terminal.

Sealey recommend that repairs are carried out by a qualified electrician.

If an extension reel is used it should be fully unwound before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm<sup>2</sup>, but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm<sup>2</sup> section cable.

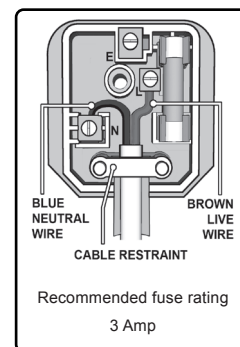

### 1.2. GENERAL SAFETY

- ✓ Disconnect the fan from the mains power when not in use and before servicing or performing any maintenance.
- ✓ Use the fan in dry areas only. Do not use in wet or areas with high condensation such as showers, pools etc.
- **WARNING!** If a fan falls into water or other liquid, immediately switch off and disconnect from the mains power supply. **DO NOT** touch the fan until the mains power supply has been disconnected.
- ✓ Always disconnect the fan from the power supply when moving it from one location to another and ensure fan is stood on a level surface.
- ✓ The fan air flow is powerful. Before use ensure that there is nothing nearby that will be damaged or displaced by the stream of air.
- ✓ Keep the fan clean and maintained in good condition. For motor service contact an authorised service agent.
- ✓ Use recommended parts only. Unapproved parts may be dangerous, and will invalidate your warranty.
- × **DO NOT** operate the fan where there are explosive or flammable gases, fumes or other hazardous substances.
- × **DO NOT** stand the fan on the power cable.
- × **DO NOT** insert any objects through the fan guard.
- × **DO NOT** cover the fan when in use.
- × **DO NOT** immerse the fan in water or any other liquid.
- × **DO NOT** allow children to operate the fan.
- × **DO NOT** stand the fan where it may be knocked over or off a surface, or where the lead may cause a person to trip.
- × **DO NOT** use the fan outdoors.
- × **DO NOT** modify speed control or attempt to fit any additional external speed control device to the fan.

- ✓ When not in use place the fan in its original box, or otherwise cover, to protect from dust and store in a safe, dry, childproof location.
- NOTE:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## 2. INTRODUCTION

Slimline fan design suitable for floor or desktop. 3-Speeds. Smooth running motor powers fan blades and oscillating gearbox to aid even air distribution. Fitted with 3-pin plug.

## 3. SPECIFICATION

Model no:.....STF42	Maximum Flow Rate (F):.....31.1m <sup>3</sup> /min
Speeds: .....3	Fan Power Input (P):: ..... 45.9W
Oscillation:..... yes	Service Value (SV):: .....0.7 (m <sup>3</sup> /min)/W
Supply: ..... 230V	Standby Power Consumption (Psb):: ..... 0.3W
Power: ..... 55W	Fan Sound Power Level (Lwa):..... 59.6dB(A)
Height: .....1065mm	Maximum Air Velocity (c):.....3.5m/s

### STF42 v1 Oscillating Tower Fan 3-Speed 42" 230V - 4356400.50

Directive/Regulation:		Energy Label. Fan. NOT APPLICABLE
Directive/Regulation:		Ecodesign Fan. 206/2012/EU: ≤ 125W 327/2011/EU: input between 125W and 500W
Report Reference:	4356400.50	Date: 01/08/2019
Test house:	DEKRA	
206/2012/EU: (Fan ≤ 125W)	* one decimal place ^to nearest whole number	
	Maximum fan flow rate F. m <sup>3</sup> /min	31.1 *
	Fan power input, P. W	45.9 *
	Service value, SV. (m <sup>3</sup> /min)/W	0.7 *
	Stanby power consumption, P <sub>sb</sub> Watt	0.3 *
	Fan sound power level, L <sub>WA</sub> dB(A)	59.6 ^
	Maximum air velocity, c.meters/sec	3.5 *
	Measurement standard for service value	IEC 60879:1986

## 4. OPERATION

- **WARNING!** Ensure that you read, understand and apply safety instructions in Section 1 before using fan.
- 4.1. The fan can be operated using either the buttons on top or using the remote control located in the centre of the top of the fan, see fig.1.
  - 4.2. Plug into the mains power and turn fan on by pressing button 'A'.
  - 4.3. Select the desired speed by cycling through the three speeds with button 'B'.
  - 4.4. The fan can be set to work constantly or for a time duration of 1, 2, 4 or 8 hours by cycling through with the Timer button 'C'.
  - 4.5. Press button 'D' to allow fan to oscillate.
  - 4.6. Store the remote control unit in the recess in the top of the fan unit, see fig.1. Note: Battery type CR2025, not supplied with product.
  - 4.7. **REMOTE BATTERY**
  - 4.7.1. Refer to fig.2 for location of battery compartment. Release clip and slide battery tray out. Note orientation of battery.

## 5. MAINTENANCE

- **WARNING!** Ensure that the fan is disconnected from the mains power supply before attempting any of the following:
- 5.1. Use a soft, damp cloth to clean the outside of the fan.
  - \* **DO NOT** immerse the fan in water and never allow water to drip onto the motor housing. **DO NOT** use solvents, petroleum, paint thinner or other chemicals to clean the fan.
  - 5.2. Should the motor, switch or the power lead require service or maintenance contact your local service agent.
  - 5.3. When not in use place the fan in its original box or otherwise cover to protect from dust, and store in a safe, dry, childproof location.



fig.1



fig.2

**BATTERY REMOVAL: REFER TO 4.7.1.**

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

**WEEE REGULATIONS**

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR**



**01284 757500**



**01284 703534**



**sales@sealey.co.uk**



**www.sealey.co.uk**