

INSTRUCTIONS FOR: Sports Watch Model: **SW99**

Thank you for purchasing a Sealey product which has been manufactured to a high standard. If this watch is used according to these instructions and properly cared for it will offer good time keeping for many years to come.



IMPORTANT: PLEASE READ THE WATER RESISTANT BATTERY CHANGING INSTRUCTIONS CAREFULLY. FAILURE TO DO SO MAY DAMAGE THE WATCH AND WILL INVALIDATE YOUR WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

CHANGING THE BATTERY.

This watch has been factory equipped with a new individually tested battery. If your watch stops, have the battery checked by an authorised dealer.

TO CHANGE THE BATTERY:

THIS FUNCTION MUST BE PERFORMED BY A WATCH SPECIALIST AND IS CHARGEABLE.

1. Use a "silver-oxide" battery **Size: 1.55V, 6.9x2.6mm.**
2. Use a proper tool to carefully unscrew the back cover in an anti-clockwise direction.
3. Insert the new battery with the positive (+) side toward the gasket.
4. Carefully replace and tighten cover in a clockwise direction.

NOTE: If the battery and cover have been correctly replaced the watch should remain water-resistant.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this watch.

WARRANTY: Guarantee is 12 months from purchase date, (excluding battery), proof of which will be required for any claim. **INFORMATION:** Call us for a copy of our latest catalogue on 01284 757525 and leave your full name and address including your postcode.



Sole UK Distributor, Sealey Group,
Bury St. Edmunds, Suffolk.



01284 757500



01284 703534

E-mail:

sales@sealey.co.uk

IMPORTANT

**This watch is water resistant for swimming, bathing and washing.
It is NOT suitable for scuba diving.**