

TORQUE CONTROL SPARK PLUG SOCKET SET INSTRUCTIONS FOR MODEL NO: **SX037**

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE

1. SAFETY INSTRUCTIONS

- Ensure all workshop safety rules, regulations, and conditions are complied with when using torque control spark plug sockets.
- ✓ Maintain the sockets in good condition and replace them if damaged or worn.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Always wear safety goggles when using this product.
- **WARNING! DO NOT** use the sockets if thought to be damaged or faulty.
- ✓ Always finish tightening spark plugs using a calibrated torque wrench to the settings stated in the vehicle manufacturer's service instructions, or proprietary manual.
- WARNING! DO NOT use air or power tools with these sockets as this may result in damage to the socket and/or the cylinder head.

2. SPECIFICATION

Chrome Vanadium steel, WallDrive®, 12-point sockets, with plug retaining insert. Prevents over-tightening of spark plug and resulting head damage. Transmits full torque in reverse for rapid plug removal. Supplied in blow moulded case.

Plug Size:	8mm	10mm	14mm
Hex Size:	14mm	16mm	21mm
Torque Limit:	19Nm	20Nm	25Nm
Drive:	3/8"Sq	3/8"Sq	3/8"Sq

3. OPERATION

3.1 Removing Spark Plugs.

3.1.1 The sockets will deliver full torque in reverse when removing spark plugs.

3.2 Replacing Spark Plugs.

- 3.2.1 When replacing spark plugs the sockets will tighten the plugs to the rated values shown in the table above.
- 3.2.1 When the socket clutch operates the spark plug will not be tightened any further.
- 3.2.3 Remove the socket and use a calibrated torque wrench to tighten the spark plugs to the specified torque as advised by the vehicle manufacturer's service instructions, or proprietary manual.



NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our catalogue and latest promotions call us on 01284 757525 and leave your full name, address and postcode.



Sole UK Distributor Sealey Group, Bury St. Edmunds, Suffolk.

ì	01284	757500
L	01284	703534

www.sealey.co.uk