




INSTRUCTIONS FOR:

## MANUAL BEAD BREAKER

MODEL No: **TC9660**


Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

 **IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.**

### 1. SAFETY INSTRUCTIONS

#### GENERAL SAFETY

- ✓ Familiarise yourself with the applications, limitations and any possible or potential hazards of the bead breaker.
- ✓ Maintain the bead breaker in good condition.
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ☐ **WARNING!** Check regularly for damaged parts. Any part that is damaged must be repaired or replaced before the equipment is next used.
- ✓ Wear approved safety eye protection.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip safety shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- x **DO NOT** use the bead breaker for any purpose other than that for which it is designed.
- x **DO NOT** operate the bead breaker if any parts are damaged or missing as this may cause failure and/or personal injury.
- x **DO NOT** allow untrained persons to operate the bead breaker.
- x **DO NOT** operate the bead breaker when you are tired or under the influence of alcohol, drugs or intoxicating medication.

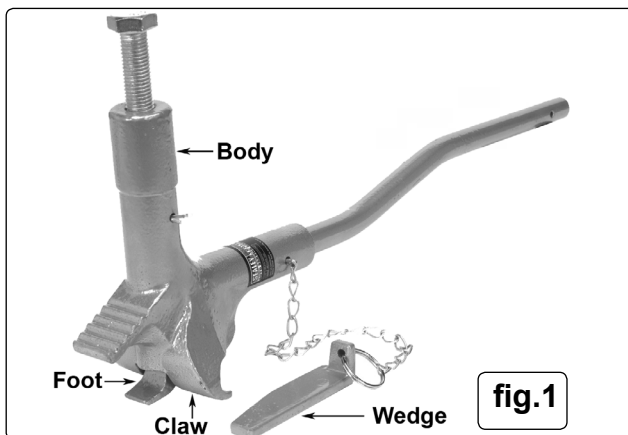

### 2. OPERATION

**THIS BEAD BREAKER IS ONLY RECOMMENDED FOR STEEL RIMS.**

**Bead breaking (see fig.1)**

- 2.1. Deflate the tyre by removing the valve core.
- 2.2. Secure the foot in the body by inserting the split pin.
- 2.3. Fit the handle into the socket and secure using the split pin on the wedge chain.
- 2.4. Force the two claws under the rim holding the handle whilst applying pressure to the serrated pedal.
- 2.5. Slide the wedge into the inside of the rim with the chamfer outward( see fig.2).
- 2.6. Remove the split pin from the body to release the foot and screw down using a 24mm spanner or socket to force the bead away from the rim..
- 2.7. Slacken off the foot, move around the rim and repeat in several places.
- 2.8. When one bead is free, turn the wheel over and repeat to break the other bead.



### Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



**Sole UK Distributor, Sealey Group,**  
Kempson Way, Suffolk Business  
Park, Bury St. Edmunds, Suffolk,  
IP32 7AR



01284 757500



01284 703534



[www.sealey.co.uk](http://www.sealey.co.uk)



[sales@sealey.co.uk](mailto:sales@sealey.co.uk)