



TYRE BEAD BREAKER

MODEL NO: **TC968.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear eye protection



Wear protective gloves

1. SAFETY

- ❑ **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment. Under Health and Safety Law, Employers and Self Employed Personnel have a legal duty to ensure Safe Working Conditions for all employees and personnel that may come into contact with this equipment. In particular they must carry out a specific risk and hazard assessment in the workplace to eliminate or reduce any risk found and must record, update and retain records of the results of this inspection.
- ✓ Familiarise yourself with the applications, limitations and any possible or potential hazards of the bead breaker.
- ✓ Maintain the bead breaker in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ❑ **WARNING!** Check regularly for damaged parts. Any part that is damaged must be repaired or replaced before the equipment is next used.
- ✓ Locate the bead breaker in a suitable work area, keep area clean and tidy and free from unrelated materials. Ensure that there is adequate lighting.
- ✓ Keep the bead breaker clean for best and safest performance.
- ✓ Wear approved safety eye protection and gloves.
- ✓ Keep hands well clear of the bead breaker.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip safety shoes.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings other loose jewellery and contain and/or tie back long hair.
- ✓ Keep children and unauthorised persons away from the work area.
- ✗ **DO NOT** use the bead breaker for any purpose other than that for which it is designed.
- ✗ **DO NOT** operate the bead breaker if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** allow untrained persons to operate the bead breaker.
- ✗ **DO NOT** stand on the bead breaker.
- ✗ **DO NOT** operate the bead breaker when you are tired or under the influence of alcohol, drugs or intoxicating medication.

2. INTRODUCTION

Manual bead breaker especially suitable for motorcycle tyres. Lever action with parallel linkage keeps head at the optimum angle for breaking the bead.

3. SPECIFICATION

Model no TC968.V2
 Weight..... 4.6kg
 Max. bead thickness 160mm
 Max. tyre profile 190mm

4. OPERATION

- 4.1. **BEAD BREAKING**
 - 4.1.1. Deflate the tyre by removing the valve core.
 - 4.1.2. Align the shoe of the bead breaker so that it sits on the tyre and close to the edge of the wheel rim.
 - 4.1.3. Apply firm pressure to the bead breaker by pushing down on the long handle, gradually work around the wheel rim until the bead has separated from the rim.
 - 4.1.4. Turn wheel over and repeat to free the other bead.



**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk