

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- 1.1 WARNING! Brake drums are extremely heavy. Care must be taken when removing, fitting or transporting them. We recommend that any such work be undertaken by two people.
- 1.2 Ensure work area is clean and free of any spillages e.g. oil, water.
- 1.3 Always maintain control of the dolly when loaded with a brake drum.
- 1.4 Ensure all non-essential personnel are removed from the area.
- 1.5 When not in use, store in a safe, dry, childproof area.
- 1.6 Ensure appropriate protective measures are taken (eg breathing apparatus) to avoid inhaling brake dust, which may include asbestos.

2. APPLICATION & SPECIFICATION

- 2.1 Suitable for removing, installing and transporting heavy outboard and inboard mounted drums on disc wheel hubs. Fast, simple and safe handling - reduces time lost for injury. Easy adjustment of drum height by large machine screw. Removable handle for compact storage.

Drum Capacity:	Ø375 - 420mm
Min Height:	260mm
Max Height:	390mm

3. OPERATING INSTRUCTIONS

- 3.1 Removal of brake pad. Ensure the vehicle is supported by an adequately rated axle stand. DO NOT rely on a jack alone.
- 3.2 Bring the trolley into position beneath the exposed brake drum, laying the handle on the ground.
- 3.3 Rotate the machine screw (anticlockwise) to raise the holding area so that it comes to rest just below the brake drum.
- 3.4 Carefully remove the brake drum and allow it to rest on the trolley.
- 3.5 Secure the drum using the adjustable latch.
- 3.6 Fitting a brake drum. Secure the drum on the dolly and position it beneath the hub.
- 3.7 Rotate the machine screw (anticlockwise) to raise the holding area to the level required. Remove the adjustable latch and slide the brake drum into place on the hub.



4. MAINTENANCE

- 4.1 Periodically oil the machine screw.
- 4.2 Regularly check the TH001 for any sign of structural damage. If you suspect the unit to have sustained damage, remove it from service immediately and contact your authorised Sealey dealer for advice on repairs/replacement.