

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will give you years of trouble free performance if these instructions are carefully followed and the product is correctly maintained.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- p **WARNING!** Ensure health & safety, local authority, and general workshop practice regulations are strictly adhered to when using this equipment.
- 3 Familiarise yourself with product application and limitations, as well as the specific potential hazards peculiar to this product.
 - 3 Maintain the pump in good condition (use an authorised service agent).
 - 3 Replace or repair damaged parts. *Use genuine parts only. Non authorised parts will invalidate the warranty.*
 - 3 Use only to pump oils up to SAE 40 viscosity.
 - 3 Ensure safety eye protection and protective clothing are worn when using this product.
 - 3 Keep the work area clean, uncluttered and ensure there is adequate lighting.
 - 3 Maintain correct balance and footing. Ensure the floor is not slippery and wear non slip shoes.
 - 3 Keep children and unauthorised persons away from the working area.
 - 3 Dispose of waste liquids in accordance with local authority regulations.
 - 3 Maintain foot pressure on the foot plate at all times while using the pump.
 - 7 **DO NOT** use to extract corrosive fluids.
 - 7 **DO NOT** dismantle, tamper with or adapt the pump for any purpose other than for which it is designed.
 - 7 **DO NOT** use the unit if it has been dropped or mishandled, check the unit to ensure there is no damage.
 - 3 Keep the pump clean and store in a safe dry, childproof location.
- p **WARNING! DO NOT** allow uncontrolled discharge of fluids thus polluting the environment.

2. APPLICATION

Self-priming lever pump manufactured from galvanised steel, supplied with 16ltr reservoir. Features carry handle for ease of manoeuvrability. Foot plate for stability while in use. 1.8mtr delivery hose with angled spout. Drip opening/spout storage within bucket cover for tidy storage when not in use. Suitable for oils up to SAE 40 viscosity.

3. OPERATION

- ### 3.1 Filling
- 3.1.1 Slacken off the three thumbscrews and twist the top of the dispenser clockwise and lift off.
 - 3.1.2 Fill the reservoir with oil.
- Note:** Only use oils up to SAE 40 viscosity.
- 3.1.3 Replace the top of the dispenser and twist anti-clockwise to locate the bayonet fixings, tighten the three thumbscrews to secure the top.
- ### 3.2 Dispensing
- 3.2.1 Insert the angled spout into the item to be filled.
 - 3.2.2 Place foot on the foot plate and pump handle to dispense oil.
 - 3.2.3 When the desired amount has been dispensed, locate the hose/spout into the top of the dispenser.



Parts support is available for this product.

To obtain a parts list and diagram please log on to www.sealey.co.uk, email sales@sealey.co.uk or phone 01284 757500

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: Call us for a copy of our latest catalogue on 01284 757525 and leave your full name and address including your postcode.

