



# ™ Non-Aerosol Spot Sprayer Red/Black

MODEL NO: TP900R TP900B

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear eye protection



Wear protective gloves

## 1. SAFETY

### 1.1. GENERAL SAFETY


- ✓ Read all instructions before use.
- ✓ Only use the sprayer for its intended purpose.
- ✓ Familiarise yourself with the applications, limitations, and potential hazards of this product.
- ✓ Use original Sealey spare parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Ensure containers cannot easily be knocked over during filling.
- ✓ Use only compatible liquids.
- ✓ Ensure the sprayer is de-pressurised before opening.
- ✓ Mark fluid containers with hazard labels to show their contents.
- ✓ Keep any fluid containers in a well ventilated, lockable store, preferably outside the working area.
- ✓ Keep children and unauthorised persons away from the working area, especially when the sprayer is in operation.
- ✓ Keep the work area childproof by using padlocks and master switches.
- ✓ Maintain the sprayer in top condition. Keep it clean for best and safest performance.
- ✓ Follow the same precautions when transferring fluid from the sprayer back into other containers.
- ✓ Always inspect and prepare the sprayer before use according to the directions provided in this manual.
- ✓ Keep the sprayer turned off. **DO NOT** turn on power to the sprayer until ready to spray in order to avoid unintentional spray release.
- ✗ Never point the spray gun at people or animals.
- ✗ Wear appropriate PPE (gloves, eye protection) when handling chemicals.
- ✗ **DO NOT** eat, drink, rub your eyes, or touch any part of your bare skin while handling agents and spraying.
- ✗ **DO NOT** spray near open flames or sources of heat.
- ✓ Always clean up spills immediately per instructions on the agent's label.
- ✗ **DO NOT** use an open flame or smoke anywhere near the sprayer or around stored fluid.
- ✗ **DO NOT** use the sprayer if the pump is damaged in any way.
- ✗ **DO NOT** use whilst under the influence of drugs, alcohol or other intoxicating medication, or if you are fatigued.
- ✗ **DO NOT** use paints or coatings.

## 2. INTRODUCTION

Eco-friendly and refillable. Can be pressurized using an air supply or by foot pump via schrader valve. A trigger-controlled spray mechanism for precise application, minimizing overspray. Meets workplace safety standards across various industries. Not suitable for flammable substances or paint products.

## 3. SPECIFICATION

|                      |               |        |
|----------------------|---------------|--------|
| Model no             | TP900R        | TP900B |
| Maximum air pressure | 150psi        |        |
| Operational pressure | 80-150psi     |        |
| Capacity             | 1L (30 fl oz) |        |
| Nett weight          | 1.14kg        |        |
| Colour               | Red           | Black  |

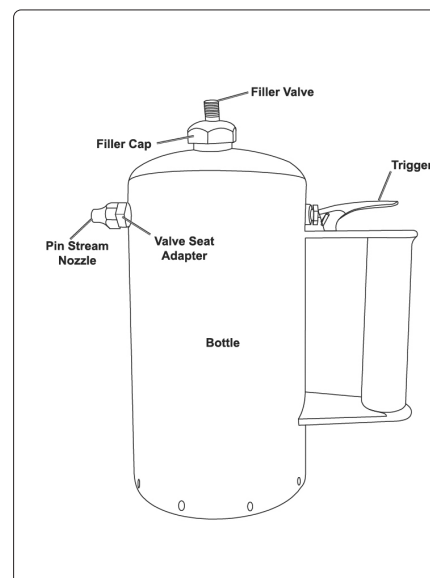

## 4. OPERATION

- ▲ **DANGER** Use only with non-flammable cleaners, degreasers, penetrating oils, solvents, and lubricants. **DO NOT** use with water or water-based materials.

### 4.1. FILLING THE BOTTLE

- 4.1.1. Check trigger functionality  
4.1.2. Before filling, depress the trigger to ensure it operates properly and does not stick.

### 4.2. REMOVE THE FILLER CAP

- 4.2.1. Loosen and remove the filler cap from the top of the bottle.

### 4.3. ADD LIQUID

- 4.3.1. Pour the desired liquid into the bottle through the top opening.

**NOTE: DO NOT** fill beyond two-thirds full.

### 4.4. REPLACE THE FILLER CAP

- 4.4.1. Insert the filler cap back into the top of the bottle and tighten securely.

### 4.5. CHARGING THE BOTTLE

- 4.5.1. Pressurise using air chuck  
4.5.2. Attach an air chuck (sold separately) to the valve stem to charge the bottle to 80–150 PSI.  
4.5.3. The sprayer will de-pressurise during use. When pressure drops and affects the spray pattern, recharge the bottle using the air chuck until proper pressure is restored, then resume spraying.

### 4.5.4. ADJUSTING THE SPRAY PATTERN

- 4.5.5. Change from diffuse to pin stream  
4.5.6. Unscrew the Pin Stream Nozzle.  
4.5.7. Remove the Spray Nozzle.  
4.5.8. Reattach the Pin Stream Nozzle and tighten.

### 4.6. AFTER SPRAYING

- 4.6.1. Shut-down procedure  
4.6.2. De-pressurise the sprayer.  
4.6.3. Dispose of any remaining liquid safely.  
4.6.4. Clean the sprayer according to the maintenance instructions.  
4.6.5. Store the sprayer indoors, out of reach of children.

- ❑ **WARNING!** Maximum pressure must not exceed 150 PSI.

## 5. MAINTENANCE

- 5.1. After use, re-pressurise the sprayer and fully empty it of all contents and pressure.  
5.2. Rinse thoroughly with water or a suitable cleaning agent.  
5.3. Store in a cool, dry place, away from direct sunlight.  
5.4. Periodically check for leaks, worn seals, or damaged parts.  
5.5. Rebuild kits are available for maintenance (e.g., Vaper #19420).

## 6. TROUBLESHOOTING

| Problem                | Possible Causes                                                                                                       | Solutions                                                                                                                                                                                                          |
|------------------------|-----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unit does not spray.   | 1. Bottle has insufficient liquid.<br>2. Filler cap is loose.<br>3. Sprayer not pressurised.<br>4. Nozzle is clogged. | 1. Fill bottle to 2/3 capacity.<br>2. Tighten filler cap.<br>3. Use air chuck (sold separately) on valve stem to pressurize bottle to 80–150 PSI.<br>4. Disassemble nozzle, clean, then reassemble.                |
| Spray pattern is poor. | 1. Nozzle needs adjustment.<br>2. Spray fluid contains particles or sand.<br>3. Nozzle is clogged.                    | 1. Remove spray nozzle and switch to Pin Stream.<br>2. Disassemble nozzle, clean, then reassemble. Empty bottle, clean, and refill with properly strained fluid.<br>3. Disassemble nozzle, clean, then reassemble. |



#### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR  
PURCHASE HERE

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Jack Sealey Ltd t/a Sealey Group**, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK  
**Jack Sealey (EU) Ltd t/a Sealey Group**, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland  
**Tel:** 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk