

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

⚠ IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

- ❑ **WARNING! DO NOT** operate using flammable liquids in a confined space, the area should have adequate ventilation.
- 1.2 If pumping flammable liquids, avoid proximity to naked flames or welding operations.
- 1.3 Wear appropriate protective clothing when pumping solvents. We recommend eye/face and hand protection, available from your authorised Sealey dealer.
- 1.5 Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- 1.6 Ensure spillages are dealt with immediately. Failure to do so could lead to injury.
- 1.4 Keep children away from areas where solvents are being used.


2. OPERATION

- 2.1 Insert the spout 'A' into the head of the pump and tighten the associated ring nut.
- 2.2 Open an appropriate drum. Remove the adaptors D & E from the main body of the pump. If the drum neck has a male (external) thread, keep the adaptors together and screw female adaptor 'E' onto the main thread as shown on the right. If the drum neck has a female (internal) thread, use adaptor 'D' on its own and screw it into position. See below.
- 2.3 Where the tank neck has no thread at all universal adaptor 'F' can be used. This is not supplied and must be ordered separately (Part no: TP99/1). Drop the legs 'I' into the tank neck and rotate the larger ring 'H' clockwise to get the legs to grip the neck internally.
- 2.4 When the adaptor is securely in place insert the main body of the pump and adjust it's height & rotation. To secure the pump tighten the thumbscrew 'D1' or ring 'G' as appropriate.
- 2.5 Operate the plunger 'B' through its full stroke until the desired amount of liquid has been dispensed.

3. MAINTENANCE

- 3.1 The pump requires very little maintenance. Keep the pump clean and flush with clean water each time before fitting to a fresh barrel.

Note: Nut 'C' should be tight enough to effect a seal on the plunger shaft but not so tight that it locks the shaft.

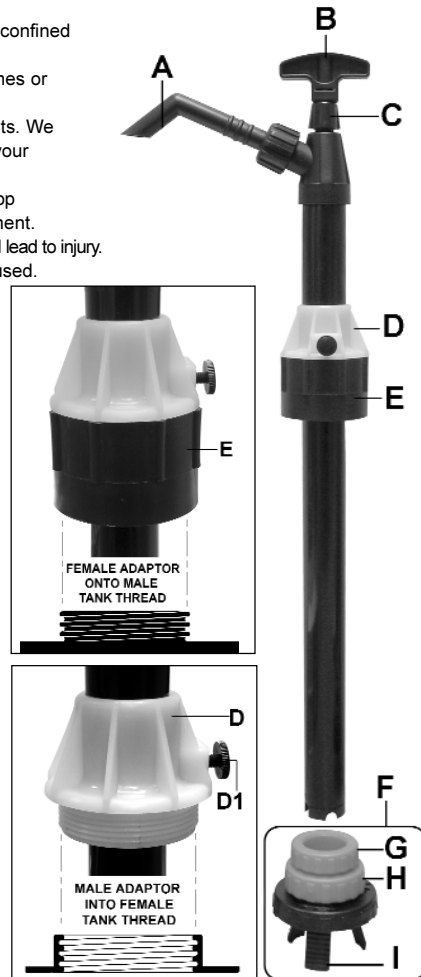

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our catalogue and latest promotions call us on 01284 757525 and leave your full name, address and postcode.

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

⚠ IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

- ❑ **WARNING! DO NOT** operate using flammable liquids in a confined space, the area should have adequate ventilation.
- 1.2 If pumping flammable liquids, avoid proximity to naked flames or welding operations.
- 1.3 Wear appropriate protective clothing when pumping solvents. We recommend eye/face and hand protection, available from your authorised Sealey dealer.
- 1.5 Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- 1.6 Ensure spillages are dealt with immediately. Failure to do so could lead to injury.
- 1.4 Keep children away from areas where solvents are being used.


2. OPERATION

- 2.1 Insert the spout 'A' into the head of the pump and tighten the associated ring nut.
- 2.2 Open an appropriate drum. Remove the adaptors D & E from the main body of the pump. If the drum neck has a male (external) thread, keep the adaptors together and screw female adaptor 'E' onto the main thread as shown on the right. If the drum neck has a female (internal) thread, use adaptor 'D' on its own and screw it into position. See below.
- 2.3 Where the tank neck has no thread at all universal adaptor 'F' can be used. This is not supplied and must be ordered separately (Part no: TP99/1). Drop the legs 'I' into the tank neck and rotate the larger ring 'H' clockwise to get the legs to grip the neck internally.
- 2.4 When the adaptor is securely in place insert the main body of the pump and adjust it's height & rotation. To secure the pump tighten the thumbscrew 'D1' or ring 'G' as appropriate.
- 2.5 Operate the plunger 'B' through its full stroke until the desired amount of liquid has been dispensed.

3. MAINTENANCE

- 3.1 The pump requires very little maintenance. Keep the pump clean and flush with clean water each time before fitting to a fresh barrel.

Note: Nut 'C' should be tight enough to effect a seal on the plunger shaft but not so tight that it locks the shaft.

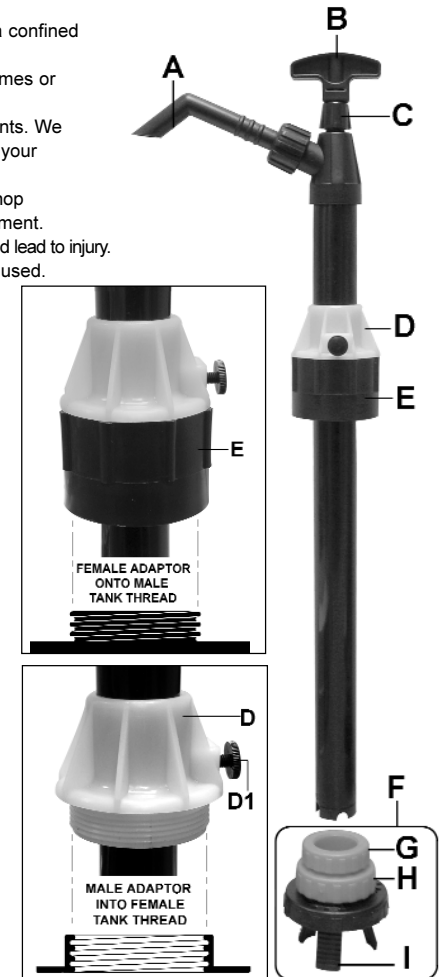

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our catalogue and latest promotions call us on 01284 757525 and leave your full name, address and postcode.