

TRANSMISSION JACK LIFTING PLATE 200KG MODEL NO: TRP200

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.







Refer to instructions

Wear protective gloves

Wear safety footwear

1. SAFETY

- WARNING! The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator. A risk assessment should be performed prior to use.
- WARNING! Ensure all preliminary checks are carefully carried out before use and that all fixings are correctly and securely engaged. Immediately repair or replace damaged parts (use authorised service agent). Ensure use of genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- □ WARNING! Use jack on level and solid ground, preferably smooth concrete. Ensure the floor over which the loaded jack will be transported is swept clean.
- □ **WARNING!** Ensure that the loaded item is correctly supported, well balanced and secured in place prior to final removal from vehicle and before any movement of the loaded jack within the workshop.
- **DO NOT** make any modifications to the unit supplied.
- **DANGER!** DO NOT use on tarmacadam, or any other soft surface as jack may sink or topple. Serious injury may result if ignored.
- **DANGER!** If the load tips or leans, stop what your are doing. MOVE QUICKLY TO A SAFE DISTANCE. **DO NOT** TRY TO HOLD OR STEADY JACK.
- \checkmark The unit is intended for use only with Sealey transmission jacks.(TR / ETJ and TRQ models in our ranges).
- Ensure that load adaptor is correctly attached to the jack and that the grub-screw is fitted before use.

2. INTRODUCTION

Attaches to the existing pronged saddle, fitted to our TR, ETJ and TRQ model transmission jacks. This plate will assist in working on fuel tanks, sub frames, transmissions and many other tasks. The chemical resistant rubber pad protects the point of contact. Supplied with four eyelets to fasten down the load onto the plate. Powder Painted to create a durable and rust resistant finish.


3. SPECIFICATION


 Model No:
 TRP200

 Capacity
 200 kg

4. ASSEMBLY


4.1. Place the boss located on the underside of the Load Plate (fig.1) onto the Jack ram (fig.2). Fix in place ensuring the securing bolts retain the plate centrally.

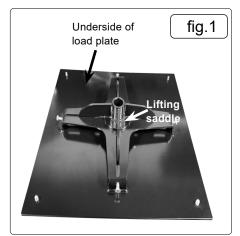

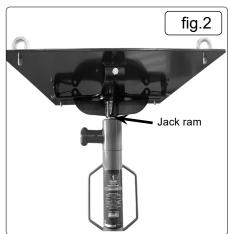



M10 bolts X4 tighten evenly to centralise

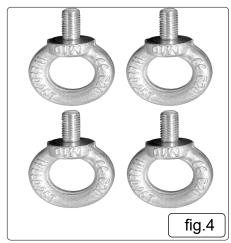

4.2. Insert the four M10 eyelets into the top of the loadplate and place the 14mm rubber pad on the top as shown (fig.4/5).





ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

© Jack Sealey Limited Original Language Version TRP200 Issue 2 16/02/24