

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS



- ❑ **WARNING!** Before you assemble the stand to the saw ensure that the table saw is unplugged from the mains power supply.
- ✓ Inspect the table saw to see that the mounting points for the stand are in good condition.
- ✓ The stand must be fixed to the underside of the table saw with the fixings provided before the saw can be used.
- ✓ If the stand is used in conjunction with the table extension piece accessories (TS10CZ/EWS) the user of the saw should consider the sizes of material to be cut on the saw and review whether the stand and saw should be fixed to the floor.

2. CONTENTS

- | | |
|-----------------------------|--------------------------------|
| 4 x Legs (A) | 2 x Centre struts (long). (D) |
| 2 x Top struts (long). (B) | 2 x Centre struts (short). (E) |
| 2 x Top struts (short). (C) | 1 x Pack of fixings. |
| 4 x Feet (F) | |

3. ASSEMBLY

- 3.0 You will need two 10mm spanners in order to prevent the fixings rotating whilst they are being tightened up.
- 3.1 Identify the top struts (B & C) and place them upside down on a flat and level surface as shown in fig.1. The two B struts have a wide top surface with a 1/2" hole at either end to accept the saw mountings. The two C struts have a narrow top surface with no holes and are 1/4" shorter than the B struts.
- 3.2 Using the nuts, bolts and washers provided loosely assemble the four legs (A) to the top struts to form a frame.
- 3.3 Assemble the centre struts (D & E) to the legs to complete the frame as indicated in fig.2. Centre struts E are 1/4" shorter than struts D but are otherwise identical.
- 3.4 Push a foot onto each of the legs and turn the completed frame the right way up.
- 3.5 Remove the existing rubber feet from the underside of the saw and retain the four socket cap bolts. Stand the saw on to the frame and secure it using the four bolts as indicated at (G) in fig.2.
- 3.6 Finally tighten all the fixings on the frame in order to form a solid, stable structure.

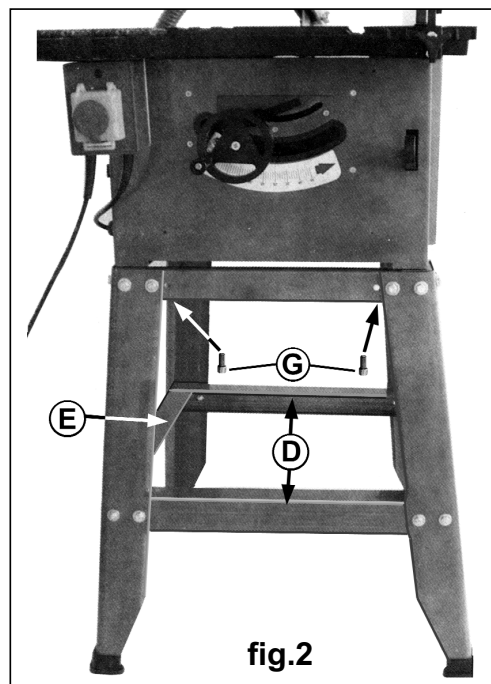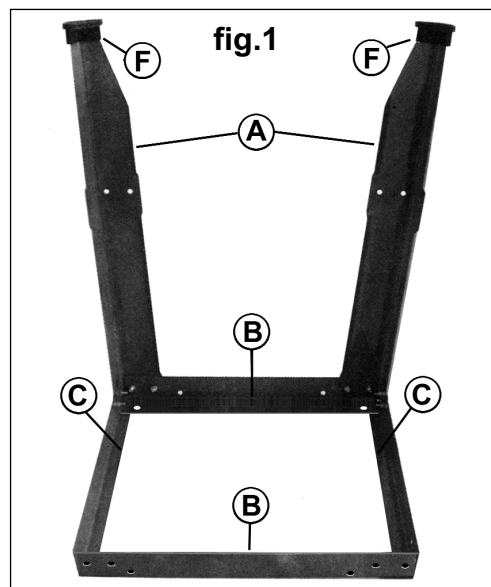

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No responsibility is accepted for incorrect use of this equipment.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your name and address, including postcode.

