

HYDRAULIC BENCH VICE LIFT

MODEL NO: VL01

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



instructions

I. SAFETY

1.1. GENERAL SAFETY

- ✓ Ensure the unit is secured to a suitable workbench prior to use.
- ✓ Only use the unit with a compatible bench vice.
- ✓ Ensure the work area is clean and tidy with adequate lighting.
- ✓ Follow maintenance advise to maintain safety and performance of the unit.
- ✓ Follow general workshop health and safety when operating the unit.
- ✓ Before each use check for visible damage.
- DO NOT use a faulty unit. Contact an authorised service centre for repair.
- DO NOT release the locking handle when the unit/vice is loaded.

2. INTRODUCTION

Hydraulic lift renders any vice up to 20kg almost weightless. Height can be set anywhere in 200mm range and rotated 360°. Locking lever allows for precise positioning.

3. SPECIFICATION

Model No:	VL01
Nett Weight:	12.1kg
Lift Range:	200mm
Fixing Points to Vice:	105-125mm

4. OPERATION

4.1. MOUNTING THE UNIT

Locate the unit on a suitable workbench. Use the bench mounting plate as a guide to mark and drill 3 holes onto the workbench. Secure the unit to the bench with M12 bolts and nuts. Attach a compatible vice (not included) using M12 bolts and nuts.

4.2. RAISING THE UNIT

Release the locking handle to raise and rotate the vice mounting plate to the desired position. Close the locking handle to lock the unit in place.

4.3. LOWERING THE UNIT

Remove any load from the unit and vice. Release the locking handle and push down firmly to lower. Close the locking handle to lock the unit in place.

5. MAINTENANCE

IMPORTANT: maintenance is to be performed when necessary to maintain correct and safe performance. All maintenance must be performed by an authorised service centre. **DO NOT** use a faulty unit. Contact an authorised service centre for repair.

5.1. CLEANING

Keep the unit clean and lubricate all moving parts with oil on a monthly basis. Periodically check the unit for signs of corrosion. Clean exposed areas with a clean oiled cloth.

5.2. HYDRAULIC OIL


After extensive use, the hydraulic oil should be replaced in order to extend the life of your unit. Ensure that no dirt is allowed to enter the hydraulic system. Dispose of waste oil according to local authority regulations. Check your model parts information for spares.

5.3. IN THE EVENT OF AN OIL SPILL

Refer to MSDS. Prevent spilled oil from spreading and, in particular, prevent it from getting into drains and waterways. Use absorbing material such as earth, sand or commercial products.

5.4. STORAGE

Store the unit in a safe, dry, childproof area.

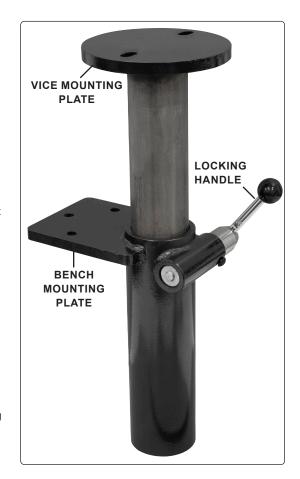



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **Important:** No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk