

1.5L AUXILIARY FUEL TANK

MODEL NO: **VS666**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.









Refer to instruction manual Wear eye protection

Wear protective gloves

Wear safety Wear protective footwear clothing

tive Highly flammable

1. SAFETY

- □ WARNING! DO NOT SMOKE OR USE A NAKED FLAME WHILE USING THIS ITEM. BE AWARE THAT PETROL VAPOUR IS HEAVIER THAN AIR AND FORMS AN EXPLOSIVE MIXTURE.
- U WARNING! Ensure Health & Safety, local authority and general practice regulations are adhered to when using this equipment.
- U WARNING! Always wear approved eye protection and appropriate protective clothing including gloves.
- **× DO NOT** use to store fuel.
- **DO NOT** use the tank for any other purpose than that for which is designed.
- \checkmark Ensure that the working area is well ventilated.
- ✓ Refer to manufacturers data before working on the fuel system.
- ✓ Check that the hose clips are tight before use.
- ✓ Check the condition of the hose before use.
- ✓ Ensure that the hose delivery valve is closed before filling.
- ✓ Fill with the minimum amount of petrol necessary for each engine test.
- ✓ Ensure that the cap is secure.
- ✓ Check the unit for leaks before use.
- ✓ Any fuel spillage should be cleaned up immediately to avoid the risk of accidental ignition.
- ✓ If fuel leakage is noticed at any time, abort the engine test, close the delivery valve and remove the tank to an open area.
- ✓ After use, drain the tank of petrol into an approved container. Leave the cap off and the valve open to allow any fuel residue in the portable fuel tank to evaporate.
- ✓ When dry and clear of vapour: store in a cool, dry, childproof location.
- Familiarise yourself with the extractors application and limitations, as well as the specific potential hazards peculiar to this product.
- ✓ Maintain the extractor in good condition.
- ✓ Replace or repair damaged parts. Use genuine parts only. Non authorised parts will invalidate the warranty.
- ✓ Ensure safety eye protection and protective clothing are worn when using this product.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non slip shoes.
- \checkmark Keep children and unauthorised persons away from the working area.
- \checkmark Dispose of waste liquids in accordance with local authority regulations.
- * DO NOT store fluids in the container. Once used to extract fluid, it must be emptied into an approved receptacle as soon as possible.
- **× DO NOT** dismantle, tamper or adapt the extractor for any purpose other than for which it is designed.
- * DO NOT use the unit if it has been dropped or mishandled, check the unit to ensure there is no damage.
- * **DO NOT** use to store any fluids, ensure unit is cleaned after every use, especially when fuel has passed through the pump. Wash through with a mild detergent and water by drawing the detergent through the pump to remove all pumped liquid.
- ✓ Keep the extractor clean and store in a safe dry location. DO NOT store in areas of high temperature, direct sunlight, rain or snow.

2. CONTENTS

2.1. Refer to parts list for contents.



3. INTRODUCTION

Large 1.5L tank, that gives enough runtime to perform diagnostics. Fuel delivery and return pipe that connects to the low-pressure side of the fuel system. Making it ideal for bypassing the fuel tank when fuel contamination is suspected. Supplied with 10 fuel line connectors, ensuring the VS666 is compatible with most petrol and diesel passenger and light commercial vehicles. It can also be used for motorcycle maintenance eliminating the need to balance the fuel tank in an awkward positions.

4. SPECIFICATION

Model No	VS666
Tank Size	1.5L
Supply/Return Hose Length	1m

5. OPERATION

Securely attach the correct adaptor to the low-pressure circuit and ensure the tank is firmly in place during use. Afterward, clean it thoroughly with warm soapy water, then allow it to dry completely before using again.

6. MAINTENANCE

6.1. Ensure unit is empty and cleaned by passing a mild detergent and water through it after every use and allowing to dry before storage. Dispose of detergent in accordance with local authority regulations.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 24 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk

Original Language Version